



ANDROID

USER MANUAL



○ For your safety, please do not watching video or operating the units during the driving ; please adjusting the voice volume advisably. Please read this manual carefully before using it, learning related warning signal or notices in the manual, and keep it carefully for reference in any time.

1. Please pay attention to traffic safety.
2. Please parking your car for using it if you have problem by operation it while driving.
3. Please do not allow children to using it , so as not to cause human hurt or units damage.
4. Please do not use it in the place which electronic devices are forbidden to using,such as gas station,wine factory,Battery strong interference areas,otherwise may cause of dangerous.
5. Please obey the traffic rules when using GPS for navigation.
6. Mantaining , repairing and installation by yourself is not advised, please asking professional people to do that.During the units power on,please do not do any installation or repairing it, installation and repairing by electronic knowledge and car accessories installation untrained staff may cause dangerous.

7. Do not store or install this machine in direct sunlight,and do not place it in other harmful substances environment.

8. In order to ensure the normal operation of the machine to prevent the occurrence of fire or electric shock, please do not expose the machine to the damp environment, not to spill the liquid on the machine.ase don't expose machine in damp air, more can't liquid drying machine.

○ **Warning & Tips:**



In order to emphasize some of the important information in the manual, special attention should be paid to this mark, it means some important warnings or tips.

PS : Due to the continuous improvement of product updates, this manual is for reference only.

○ Safety precautions

Please read all instructions before installation and recommend installation by a qualified car audio installer.



This machine is suitable for car 12V power system only(GND must connected),please do not use it 24V cars or trucks,otherwise may cause the machine damage.



In the absence of professional guidance, please do not secretly replace the power fuse, improper use of the fuse will cause damage to the machine or cause fire.



In order to avoid violation of traffic rules, the driver may not watch the program or operate the machine while driving in order to avoid unnecessary traffic accidents.



For safety and to ensure the normal use of the machine, please install by professional, do not disassemble or repair the machine by yourself, so as to avoid damage to the machine and safety accidents. For details, please consult with local professionals.



Please prevent the product in a humid environment or water, so as to avoid short-circuit caused by electric shock, or other unnecessary damage and the occurrence of fire.

- **Warning:** In order to prevent short circuit, please remember to turn off the car before the installation and disconnect the ACC and B + connection


○ Reset the device

1. The machine must be reset after using the system for the first time or after replacing the car battery.
2. When the machine function is not normal, please reset the machine.
3. Click Factory default Settings in the system setup interface to make the unit in the factory initial state.
4. Press RESET button in the panel to make the unit in the factory initial state.




○ Warning:


System initialization will lose the previous time and setting numbers.

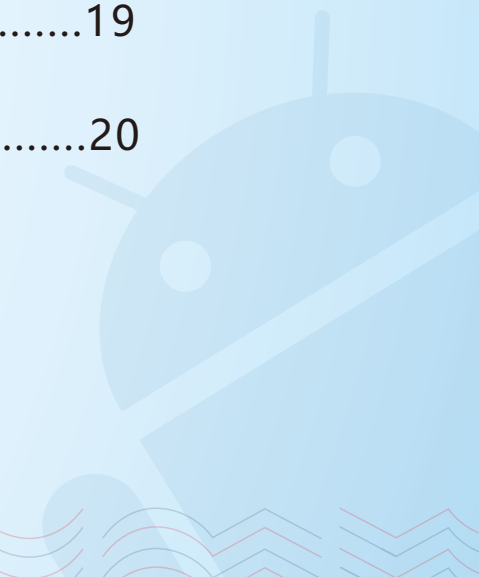Main menu.....	01	Bluetooth.....	09	introduction ... screenshots.....	16
Application interface.....	04	Document management.....	11	rotary knobintroduction.....	17
System settings(1).....	05	GPS map.....	12	Function parameter.....	18
System settings (2)	06	Settings.....	15	Frequently Asked Questions.....	19
System settings(3).....	07			Maintenance.....	20
Multimedia.....	08				




1、Main menu

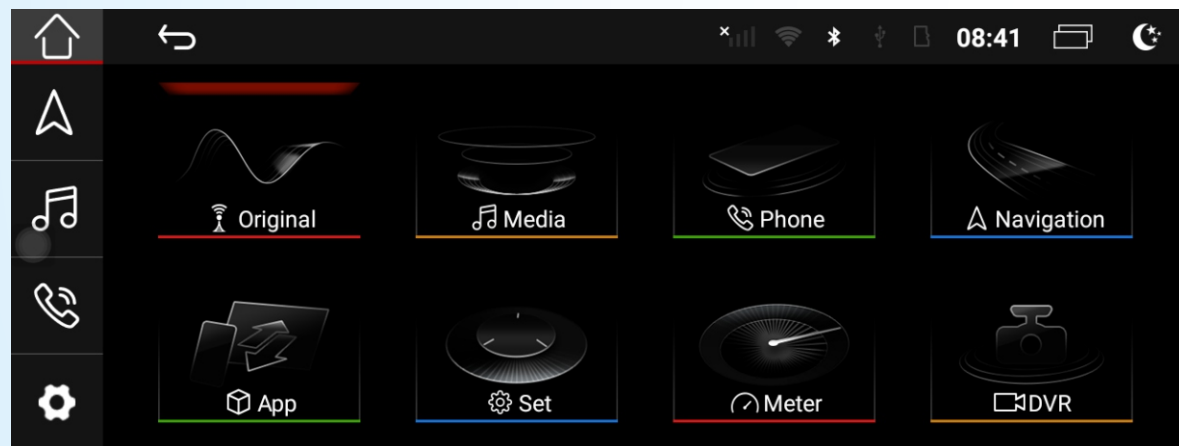

After the machine is turned on, first enter the main menu and click on any interface  icon, Can return directly to the main interface; Click  icon Can return to the previous interface; Click  icon The screen can be turned off. As shown below:


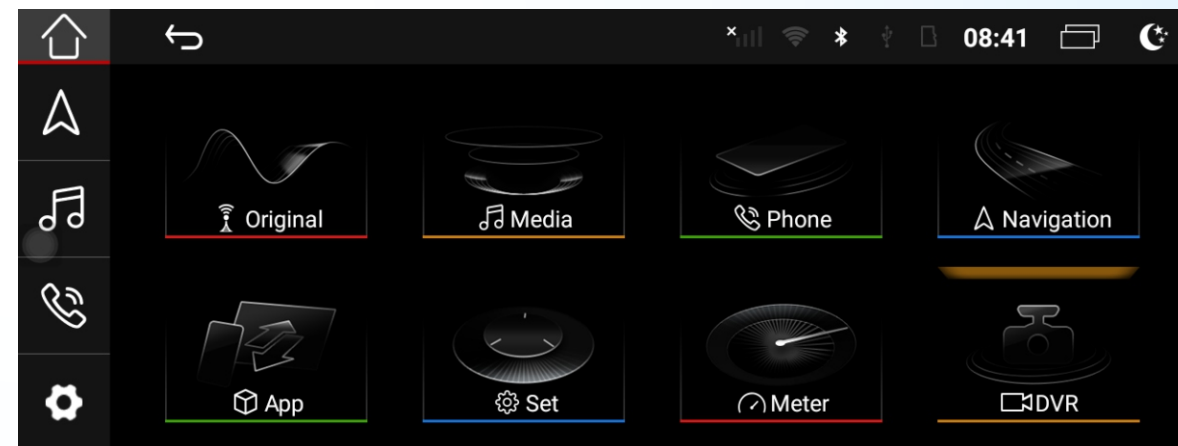


Main menu




Main menu

Click the  icon in the upper right corner, will display the running application. You can click the  icon in the upper right corner of the menu or select the application and slide to the right to close the running application. Swipe down for the application, at the top of running application, click "Clear All" in the upper right corner to clear all background applications.

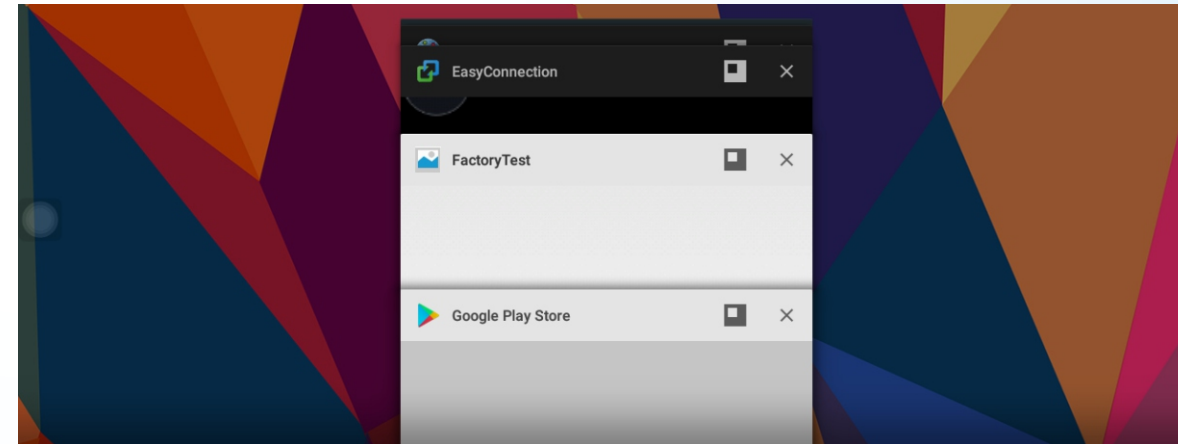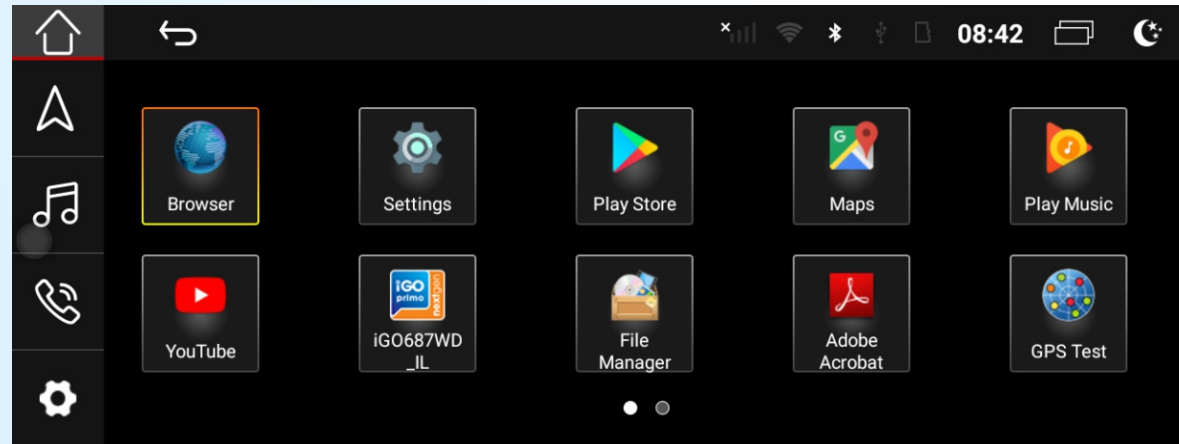



long press the screen and swipe to the left, running application can be displayed in split screens:

Note : need the application itself to support split screen can be used

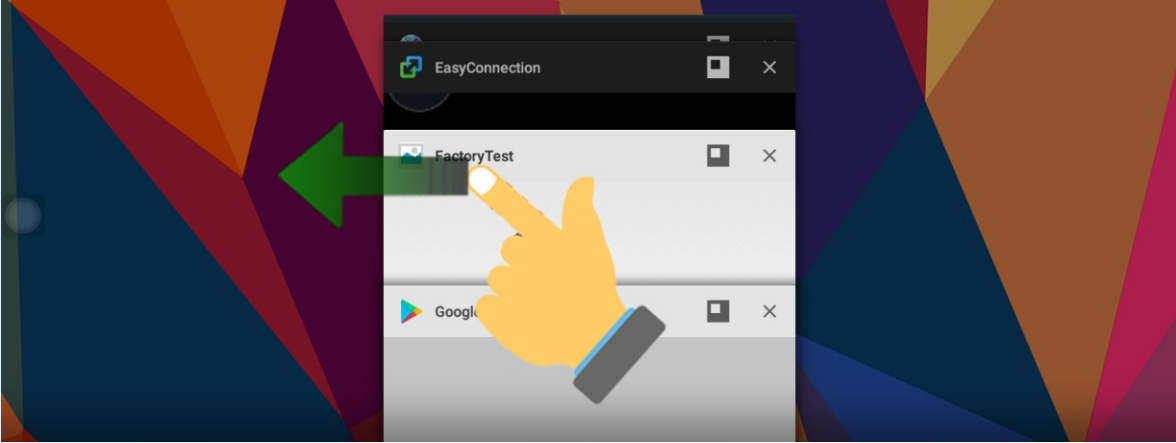


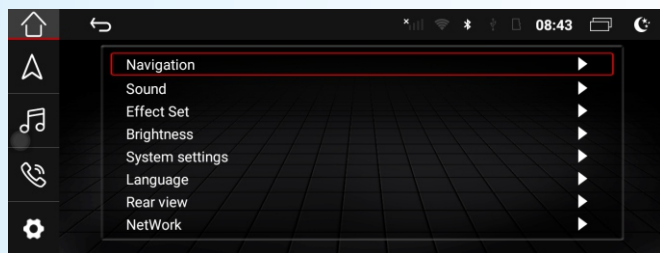
2、Application interface

You can download apps from Play Store when the system is connected to the internet through Wi-Fi.

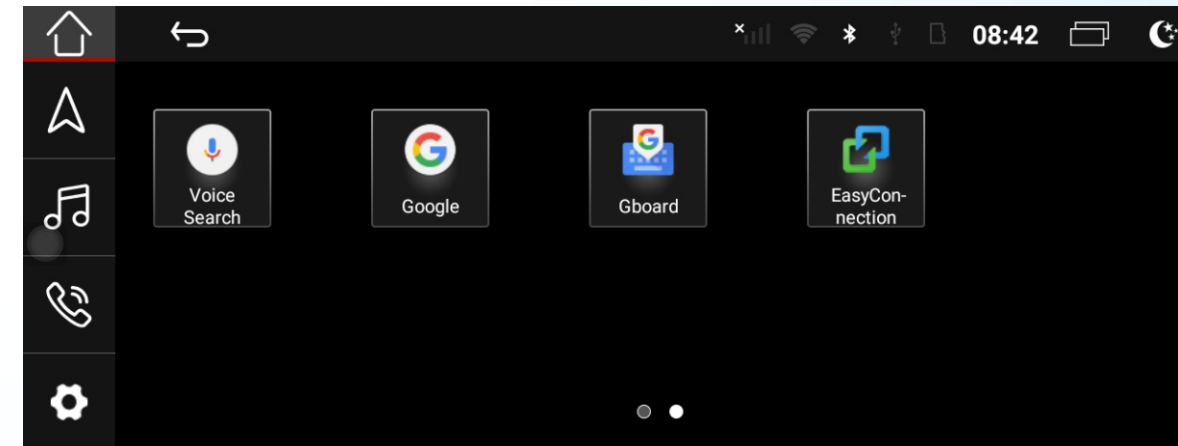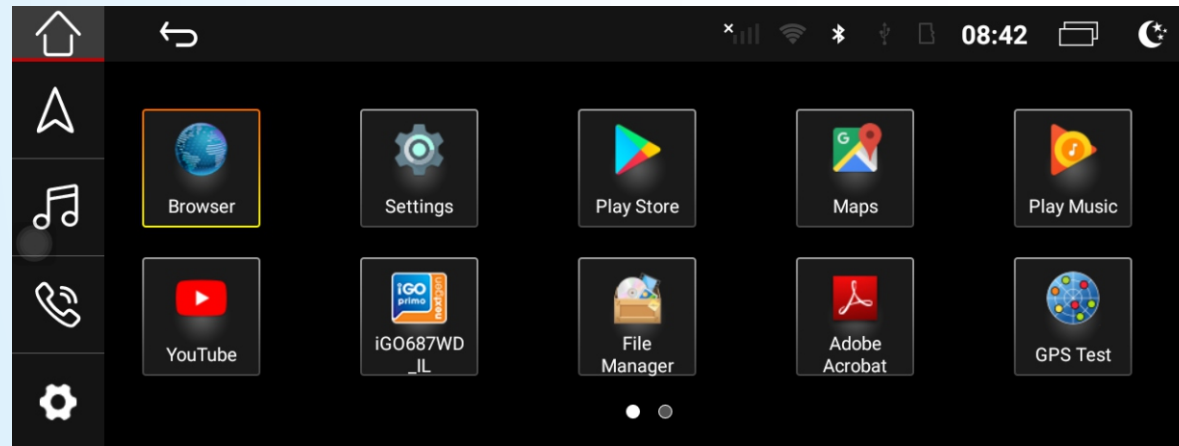

3、System settings(1)


In the main menu interface, click  to enter the system setting interface . The system settings include Navigation,sound,Brightness,System,Language,Rearview,Network,SystemInfo,Effect. Clicking on the screen "Navigation Settings" will link to the navigation function window , and so on, as shown below:




① Navigation settings




● Navigation settings

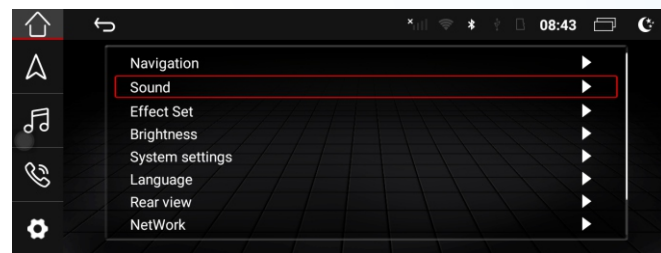

② Sound settings

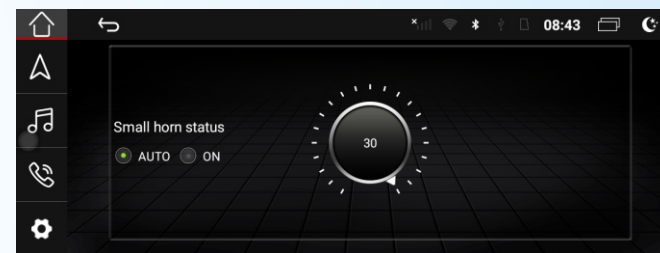


● Sound settings

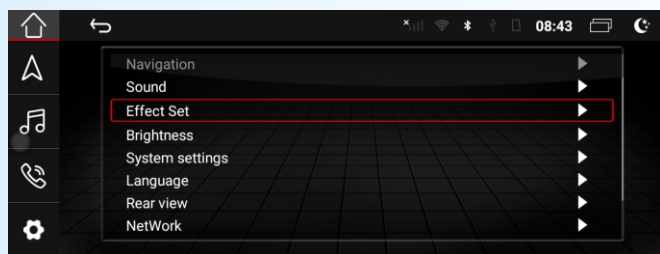


③ Effect settings



● Effect settings

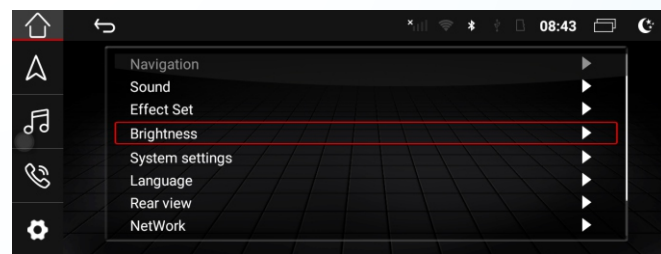


④ Brightness settings

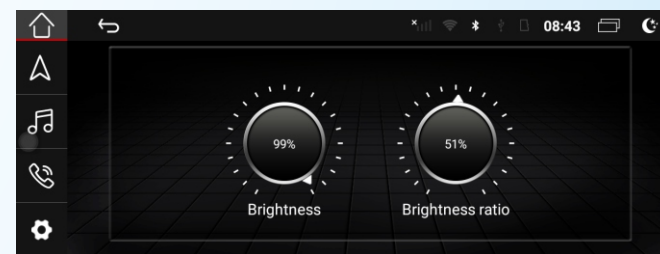


● Brightness settings


3、System settings(2)

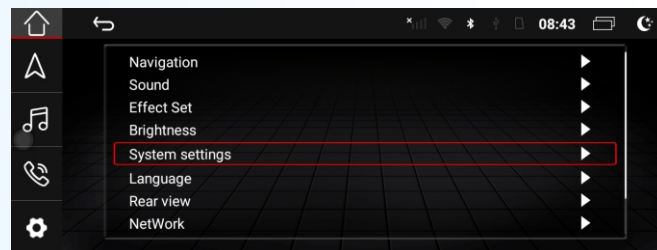


5 System settings

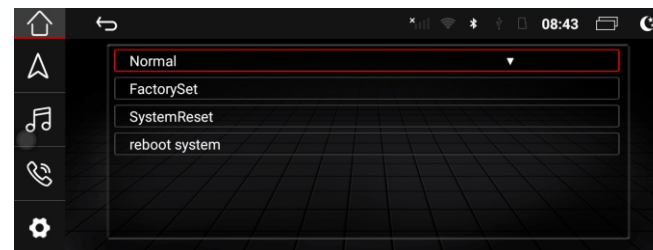


System settings

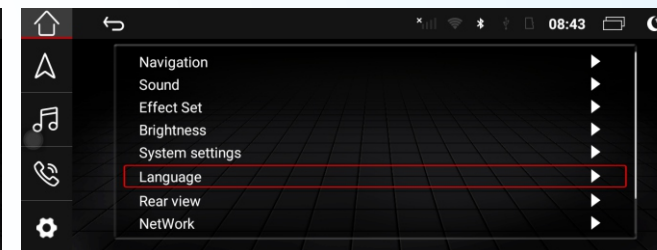


6 Language settings

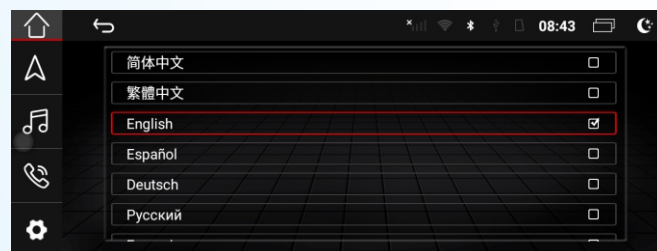

Language settings

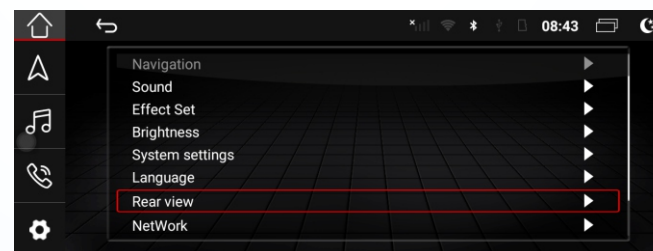


7 Rearview settings

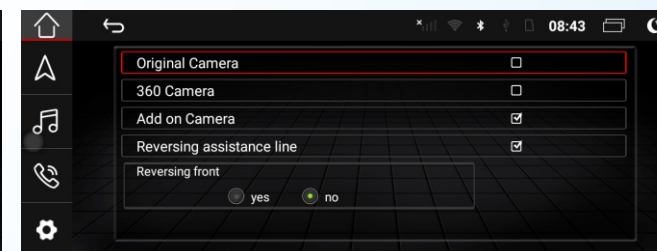


Rearview settings


3、System settings(3)

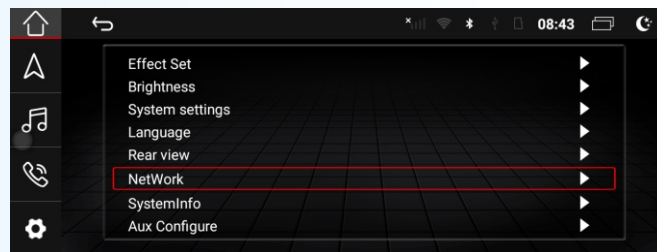


8 Network settings

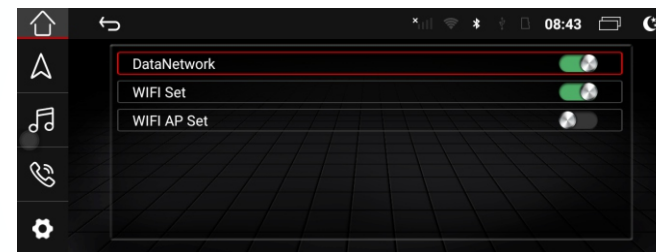


9 Network settings

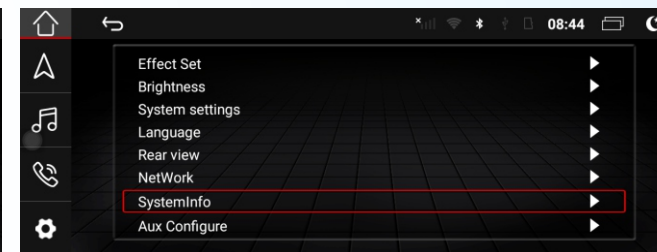


9 SystemInfo

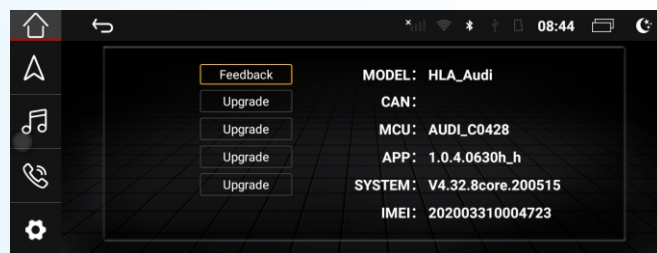

10 SystemInfo

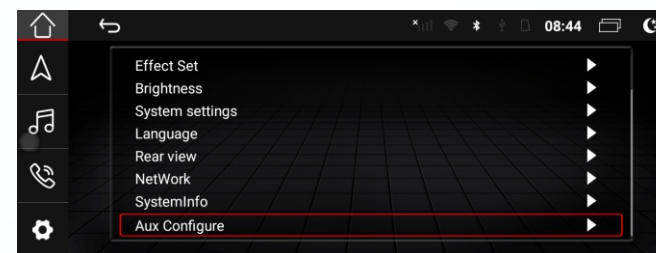


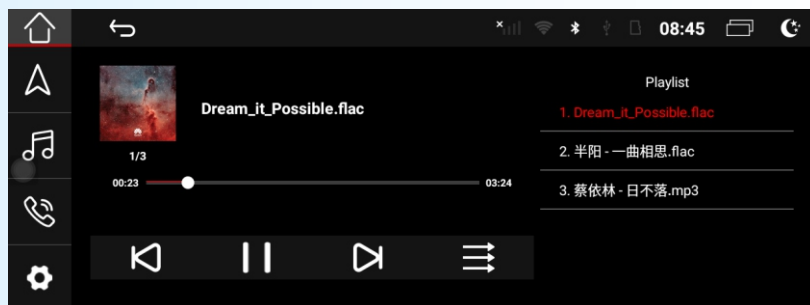
10 Aux Confgure

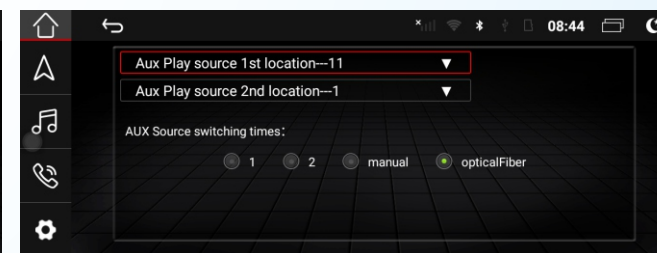

10 Aux Confgure

4. Multimedia

Click  on the main menu interface to enter the multimedia interface, click the  icon to return directly to the main interface, and click the  icon to return to the previous interface.



1. Click on each function link in the interface to enter the associated Function use.




2. Video playback


3. Stop playing progress 

4. Previous channel , Pause video , Play video , Next channel 



5. Click this button  Can zoom in or out on the screen where the video is played

 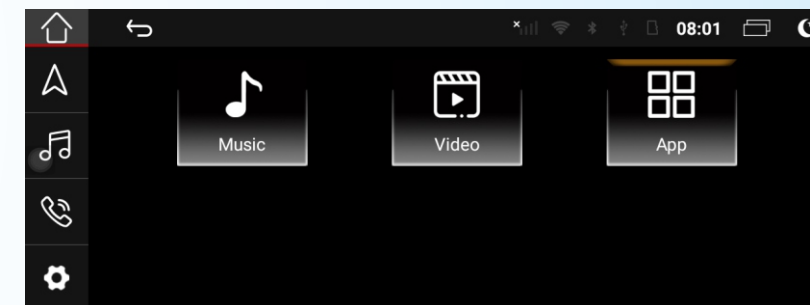
6. Click this button  Can view a list of video files

 



 
 





7. Click the  icon to enter the application interface

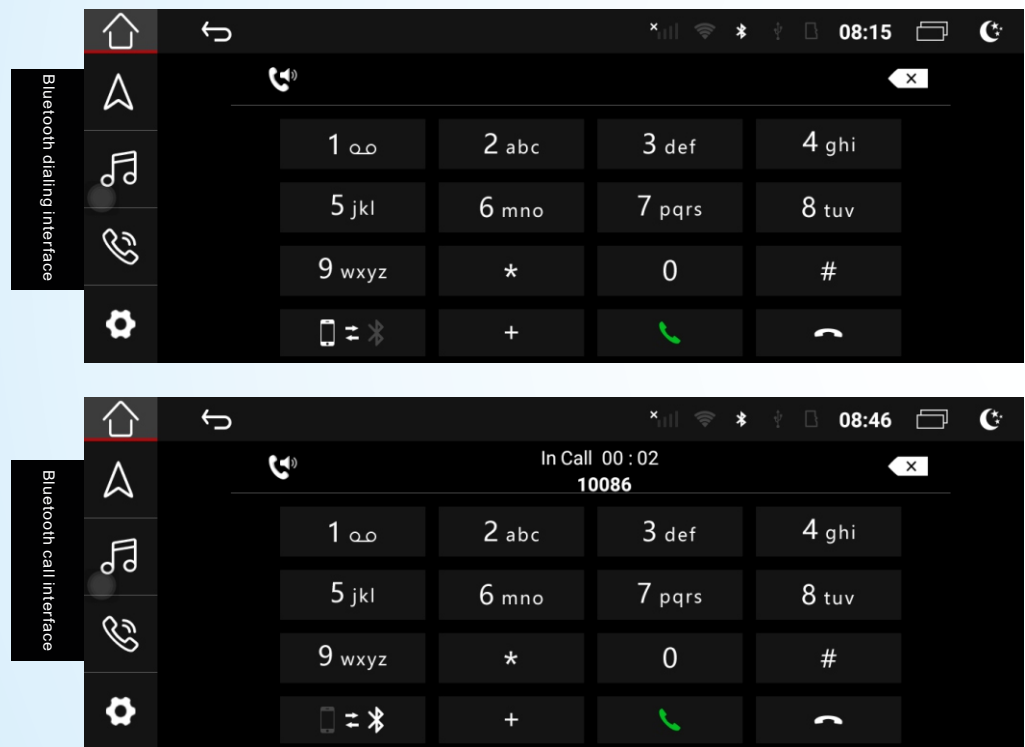


5、Bluetooth


The main menu interface clicks “Phone” to enter the application interface, and the Bluetooth and mobile phone can be connected, If the Bluetooth is not connected, the gray status is  displayed, and when the Bluetooth connection is successful, the white status is  displayed. As shown below:




-  Answer/dial button
-  Click to pair mobile phone Bluetooth
-  Click to disconnect Bluetooth
-  Dial delete button
-  Query call history
-  Find phone contacts
-  Hang up button
-  Switch button, voice switch between mobile phone and car phone call voice during Bluetooth call
-  Through Bluetooth music, you can play mobile songs in the car

In the main menu, click “Media” to enter the Bluetooth music interface, click “Bluetooth Music” to play.


- 1)、  Bluetooth music playback / pause button
- 2)、  Bluetooth music on a song
- 3)、  Bluetooth music next song playback

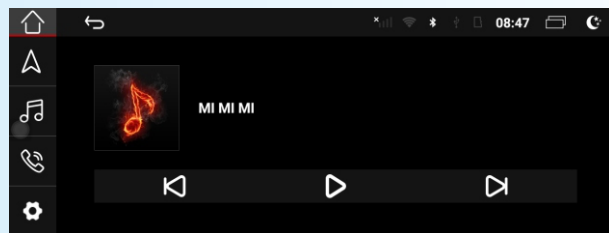

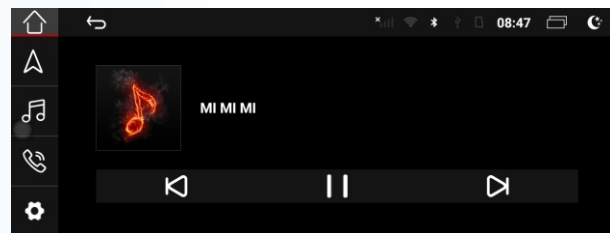


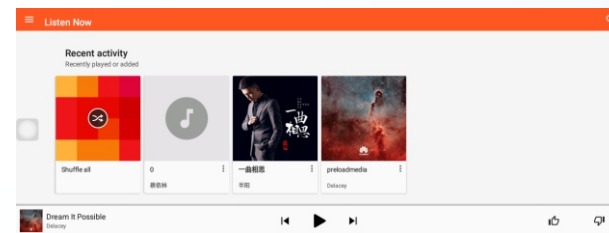
Bluetooth music interface




Bluetooth music has opened the play interface

Click “Media” in the main menu to enter the music interface, click  to play.

- 1)、  Music playback / pause button
- 2)、  Music on a song
- 3)、  Music next song play





Music interface

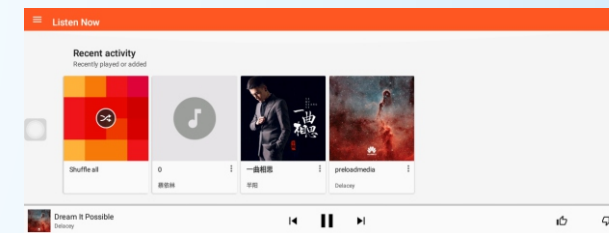




Music has opened the play interface

6. Document management

 Click "Application" on the main menu interface, find the "File Management"  icon to enter, file management can copy the contents of the local memory to the host memory.

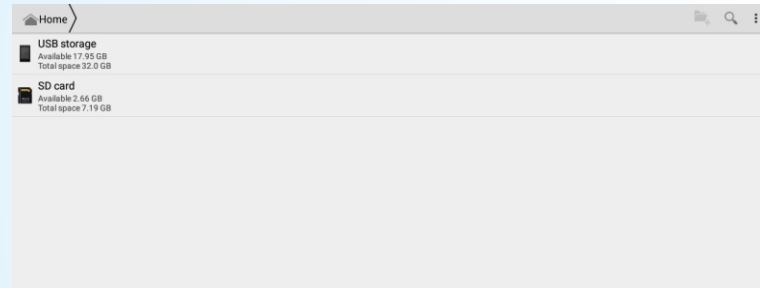

new folder search for Select a file or folder
Show hidden files
Sort

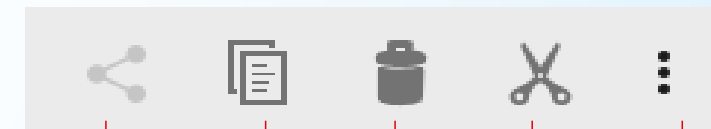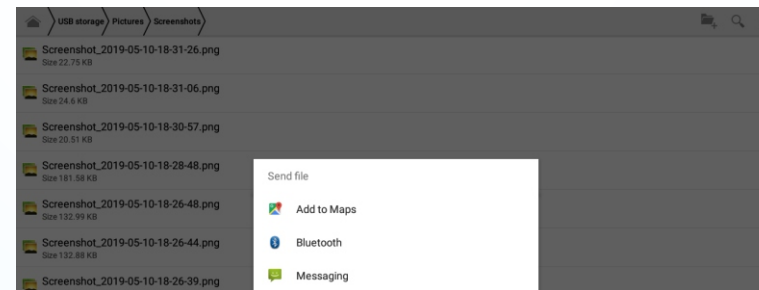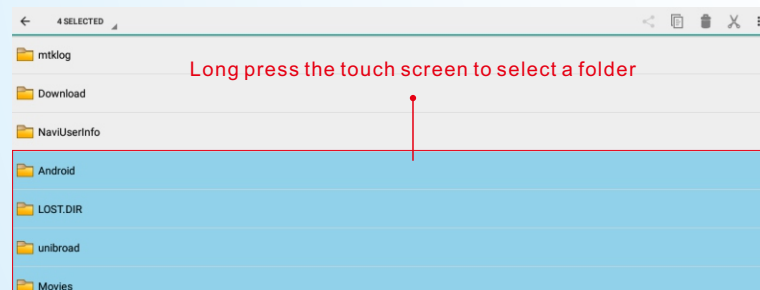


 

Send File copy and paste delete Cutting Rename
View details


7、GPS map

Click the main menu to enter the system settings interface, click on the navigation settings to install, after installation, please refer to the GPS operation instructions for GPS operation.




10、Settings

Click  in the main interface to enter the application, click the  icon again to enter the setting interface, Including wireless and network, device, personal, system and other functions, if you want to exit this interface, click  will popup 4icons as shown in figure ②. From up to down means: return to the main interface, return to the previous interface, enter the background operation interface And multi-function interface. As shown below:

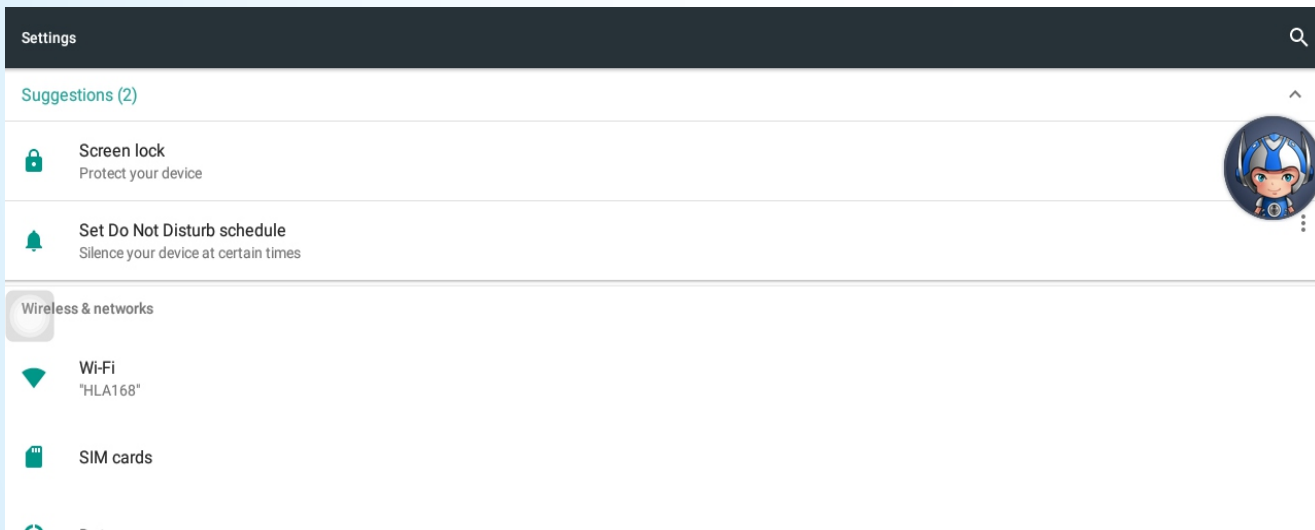



①

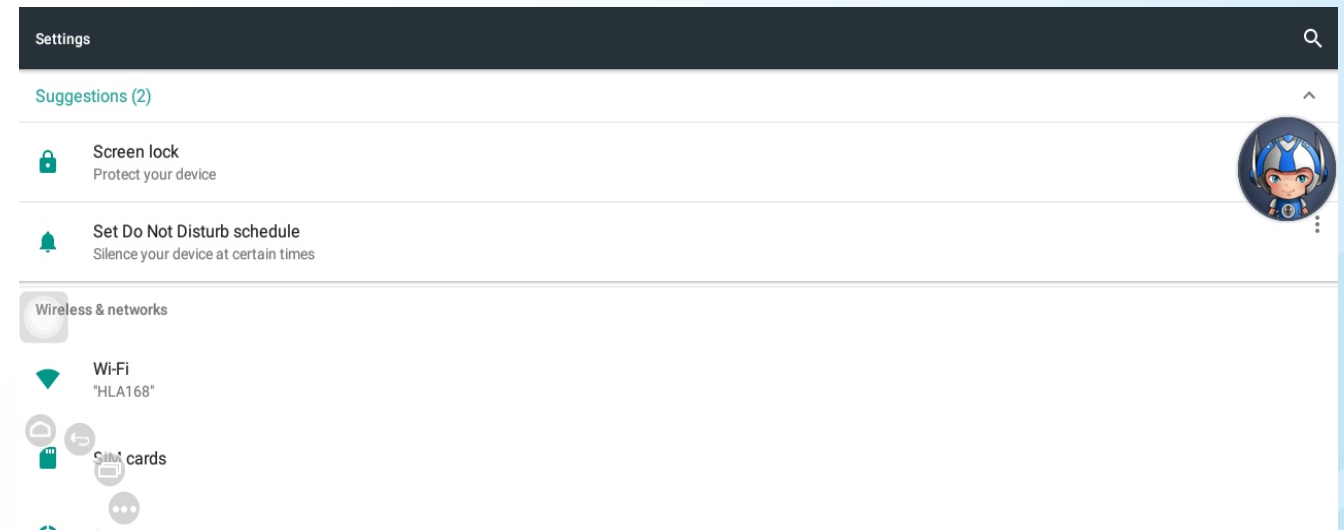

②

12、 introduction to the use of screenshots

In the interface that requires screenshots The three fingers slide from top to bottom to take a screenshot, and the image is automatically saved into the file management (Pictures). As shown below:

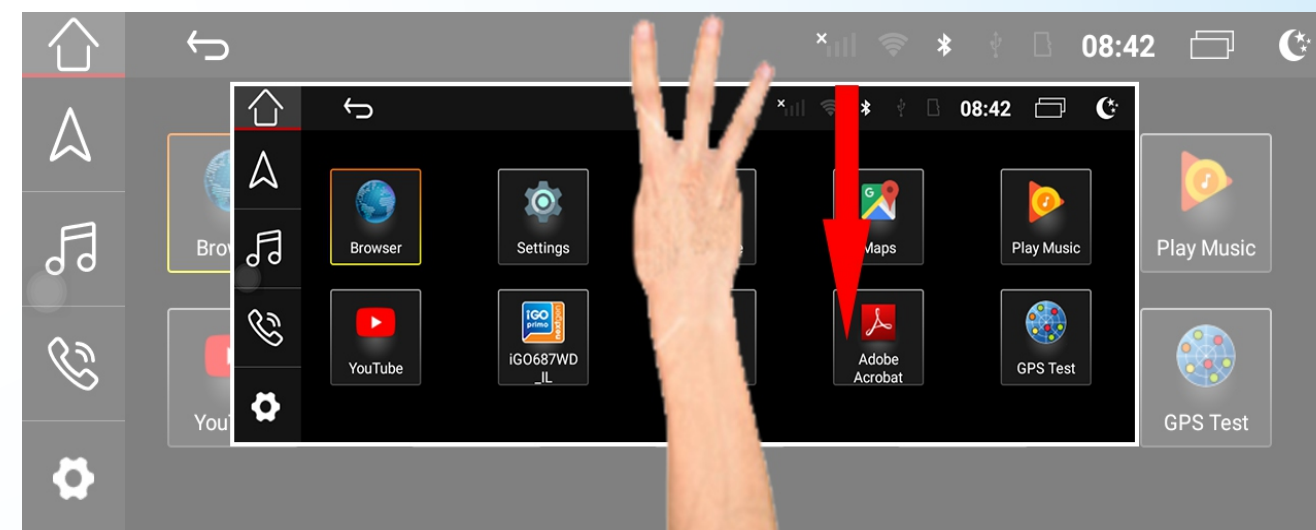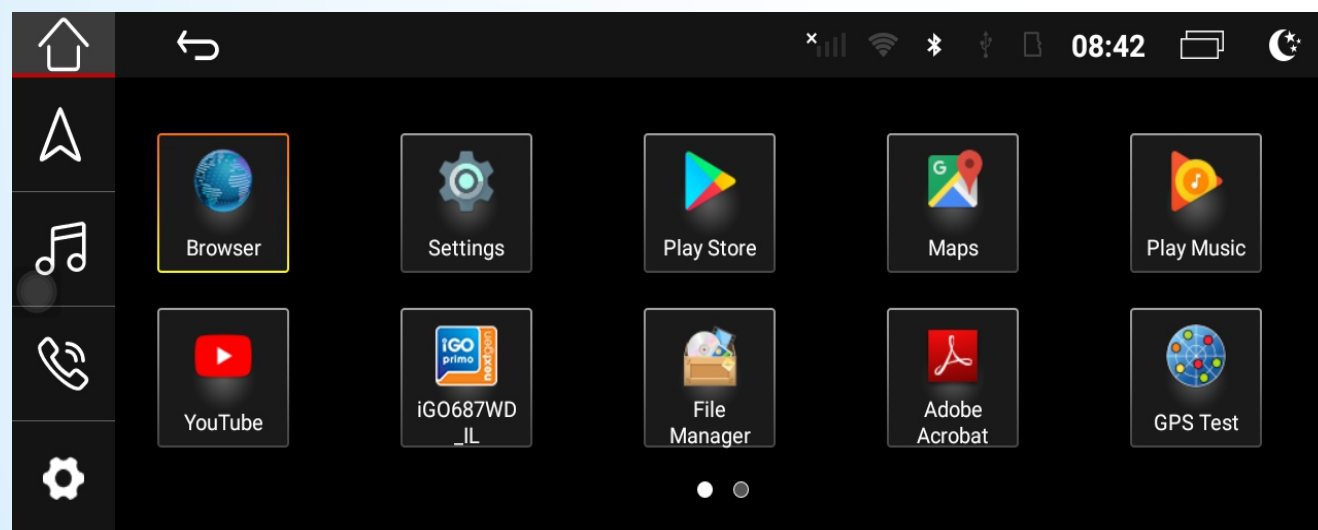

13、Rotary knob operation introduction

figure (1) is function introduction of the keys around the Idrive knob, can operate the function you want. Figure (2) is idrive knob. Rotate it left and right or push the knob forward/ back/ left/ right to choose. Then click the center area to confirm the selection. As shown in the figure below:

Figure①



Figure②



specification
Working voltage: DC 12V
Operating voltage range: 9V-15.5V
Maximum working current: 15A

Video part
System: NTSC, PAL (automatic identification)
Output: 1VP-P (75 ohms)
Input: 1VP-P (75 ohms)

Display section
Screen type: Original car display
Resolution: 1920 (H) × 3 (RGB) × 720(V)

Ambient temperature
Working temperature: -20℃ +60℃
Storage temperature: -30℃ +70℃
Working humidity: 45%-80% (relative humidity)
Preservation humidity: 30-90% (relative humidity)



1. Problem: The machine does not boot
Reason: no car bus
Solution: Properly configure the car bus

2. Problem: Cannot enter GPS navigation
Reason: The GPS navigation path is not set correctly.
Solution: Reset the GPS navigation path

3. Problem: No Bluetooth
Reason: not connected to the phone
Solution: Enter the Bluetooth settings and check the machine name and password.

4. Problem : Touch screen failure
Reason: touch screen bias
Solution: Recalibrate the touch display

5. Problem: Speaker failure
Cause: Audio settings are incorrect
Workaround: Set the audio correctly

6. Problem: No navigation signal
Cause: No navigation antenna is embedded or GPS antenna is not set correctly
Solution: Correctly embed the GPS antenna

7. Problem: GPS cannot be located
Cause: The GPS signal is poor, or the GPS antenna is poorly connected.
Solution: Move the location or replace the GPS antenna or re-plug the antenna



▲ Car entertainment navigation systems are products with excellent design and craftsmanship and should be used with care. The following recommendations will help you fulfill your obligations under the warranty and extend the life of your car's entertainment navigation system.

- 1. Keep the car entertainment navigation system and all its parts and accessories out of reach of children.
- 2. Please keep it dry. rainwater. Moisture and various liquids or moisture may contain minerals that can corrode electronic circuits. If the machine comes into contact with water or if it is immersed in water, it will damage the parts and cause irreparable damage.
- 3. Do not use or store the machine in dusty or dirty areas. This will damage its detachable parts.
- 4. Do not place the machine in an overheated place. High temperatures can shorten the life of electronic devices, destroy batteries, and deform or melt some plastic parts.
- 5. Do not place the machine in a cold place. Otherwise, when the temperature of the machine rises or reaches normal temperature, moisture will form inside the machine, which will destroy the board.
- 6. Do not knock or shake the machine. Rough handling of the machine will destroy the machine.
- 7. Do not attempt to disassemble the machine. Non-professional handling of the machine can damage the machine.
- 8. Do not use harsh chemicals, detergents or strong detergents to clear the machine.
- 9. Keep away from electromagnetic, radioactive or magnetic fields when using or storing the machine.
- 10. Wipe the screen with a soft, clean cloth. Do not use plain paper to wipe the screen.