



- 1. Earpiece
- 2. Left Soft Key (Message)
- 3. Speakerphone Key
- Send Key
 Voicemail Key
- Shift Key
- 7. Micro USB Charging Port
- 8. Lock Key

- 9. Vibrate Mode/Space Key
- 10. Power/End Key 11. Clear & Back/
- Clear & Back/ Voice Command/ Voice Memo Key
- 12. Right Soft Key (Contacts)
- 13. Directional Key*
- 14. Menu/OK Key

- 15. microSD™ Memory Slot
- 16. Headset Jack
- 17. Speaker
- 18. Camera Lens
- 19. Volume Up/Down Keys
- 20. Camera Key



- Function/Favorites Shortcut Key
- 2. Text Message/Shift Key
- Vibrate Mode Key
- 4. Voice Command/ Voice Memo/Text to Speech Key
- 5. Space/Social Networks Key
- 6. Directional Keys
- 7. Menu/OK Key
- 8. Enter Key
- 9. Clear & Back Key
- 10. Right Soft Key (Contacts)

11. Left Soft Key (Message)

Update your status and upload pictures via the Social Networks feature on LG Cosmos! Stay in touch with friends and family, and keep everyone updated on events as they happen!

Update Status

- With the slide open and from the Quick Menu, select Social Networks.
- 2. Highlight a social network and press .
- 3. Select **Status Update (1)**, enter a message with the QWERTY keyboard, and press .*

Upload a Picture

- With the slide open and from the Quick Menu, select Social Networks.
- 2. Highlight a social network and press .
- 3. Select **Picture Upload (2)**, highlight the image you wish to upload, and press .*







*If this is the first time you have updated your status or uploaded a picture, you will then receive a text message with instructions on how to link your phone to your social network for future updates and uploads.

LG Cosmos features a handy Favorites function. Add up to 10 favorites for quick and easy messaging to your most used contacts.

- With the slide open and from the Quick Menu, select Favorites.
- 2. Press of for Add.
- 3. Press ox to select Contacts (1).
- 4. Press or to mark a highlighted contact.
- 5. Press the **Left Soft Key** for **Done**.







By default, when you open the slide on your LG Cosmos, the Quick Menu appears. This menu gives you access to text messaging, your favorites, and social networking.

- Open the slide on your LG Cosmos. The Quick Menu should appear.*
 - Select Messaging to begin a new text message or to access your voicemail, mobile IM, email, and more.
 - Select Favorites to access your favorites or to add a new favorite. For more information on adding a favorite, see the Adding Favorite Contacts panel on this Quick Start Guide.
 - Select Social Networks to access various social networks, such as Facebook[®], MySpace[™], and Twitter[™]. You may also add additional social networks by pressing the Left Soft Key for New.









^{*}You may enable or disable this menu under Settings & Tools (9) > Phone Settings (8) > Set Shortcuts (2) > Set Slide Open View (4).

Enjoy the convenience of hands-free communication with *Bluetooth* wireless technology on your LG Cosmos!

- Before you begin, place the Bluetooth device into pairing mode.* From standby mode and with the slide closed, press for Menu.
- 2. Select Settings & Tools (9).
- 3. Press the 4 Key for Bluetooth Menu (4).
- 4. Press or to select Add New Device (1).
- 5. Press on to search for the device.
- 6. Select your device from the results by pressing 🔊
- 7. Press of for Yes to connect to the device.

BLUETOOTH MENU

1. Add New Device



*Refer to your *Bluetooth* accessory's user guide for information about initiating pairing mode and the passcode, if asked (typically "0000").

Note: Bluetooth accessories sold separately.



Bluetooth Headset (HBM-210)



Bluetooth Headset (HBM-570 - Silver)



Bluetooth Headset (HBM-570 – Dark Blue, Pink, and Purple)



Bluetooth Solar Speakerphone (HFB-500)



Vehicle Power Charger

Accessories for convenience and fashion are available at www.VerizonWireless.com.

All materials in this guide including, without limitation, the design, the text, and any marks are the property of LG Electronics, Inc. Copyright @ 2010 LG Electronics, Inc. ALL RIGHTS RESERVED. LG is a registered trademark of LG Electronics, Inc. CosmosTM is a trademark of Verizno Wireless. Features and specifications are subject to change without prior notice. The use of non-LG approved accessories will void the warranty and may result in damage to the phone, the phone exploding, or other danagerous conditions. microSDTM is a trademark of SanDisk. The Bluetooth* word mark and logos are registered trademark of the phone explosed by use of size in marked by LG Electronics. So the phone explosed the phone explosed in the phone explosed in the phone explosed in the phone explosing or marked by LG Electronics. On the phone explosing the phone explosion of the phone explosion

