


MODEL 207.4, 209.4

Illustrated on model 209

- 1 Rivet
- 2 Inner headliner
- 3 Rubber lip
- 4 Soft top catch mounting plate
- 5 Rubber lip
- 6 Roof bow

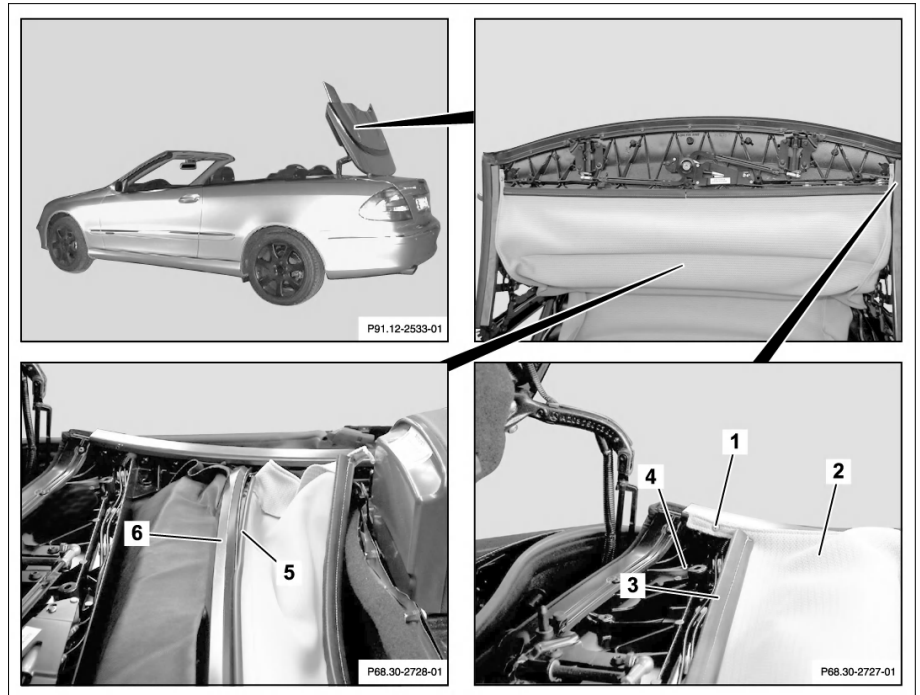


P68.30-2729-06



P68.30-2959-09

Illustrated on model 209


- 7 Rivet
- 8 Tensioning strap
- 9 Tensioning strap mount
- 10 Roof bow
- 11 Rivet
- 12 3rd roof bow
- 13 Rubber tensioning strap

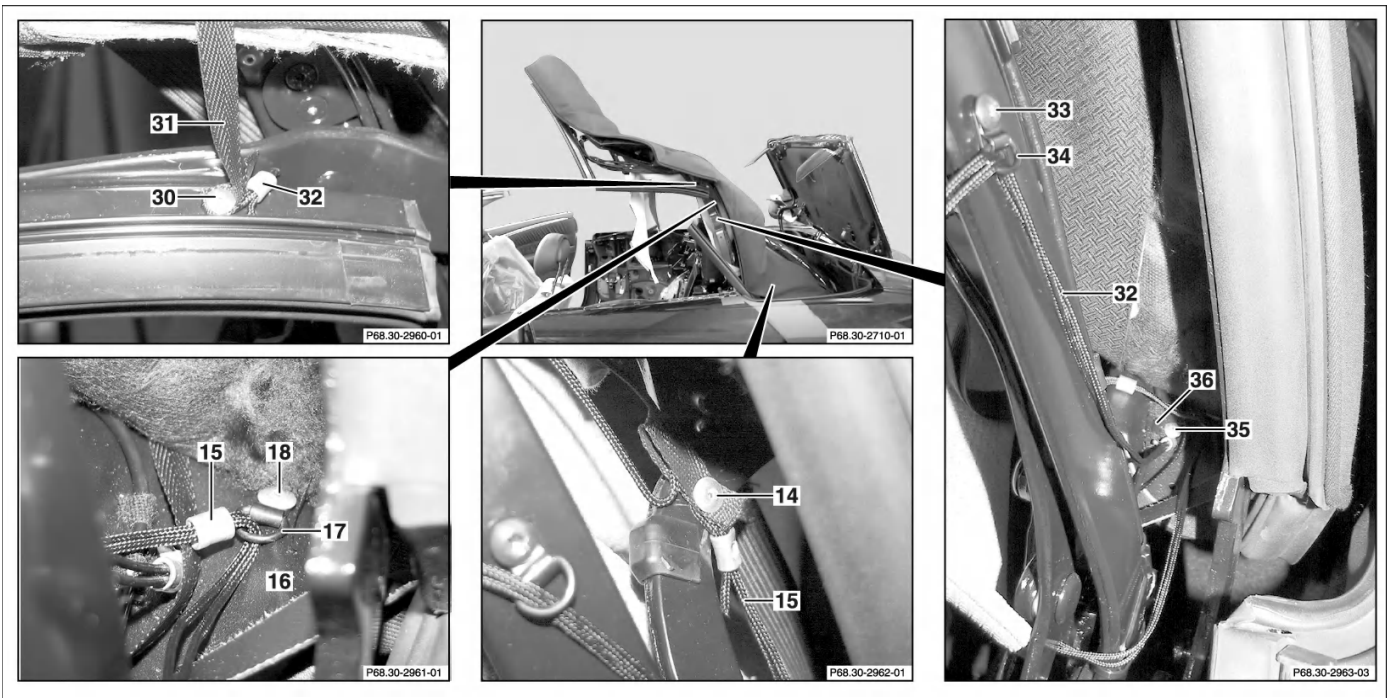

P68.30-2964-09

Illustrated on model 209

- | | | |
|------------------|---------------------|------------|
| 14 Rivet | 18 Rivet | 33 Screw |
| 15 Tension cable | 30 Rivet | 34 Eyelet |
| 16 Soft top bow | 31 Tensioning strap | 35 Rivet |
| 17 Eyelet | 32 Tension cable | 36 Bracket |

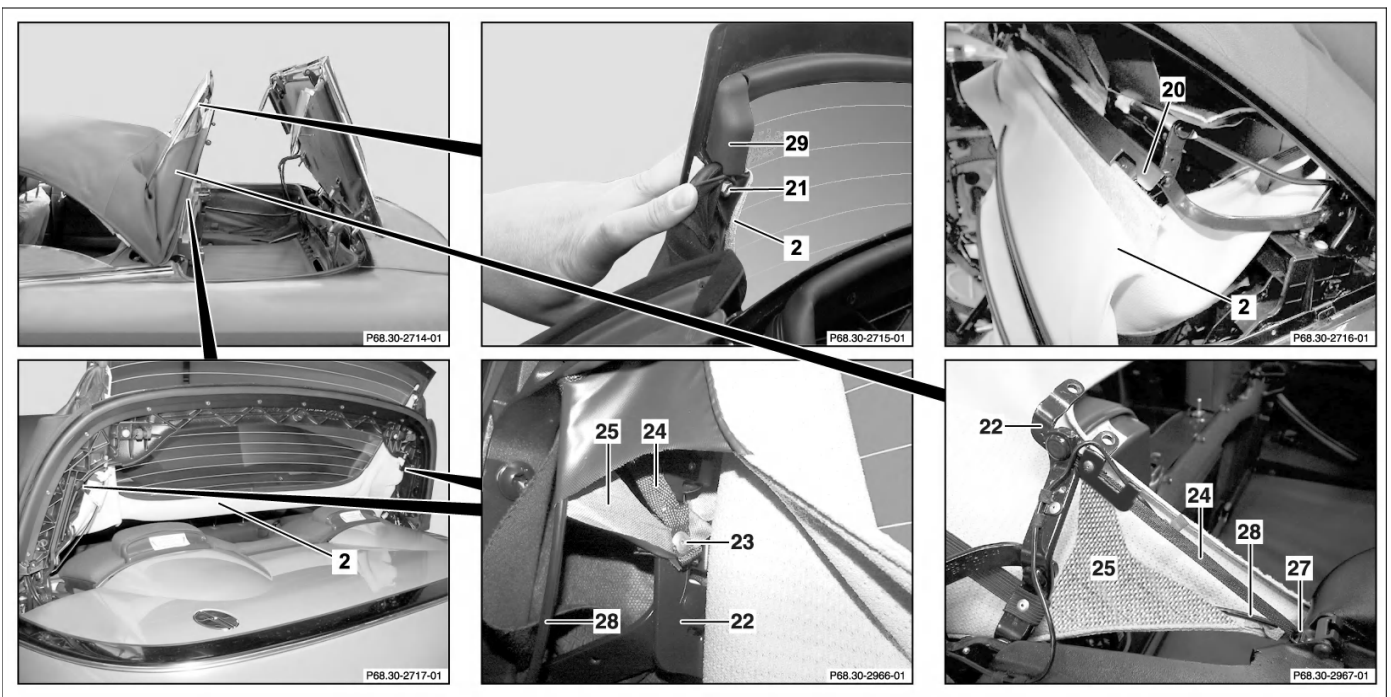


P68.30-2969-09

Illustrated on model 209

- | | | |
|-------------------|-----------------------------|----------------------|
| 2 Inner headliner | 23 Rivet | 28 Cross strut |
| 20 Roof bow | 24 Textile tensioning strap | 29 Rear window frame |
| 21 Nut | 25 Tensioning strap | |
| 22 Mounting hinge | 27 Eyelet | |



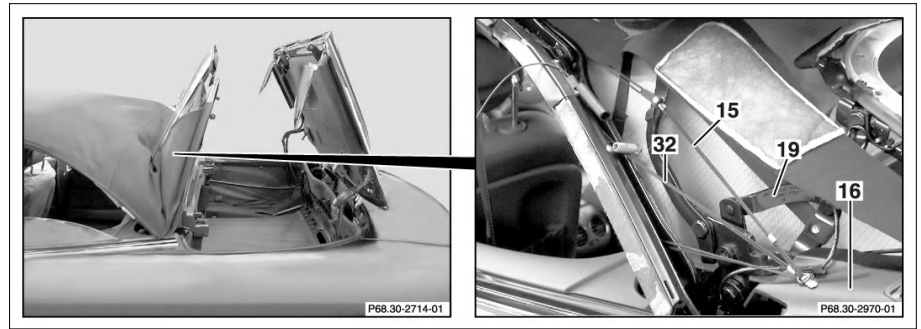

Illustrated on model 209

- 15 Tension cable
- 16 Soft top bow
- 19 Convertible soft top linkage
- 32 Tension cable



P68.30-2971-04

Danger !	Risk of injury. Moving parts can pinch, crush or, in extreme cases even sever extremities.	No parts of the body or limbs should be within the operating range of the mechanism when moving components.	AS00.00-Z-0009-01A
Danger !	Risk of injury when performing check and repair work in area of roll bar	Before working in the area of roll bar, completely extend rear head restraints. Keep body parts out of the area where the roll bar extends.	AS91.00-Z-0003-01A
Danger !	Risk of injury when performing check and repair work in area of roll bar	Before working in the area of the roll bar, pull out rear head restraints by hand. Keep body parts out of area where roll bar extends.	AS91.00-Z-0003-01QA
	Remove		
1	Remove paneling from soft top at front		AR68.30-P-4320QA
2	Knock off rivet (1) on left and right	MODEL 207.4### ## up to 205475, 209.4 Tension strap for insulation is fastened together with inner headliner (2) with rivet (1). Remove remaining rivet (1).	
3	Pull inner headliner (2) with rubber lip (3) off of soft top catch mounting plate (4)		
4	Move soft top to intermediate position	See figure.	
5	Pull rubber lip (5) off of roof bow (6)		
6	Pull rubber lip off of roof bow (10)		
7	Remove rubber lip from 3rd roof bow (12)		
8	Knock off rivet (7)	Remove remaining rivet (7).	
9	Take off tensioning strap (8)		
10	Extend tensioning strap mount (9) out of roof bow (10)		
11	Knock rivet (11) off of 3rd roof bow (12)		
12	Remove rubber tensioning strap (13)	Remove remaining rivet (11).	
13	Knock off rivet (14)		
14	Remove tension cable (15)	Remove remaining rivet (14).	
15	Knock off rivet (18) on soft top bow (16)		
16	Remove tension cable (15) with eye (17)	Remove remaining rivet (18).	
17	Knock off rivet (30)		
18	Take off tensioning strap (31)	Remove remaining rivet (30).	
19	Remove tension cable (32)	Not on model 207 with modified inner headliner (2)	
	Tension cables on soft top headliner modified	MODEL 207.4### ## as of 203816	BT68.30-P-1770-01EC
20	Knock off rivet (35)	Not on model 207 with modified inner headliner (2)	
	Tension cables on soft top headliner modified	MODEL 207.4### ## as of 203816	BT68.30-P-1770-01EC
21	Remove tension cable (32) with bracket (36)	Not on model 207 with modified inner headliner (2)	
	Tension cables on soft top headliner modified	MODEL 207.4### ## as of 203816 Remove remaining rivet (35).	BT68.30-P-1770-01EC
22	Remove screw/bolt (33)	Not on model 207 with modified inner headliner (2)	
	Tension cables on soft top headliner modified	MODEL 207.4### ## as of 203816	BT68.30-P-1770-01EC
23	Remove eye (34) with tension cable (32)	Not on model 207 with modified inner headliner (2)	
	Tension cables on soft top headliner modified	MODEL 207.4### ## as of 203816	BT68.30-P-1770-01EC
24	Close soft top	Leave soft top bow (16) setup.	
25	Unscrew nut (21)		
26	Detach inner headliner (2)		

27	Remove inner headliner (2) from rear window frame (29)		
28	Knock off rivet (23) on mounting hinge (22)		
29	Remove textile tensioning strap (24) with tensioning strap (25)	 Remove remaining rivet (23).	
30	Guide textile tensioning strap (24) through eye (27)	 Textile tensioning strap (24) should run below soft top canvas.	
31	Pull inner headliner (2) out of roof bow (20)		
32	Remove inner headliner (2) from vehicle		
	Install		
33	Place inner headliner (2) in vehicle		
34	Position inner headliner (2) in installation position		
35	Move inner headliner (2) into roof bow (20)		
36	Position inner headliner (2) on cross strut (28)		
37	Pull textile tensioning strap (24) through eye (27)		
38	Position tensioning strap (25) around cross strut (28)		
39	Screw inner headliner (2) onto rear window frame (29) with nut (21)	 MODEL 209.4	*BA67.20-P-1001-02B
40	Rivet textile tensioning strap (24) and tensioning strap (25) with rivet (23)	Rivet Blind rivet mounting for cable, 3.2×9.5 K9.5	*BR00.45-Z-1007-13A *BR00.45-Z-1006-13A
41	Push inner headliner (2) into rear window frame (29)		
42	Move soft top to intermediate position	 See figure.	
43	Rivet tension cable (15) with eye (17) to soft top bow (16) with rivet (18)	Blind rivet mounting for cable, 3.2×9.5 K9.5	*BR00.45-Z-1006-13A
44	Guide tension cable (15) upward below convertible soft top linkage (19)		
45	Rivet tension cable (15) with rivet (14)	Blind rivet mounting for cable, 3.2×9.5 K9.5	*BR00.45-Z-1006-13A
46	Rivet tension cable (32) and bracket (36) with rivet (35)  Tension cables on soft top headliner modified	Not on model 207 with modified inner headliner (2) MODEL 207.4### ## as of 203816 Blind rivet mounting for cable, 3.2×9.5 K9.5	BT68.30-P-1770-01EC *BR00.45-Z-1006-13A
47	Screw on tension cable (32) and eye (34) with bolt (33)  Tension cables on soft top headliner modified	Not on model 207 with modified inner headliner (2) MODEL 207.4### ## as of 203816	BT68.30-P-1770-01EC
48.1	Rivet tensioning strap (31) and tension cable (32) with rivet (30)  Tension cables on soft top headliner modified	Not on model 207 with modified inner headliner (2) MODEL 207.4### ## as of 203816 Blind rivet mounting for cable, 3.2×9.5 K9.5	BT68.30-P-1770-01EC *BR00.45-Z-1006-13A
48.2	Rivet tensioning strap (31) with rivet (30)  Tension cables on soft top headliner modified	Not on model 207 with modified inner headliner (2) MODEL 207.4### ## as of 203816 Blind rivet mounting for cable, 3.2×9.5 K9.5	BT68.30-P-1770-01EC *BR00.45-Z-1006-13A
49	Rivet tensioning rubber strap (13) to 3rd roof bow (12) with rivet (11)	Blind rivet mounting for cable, 3.2×9.5 K9.5	*BR00.45-Z-1006-13A
50	Move tensioning strap mount (9) into roof bow (10)		
51	Rivet tensioning strap (8) with rivet (7) to roof bow (10)	Blind rivet mounting for cable, 3.2×9.5 K9.5	*BR00.45-Z-1006-13A
52	Press rubber lip with inner headliner (2) to 3rd roof bow (12)		
53	Press rubber lip with inner headliner (2) onto roof bow		
54	Press rubber lip (3) with inner headliner (2) onto roof bow (6)		
55	Completely open soft top	 Place soft top in soft top compartment.	
56	Press inner headliner (2) with rubber lip (3) onto soft top lock mounting plate (4)		
57	Rivet inner headliner (2) to soft top lock mounting plate (4) at side with rivet (1)	 MODEL 207.4### ## up to 205475, 209.4 Rivet tensioning strap on insulation together with rivet (1). Otherwise proper function is insulation is not ensured. Blind rivet mounting for cable, 3.2×9.5 K9.5	*BR00.45-Z-1006-13A
58	Install cover on front of soft top		AR68.30-P-4320QA

Number	Designation	Model 209.4
BA67.20-P-1001-02B	Nut to rear window frame	Nm 5

Repair materials

Number	Designation	Order number
BR00.45-Z-1006-13A	Blind rivet mounting for cable, 3.2×9.5 K9.5	A 004 990 35 97
BR00.45-Z-1007-13A	Rivet	A 004 990 36 97