

Code Reader Group Catalog



Total solution from recognition to print quality verification

1D / 2D Symbols and Direct Part Marks

Linear (1D) barcodes have been in commercial use since the 1970s and are the most common symbologies used for automatic identification. Increasing numbers of manufacturers are using two-dimensional (2D) symbols, such as Data Matrix, that offer greater placement flexibility and increased data capacity.

Machine-readable symbols generally fall into the categories of linear barcodes, stacked symbols, 2D symbols and Optical Character Recognition (OCR) fonts. A few examples of each are shown below (symbologies are not to scale).

OMRON Microscan provides fast, reliable reading solutions for 1D and 2D Symbology Standards in the right and OCR. Our products read any linear barcodes or 2D symbols printed or marked by any means, and verify them to industry standards.

Code 128 Code 39		PDF417 IIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIII
Pharmacode	Code 93	GS1 DataBar (Composite)
Interleaved 2 of 5	3 98208 80880 2 UPC	Micro PDF417
2D SYMBOL	OGIES	









1D and 2D Symbology Standards

- ISO / IEC 15416 1D Print Quality Standard
- ISO / IFC 15415
- 2D Print Quality Standard
- Automotive Industry Action Group: AIAG B-4 Parts Identification and Tracking
- U.S. Department of Defense: IUID MIL-STD-130 Permanent and Unique Item Identification
- Electronics Industry Association: EIA 706 Component Marking
- Clinical / Laboratory Standards Institute: AUTO2-A2 Bar Codes for Specimen Container Identification
- ISO / IEC 16022 International Symbology Specification
- ISO / IEC 15434 Symbol Data Format Syntax
- Society of Aerospace Engineers: AS9132 Data Matrix Quality Requirements For Part Marking
- AIM DPM / ISO 29158 Direct Part Mark Quality Guideline

NOTE: Symbologies on this page are not shown to scale and are not intended for testing purposes.

OCR FONTS

OCR-A	OCR-B	MICR E-13B	SEMI M12
1234ABCD	1 2 3 4 A B C D	12340.000	1234ABCD
Alphanumeric (+4 currency char.)	Alphanumeric (+4 currency char.)	Numeric (+4 special char.)	Alphanumeric (+4 currency char.)

DIRECT PART MARKS

Direct part marks (DPM) are typically 2D Data Matrix symbols permanently marked by such methods as dot peen or laser / chemical etch onto substrates including metal, plastic, rubber or glass. OMRON Microscan offers a comprehensive family of readers and verifiers with illumination and decode algorithms specifically designed for difficult direct part marks.



Thermal print on foil



Dot peen on metal





Laser etch on meta

Inkjet on ABS plastic

Barcode Verification and Label Inspection

Legible, accurate barcodes and text have never been more important than they are today. Inconsistencies in print quality can lead to process inefficiencies and downtime; unreadable barcodes may require re-labeling, re-scanning, or even manual entry of critical information by a human operator.

Inconsistent quality may also result in expensive vendor noncompliance fines and other penalties, plus damage the labeled product's perceived quality.

Readability of barcodes is determined by how well a barcode reader can decode the data stored in the symbol.

Understanding the primary reasons for decoding failures can save operators valuable time and effort when diagnosing reading issues. Once the cause of barcode unreadability is defined, it can be addressed by taking simple, preventative measures.

OMRON Microscan's barcode verifiers are embedded solutions that include camera, software, and precision illumination specifically designed for the verification of 1D / 2D codes and direct part marks to ISO / IEC standards.

Benefits of Barcode Verification Systems


- Comply with symbol quality industry standards and directives
- Maximize efficiency of your manufacturing process
- Control quality in real time as you verify the output from your printer or code marking equipment
- Minimize returned goods due to bad labels
- Increase customer satisfaction
- Produce informative verification reports

THE IMPORTANCE OF VERIFICATION

Automated data capture is critical to a company's success, and the results of scanning failure can have a serious impact. Without verification, bad barcodes are not identified until they are unreadable. By the time a bad barcode is identified, thousands of poor-quality barcodes may have already escaped down the line. With verification, bad barcodes are prevented from being applied to the product, eliminating the chance for future failures.


WITHOUT VERIFICATION



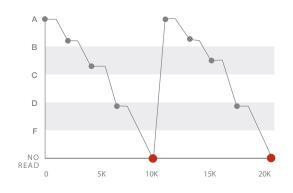

WITH VERIFICATION

Barcode Quality Over Time: Using a Verification Solution to Check Quality

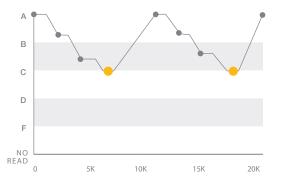

Number of Parts Marked / Labeled

Number of Parts Marked / Labeled

A wide range of products to suit your application

1D / 2D Code Recognition

Laser Barcode Scanners From small products for embedded OEM applications to rugged readers for industrial manufacturing environments, OMRON Microscan offers a wide range of quality products to read linear barcodes and stacked symbols, with features such as high-speed decoding, wide field of view, symbol reconstruction and aggressive decode algorithms.



MS-3 series

Compact raster laser scanner offers highperformance decoding and wide scan angle at close range.



QX-830 series Compact laser scanner features QX

platform, symbol reconstruction and Ethernet protocols.



Programmable sweeping raster laser scanner with QX platform, symbol

reconstruction and Ethernet protocols.

QX-870 series

Read Range	51 to 254mm	25 to 762mm	25 to 762mm
Scans / Second	Up to 1000	300 to 1400	300 to 1400
Power	5 VDC	10 to 28 VDC	10 to 28 VDC
Sensor	Laser diode	Laser diode	Laser diode
IP Rating	IP54	IP54	IP65
Connectivity	RS-232, RS-422 / 485 (up to 115.2k), Keyboard Wedge, USB	RS-232, RS-422 / 485 Ethernet TCP / IP or EtherNet / IP™	RS-232, RS-422 / 485 Ethernet TCP / IP or EtherNet / IP™

р.**б**

р.**12**

P.**18**

Multi Code Readers

Handheld Code Readers

1D

2D

OMRON Microscan's handheld code readers feature the latest technology for decoding 1D and 2D symbols. From simple data tracking for inventory control to aggressive reading of the toughest direct part marks, we have a handheld solution for various track, trace, and control application. These compact designs feature durable, shock-resistant enclosures that are disinfectant-ready.




V430-F series

P.24

HS-360X series

р.**28**

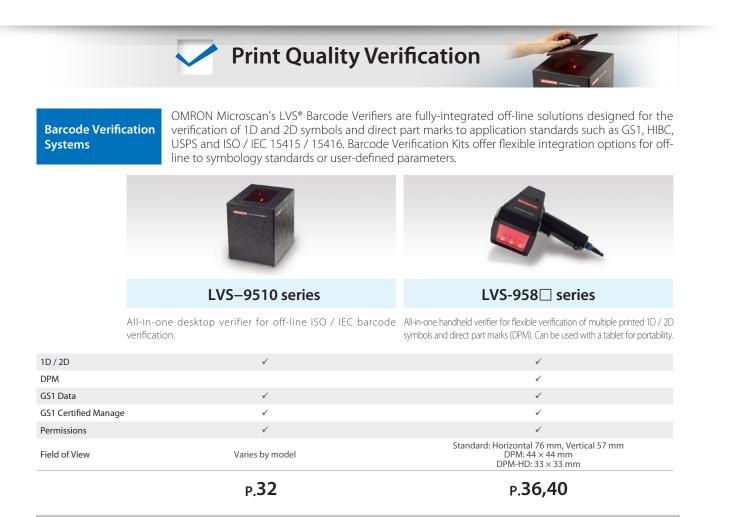

OTHER FEATURES

- GS1 US[®] and 21 CFR Part 11 compliant-ready
- Verifies to over 20 global application standards and over 30 symbology types
- Enables U.S. FDA UDI (Unique Device Identification) compliance for Medical Device Manufacturers and Labelers
- Provides comprehensive and user-friendly barcode defect analysis to help guide corrections
- Includes a local report archive, as well as an external database interface to provide flexible quality reporting



Laser Barcode Scanner **MS-3 series**

Ultra-Compact Laser Barcode Scanner



The MS-3 laser barcode scanner offers the fastest read performance* in embedded compact bar code scanners. The wide scan angle of 70 degrees is coupled with ultra-compact size and flexible mounting.

High performance and flexibility make the MS-3 the optimal choice for reliable reading in embedded instruments.

*.Based on Omron investigation in march 2018.

MS-3: At a Glance

- Decodes / second: up to 1000
- Read Range: 51 to 254 mm
- Wide Scan Angle
- IP54 Enclosure



ESP[®] Easy Setup Program: Single-point software provides quick and easy setup and configuration of all OMRON Microscan readers.



EZ Button: This performs reader setup and configuration with no computer required.

MS-3: Available Codes

Linear



Stacked



Compact & Lightweight

44.5 mm square by 21.6 mm tall scanner weighs only 57 g for easy mounting onto robotic equipment or into tight spaces.

High Scan Speed

Adjustable scan speed from 300 up to 1000 decodes per second and OMRON Microscan's world-class decode algorithms ensure accurate reading every time.

Wide Scan Angle

The wide scan angle of over 70 degrees and a factory customizable focal point add up to space savings within your system, allowing greater flexibility with positioning. Visible Indicators Illuminated LEDs on top of the scanner provide visual confirmation of the scanner performance.

Real-time Controls

The inputs include a trigger signal, a "new master" input, and a programmable input for resetting counters or releasing outputs. The outputs can be configured to activate upon a variety of conditions including matchcode and diagnostic operations.

Application Examples

- Clinical instruments
- Bank ATMs
- Parking kiosks
- Point-of-sale terminals
- Robotics

Multi Code Reader

Ordering Information

Laser Barcode Scanners

Scan mode	Read range	Installation type	Model
Cin ala Lin a	Low Density	Standard	FIS-0003-0001G
Single Line	High Density	Stanuaru	FIS-0003-0002G
Destaulies	Low Density	Standard	FIS-0003-0003G
Raster Line	High Density	Stanuaru	FIS-0003-0004G
Single Line	Low Density	Right Angle	FIS-0003-0005G
Raster Line	Low Density	Right Angle	FIS-0003-0007G

Accessories

Туре	Model
MS-Connect 210, Connectivity Box with Display	FIS-0210-0001G
Relay Module, 120 VAC, 3 Amp Output, Series 70, Type SM, for MS-Connect 210	98-000013-04
Relay Module, 240 VAC, 3 Amp Output, Series 70, Type SM, for MS-Connect 210	98-000013-05
Relay Module, 24 VDC, 3 Amp Output, Series 70, Type SM, for MS-Connect 210	98-000013-06
Cable, MS-3 to MS-Connect 210, 1.8 m (6 feet)	61-000127-02
IB-3PC Keyboard Wedge / Interface Box	FIS-0001-0030G
IC-3USB Interface Kit, USB to Serial 15-pin	98-000051-01
Converter, IC-332, 24 V / 5 V, Opto I / O for use with IB-131	FIS-0001-0035G
IB-131 Interface Box	99-000018-01
Communication Cable, DB-25 Plug to DB-9 Socket, 1.8 m (6 feet)	61-300026-03
Communication Cable, DB-9 Socket to DB-9 Socket, 1.8 m (6 feet)	61-000010-02
Extension Cable, Scanner to IB-131	61-000011-02
IB-131 Daisy Chain Cable	61-100029-03

Power Supplies

Туре	Model
Power Supply, 100-240 VAC, +5 VDC, 5-pin Plug, U.S. / Euro Plug	97-000011-01
Power Supply, 100-240 VAC, +5 VDC, 2-pin Plug, U.S. / Euro Plug	97-000011-02
Power Supply, 100-240 VAC, +24 VDC, TRK 3-pin, U.S. / Euro Plug	97-000012-02

Mounting and Connectors

Туре	Model
Mounting Arm / Adapter Kit for MS-3, 101 mm (4 inches)	98-000048-01
Mounting Stand Base Plate Kit	98-000054-01
Mounting Arm Extension Kit for MS-3, 101 mm (4 inches)	98-000053-01
Mounting Arm Extension Kit for MS-3, 76 mm (3 inches)	98-000053-02
Side Mount Bracket for MS-3	98-000060-01
Angle Mount Bracket for MS-3	98-000059-01
Through-Hole Mount Bracket for MS-3	98-000057-02
Extended Right Angle Mirror for MS-3	98-000058-02
Trigger Connector, 4-pin Plug (screw terminal and field wireable for custom wiring into IB-131)	20-610024-01
Power Connector, 3-pin Socket (screw terminal and field wireable for custom wiring into IB-131)	20-610020-01

Laser Barcode Scanner MS-3 series

Ratings and Specifications

Applicable codes		Code 39, Code 128, Interleaved 2 of 5, Codabar, Code 93, UPC / EAN, Pharmacode, PDF417 (option)	
Scan mode		Single line, fixed raster	
	Scan rate	Adjustable from 300 to 1,000 scans / s, default=500	
Reading	Scan width angle	>70°	
performance	Pitch	±50°	
	Skew	±40°	
	Label contrast	25% min. at 650 nm	
	Interface	RS-232, RS-422 / 485, USB	
Communications	Protocols	Point-to-Point, Point-to-Point w / RTS / CTS, Point-to-Point w / XON / XOFF, Point-to-Point w / RTS / CTS & XON / XOFF, Polling Mode D, Multidrop, User Defined, User Defined Multidrop, Daisy Chain	
	Trigger input	3 to 24 V rated (1 mA at 5 VDC)	
	New Master	3 to 24 V rated (1 mA at 5 VDC)	
I / O specifications	Outputs (1, 2, 3)	5 V TTL compatible, can sink 10 mA and source 2 mA	
	Beeper	Good read, Match/Mismatch, Noread	
	On / Off LEDs	1 status, 1 power, 5 read performance (representing percentage of good decodes)	
Power requirement		5 VDC±5%, 200 mV p-p max. ripple, 260 mA at 5 VDC (typ.)	
	Туре	Semiconductor visible laser diode (650 nm nominal)	
Laser light	Safety class	IEC 60825-1 Class II, 1.0 mW max.	
	Ambient temperature range	Operating: 0 to 50°C, Storage: -40 to 75°C	
Environmental	Ambient humidity range	Up to 90% (with no icing or condensation)	
specifications	Operating life	40,000 hours at 25°C	
	Degree of protection	IP54 (category 2)	
NA/. * . I	Standard	Approx. 106 g	
Weight	Right Angle	Approx. 136 g	
Safety standards		FCC, UL / cUL, CE, BSMI	


HOST CONNECTOR / PIN ASSIGNMENTS High Density 15 Pin D-sub Socket Connector

ingli bensity is in b sub socket connector				
Pin No.	Host RS-232	Host / Aux RS-232	Host RS-422 / 485	ln / Out
1		Power +5 VDC		In
2	TxD	TxD	TxD(–)	Out
3	RxD	RxD	RxD(-)	In
4		Power / Signal O	Ground	
5		NC		
6	RTS	Aux TxD	TxD(+)	Out
7	Output 1 TTL ^a			Out
8	Default configuration ^b			In
9	Trigger			In
10	CTS	Aux RxD	RxD(+)	In
11	Output 3 TTL ^a			Out
12	New Master (NPN)			In
13	Chassis ground ^c			
14	Output 2 TTL ^a Out			Out
15	NC			


a. Can sink 10 mA and source 2 mA.b. The default is activated by connecting pin 8 to ground pin 4.c. Chassis ground: Used to connect chassis body to earth ground only. Not to be used as power or signal return.

Laser Barcode Scanner MS-3 series

Read Ranges

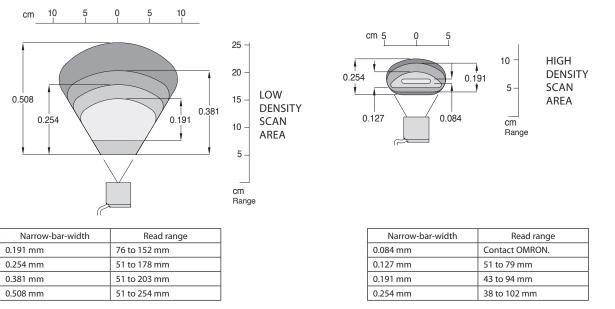

Note: For Right Angle option, subtract 15 mm from read range. Read ranges are based upon optimal scan speed for specific symbol density.

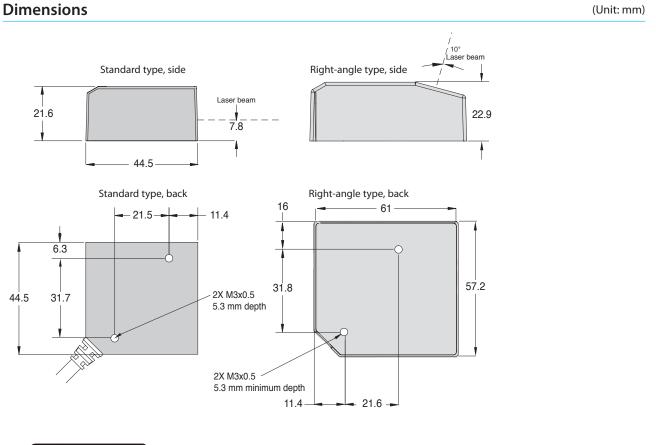



Laser Label Indications


This warning label is attached to the laser Barcode scanner. Never remove this label or place objects in front of it.

Laser Barcode Scanner MS-3 series

System Configurations

Stand Alone (5V)


This is the basic setup for a single MS-3.

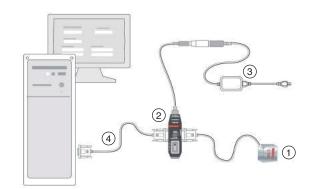

Stand Alone (10-28V)


With MS-Connect 210

This is the basic setup for a single MS-3 and MS-Connect 210.

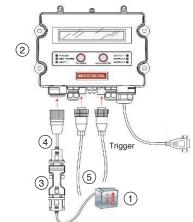

No.	Туре	Model
1	MS-3 Laser Barcode Scanner	FIS-0003-000G
2	IB-3PC Keyboard Wedge / Interface Box	FIS-0001-0030G
3	Power Supply,100-240VAC,+5VDC, 5PIN, USA / EUR Plug	97-000011-01
4	Cable, Communication, DB-9 Socket-to- DB-9 Socket, 6 ft.	61-000010-02
-	Kit, Mounting Arm / Adapter, 4 in., for MS-3	98-000048-01
-	Kit, Mounting Stand Base Plate	98-000054-01


No.	Туре	Model
1	MS-3 Laser Barcode Scanner	FIS-0003-000G
2	Connectivity Box A	FIS-0210-0001G
3	Converter, IC-332, 24V / 5V, Opto I / O, for Use with IB-131	FIS-0001-0035G
4	Cable, MS-3-to-MS-Connect 210, 6 ft.	61-000127-02
5	Power Supply (100-240 VAC, +24VDC, TRK 3Pin, USA/Euro Plug)	97-000012-02

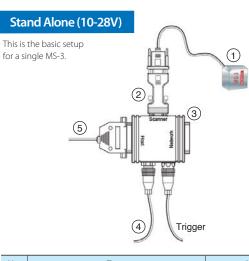

No.	Туре	Model
1	MS-3 Laser Barcode Scanner	FIS-0003-000G
2	Converter, IC-332, 24V / 5V, Opto I / O, for Use with IB-131	FIS-0001-0035G
3	IB-131 Interface Box	99-000018-01
4	Power Supply (100-240 VAC, +24VDC, TRK 3Pin, USA / Euro Plug)	97-000012-02
5	Cable, Communication, DB-25 Plug-to-DB-9 Socket, 6 ft.	61-300026-03
-	Kit, Mounting Arm / Adapter, 4 in., for MS-3	98-000048-01
-	Kit, Mounting Stand Base Plate	98-000054-01



Allows the scanner to be powered and communicate via a USB port (virtual com port).

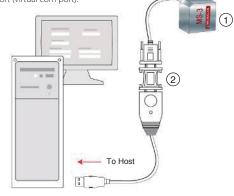


No.	Туре	Model
1	MS-3 Laser Barcode Scanner	FIS-0003-□□□G
2	IC-3USB Interface Kit, USB-to-Serial, 15-Pin	98-000051-01
-	Kit, Mounting Arm / Adapter, 4 in., for MS-3	98-000048-01
-	Kit, Mounting Stand Base Plate	98-000054-01

Laser Barcode Scanner MS-3 series

System Configurations

Daisy Chain

A primary scanner is linked directly to the host. Secondary scanners (up to 9) are linked in tandem. Data is sent from the primary scanner directly to the host.

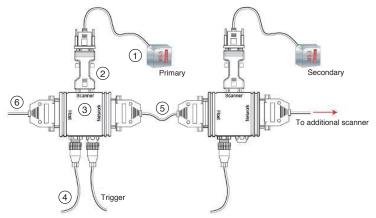

No.	Туре	Model
1	MS-3 Laser Barcode Scanner	FIS-0003-000G
2	Converter, IC-332, 24V / 5V, Opto I / O, for Use with IB-131	FIS-0001-0035G
3	IB-131 Interface Box	99-000018-01
4	Power Supply (100-240 VAC, +24VDC, TRK 3Pin, USA / Euro Plug)	97-000012-02
5	Cable, Daisy Chain, IB-131	61-100029-03
6	Cable, Communication, DB-25 Plug-to-DB-9 Socket, 6 ft.	61-300026-03
-	Kit, Mounting Arm / Adapter, 4 in., for MS-3	98-000048-01
-	Kit, Mounting Stand Base Plate	98-000054-01

Laser Barcode Scanner QX-830 series

Compact Industrial Laser Barcode Scanner



The QX-830 laser barcode scanner combines flexible connectivity with high performance decoding capabilities to reliably read 1D barcodes in almost any automation environment. In addition to the Quick Connect System and X-Mode Technology, the QX-830 features IP54 industrial sealing and optional embedded Ethernet protocols.

High performance, simple connectivity, and the highest quality enclosure make the QX-830 an ideal laser scanner for any industrial application.

QX-830: At a Glance

- Scans / second: 300 to 1400
- Read Range: 25 to 762 mm
- Optional Embedded Ethernet TCP / IP & EtherNet / IP
- IP54 Enclosure



ESP®Easy Setup Program: Single-point software solution provides quick and easy setup and configuration of all OMRON Microscan readers.



EZ Button: This performs reader setup and configuration with no computer required.



Visible Indicators: Performance indicators include "good read" green flash and LEDs.



QX Platform: Quick Connect system and X-Mode technology combine to provide simple connectivity, networking, and high performance decoding.

QX-830: Available Codes





MicroPDF

Stacked



GS1 Databar

Quick Connect System

- Plug and play setup
- Single or multi-scanner
- solutions

High Performance

Aggressive decoding capabilities allow reliable reading of barcodes out to 762 mm, at up to a 254 mm beam width.

Real-time Feedback

Visible LED indicators on the side of the scanner and a "good read" green flash projecting from the front window provide confirmation of the scanner's performance. The green flash is visible within a complete 360 degree radius from the scanner.

Ethernet Protocols

The QX-830 includes optional embedded Ethernet TCP / IP and EtherNet / IP for high speed communication.



X-Mode TechnologyDecodes damaged,

- poorly printed, or
- misaligned codes
- Ensures high read rates
- and throughput

51

Flexibility

The compact size of the QX-830 allows flexible positioning for a variety of applications.

Application Examples

- Any industrial environment from light to heavy duty
- Conveyor lines
- Packaging and sortation
- Electronics production
- Embedded within machinery

Ordering Information

Laser Barcode Scanners

Scan mode	Read range	Interface	Model
	Low Density		FIS-0830-0001G
Single Line	Middle Density	Serial *1	FIS-0830-0002G
	High Density		FIS-0830-0003G
	Low Density		FIS-0830-0004G
Raster Line	Middle Density	Serial *1	FIS-0830-0005G
Raster Line	High Density	Serial 1	FIS-0830-0006G
	Low Density / Plastic Window		FIS-0830-0010G
	Low Density		FIS-0830-1001G
Single Line	Middle Density	Serial *2 and Ethernet	FIS-0830-1002G
	High Density		FIS-0830-1003G
	Low Density		FIS-0830-1004G
Destaultes	Middle Density	C. (14)*2	FIS-0830-1005G
Raster Line	High Density	Serial *2 and Ethernet	FIS-0830-1006G
	Low Density / Plastic Window		FIS-0830-1010G

*1. Supports RS-232, RS-422, or RS-485. *2. Supports RS-232.

Accessories

Туре	Model
QX-1 Interface Device	98-000103-02
QX Cordset, Common, M12 12-pin Socket (Screw-On) to M12 12-pin Plug (Screw-On), 3 m	61-000148-02
QX Cordset, Common, M12 12-pin Socket (Screw-On) to M12 12-pin Plug (Screw-On), 1 m	61-000162-02
QX Cordset, Host, Serial, M12 12-pin Socket (Screw-On) to DB-9 Socket, 1 m	61-000153-02
QX Cordset, Host, Serial, M12 12-pin Socket (Screw-On) to DB-9 Socket, 3 m	61-000164-02
QX Cordset, Host, Serial, M12 12-pin Plug (Screw-On) to DB-9 Socket, 1 m	61-000152-02
QX Cordset, Host, Serial, M12 12-pin Plug (Screw-On) to DB-9 Socket, 3 m	61-000165-02
QX Cordset, Host, Ethernet, M12 8-pin Plug (Screw-On) to RJ45, 1 m	61-000160-03
QX Cordset, M12 12-pin Plug to M12 12-pin Socket to DB-25 Plug Turck Connectors	61-000172-02
QX Cordset, M12 12-pin Plug & M12 12-pin Socket to MS-Connect 210, RS-232, 2 m	61-000158-03
QX Cordset, M12 12-pin Plug (Screw-On) to Flying Leads, 3 m	61-000166-02
QX Cordset, M12 12-pin Plug & Socket to IB-131, RS-232, 2 m	61-000159-03
QX Cordset, M12 12-pin Socket to IB-131, RS-232/RS-485, 2 m	61-000159-04

Power Supplies

Туре	Model
Power Supply, 100-240 VAC, +24 VDC, M12 12-pin Socket	97-000012-01
QX Power Supply, 24 V, M12 12-Pin Plug, USA / Euro Plug	97-000012-04

Mounting and Connectors

Туре	Model
Mounting Plate Kit for QX-830 / QX-870	98-500006-01
Right Angle Mirror Kit for QX-830	98-200026-02
Mounting Arm/Adapter Kit for QX-830 / QX-870, 152 mm (6 inches)	98-000016-01
Mounting Arm Extension Kit for all scanners,152 mm (6 inches)	98-000037-01
L-Bracket Kit for QX Series	98-000148-01
Mounting Stand Base Plate Kit	98-000054-01
Trigger Connector, 4-pin Plug (screw terminal and field wireable for custom wiring into IB-131)	20-610024-01

Laser Barcode Scanner QX-830 series

Ratings and Specifications

	Standard	Code 39, Codabar, Code 93, Interleaved 2 of 5, Code 128, PDF417, Micro PDF417, Pharmacode, UPC, GS1
Applicable codes		Databar
	Application standards	UCC / EAN-128, AIAG
	Mirror type	Rotating, 10-faceted
	Optional raster mirror image	10 raster scan lines over a 2° arc (or 0.500-inch raster height at 8-inch [203-mm] distance)
	Scan rate	Adjustable from 300 to 1,400 scans / s, default=500
Reading performance	Scan width angle	60° (typ.)
performance	Pitch	±50° max.
	Skew	±40° max.
	Label contrast	25% min. absolute dark to light differential at 655 nm wavelength
	Interface	RS-232 / 422 / 485 or Ethernet*
Communications	Protocols	Point-to-Point, Point-to-Point w / RTS / CTS, Point-to-Point w / XON / XOFF, Point-to-Point w / RTS / CTS & XON / XOFF, Multidrop, Daisy Chain, User-Defined Multidrop, Ethernet TCP / IP, EtherNet / IP
	Input 1 / Trigger / New Master	Optoisolated, 4.5 to 28 V rated, (13 mA at 24 VDC) New Master is (–) to signal ground
I / O specifications	Outputs (1, 2 & 3)	Optoisolated, 1 to 28 V rated, (I $_{CE}$ <100 mA at 24 VDC, current limited by user)
Power requirement		10 to 28 VDC, 200 mV p-p max. ripple, 180 mA at 24 VDC (typ.)
	Туре	Laser diode
	Output wavelength	655 nm nominal
La con Pala	Beam divergence	0.4 mrad (typ.)
Laser light	Pulse time	40 to 186 µs
	Maximum output	1.75mW
	Safety class	Visible laser: IEC 60825-1 Class 2
	Ambient temperature range	Operating: 0 to 50°C, Storage: -40 to 75°C
Environmental	Ambient humidity range	Up to 90% (with no icing or condensation)
specifications	Degree of protection	IP54
	Operating life	50,000 hours at 25°C
Weight		Approx. 212 g
Dimensions		35 x 65.7 x 87.8 mm (H x D x W)
Safety standards		FCC, UL / cUL, CE, CB
Material (Case)		Aluminum diecast

* Depends on model. See Ordering Information for details.

CONNECTOR B M12 12-PIN SOCKET

PIN ASSIGNMENTS

CONNECTOR A M12 12-PIN PLUG 12 6

Pir	Assignment 2	Pin Assignment
1	Trigger	1 Trigger
2	Power	2 Power
3	Default	3 Terminated
4	New Master	4 Input 1
5	Output 1	5 422/485 TxD (+)
6	Output 3	6 422/485 RxD (+)
7	Ground	7 Ground
8	Input Common	8 Input Common
9	Host RxD	9 TxD / RTS
10	Host TxD	10 RxD/CTS
11	Output 2	11 422 / 485 TxD (-)
12	Output Common	12 422 / 485 RxD (-)

ETHERNET CONFIGURATION


CONNECTOR B M12 8-PIN SOCKET

Pi	n Assignment	6 7 1 8
1	Terminated	
	Terminated	
3	Terminated	
4	TX (–)	
5	RX (+)	
б	TX (+)	
7	Terminated	
8	RX (–)	

Multi Code Reader


OMRON 15

Read Ranges*

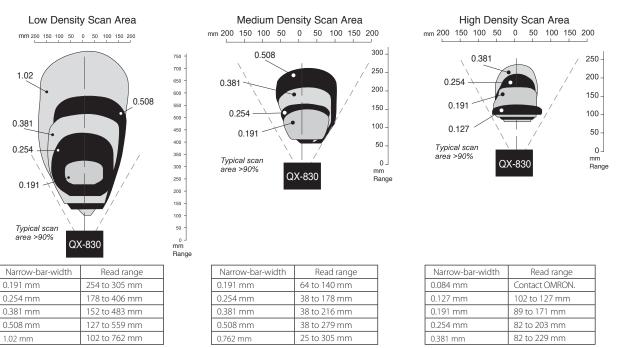

* Ranges based on a Grade A, Code 39 label, at 500 scans per second. Data subject to change.

Dimensions

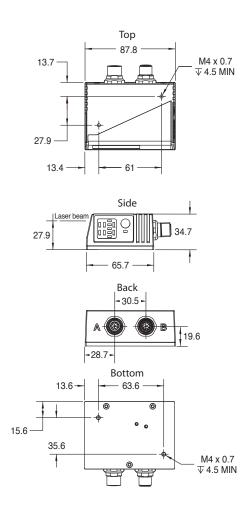

LASER RADIATION
DO NOT STARE INTO BEAM
CLASS 2 LASER PRODUCT
655nm 1.75mW 40~186µs

Laser Label Indications


This warning label is attached to the laser Barcode scanner. Never remove this label or place objects in front of it.

(Unit: mm)

(Unit: mm)

Laser Barcode Scanner QX-830 series


System Configurations

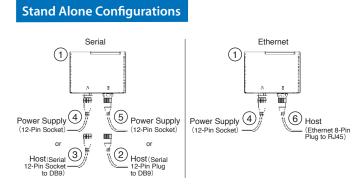

No.	Туре	Model
1	QX-830 Laser Barcode Scanner	FIS-0830-□□□G
2	QX Cordset, Host, Serial, M12 12-Pin Plug (Screw-On)-to-DB-9 Socket, 1 m.	61-000152-02 [*]
3	QX Cordset, Host, Serial, M12 12-Pin Socket (Screw-On)-to-DB-9 Socket, 1 m.	61-000153-02 [*]
4	Power Supply, 100-240VAC, +24VDC, M12 12-Pin Socket	97-000012-01
5	QX Power Supply, 24V, M12 12 pin Plug, USA / Euro Plug	97-000012-04
6	QX Cordset, Host, Ethernet, M8 8-Pin Plug (Screw-On)-to-RJ45, 1 m.	61-000160-03
-	Kit, 6 in. Mounting Arm / Adapter, QX-830, QX-870	98-000016-01
-	Kit, Mounting Stand Base Plate	98-000054-01

* Cordsets available in multiple lengths.

Stand Alone Configurations

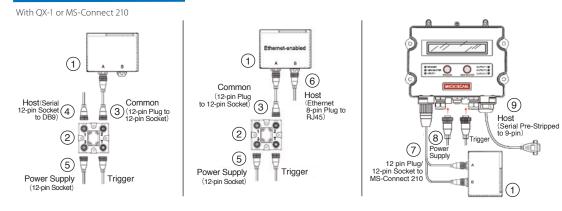


No.	Туре	Model
1	QX-830 Laser Barcode Scanner	FIS-0830-□□□G
2	QX-1 Interface Device	98-000103-02
3	QX Cordset, Common, M12 12-Pin Socket (Screw-On)-to-M12 12-Pin Plug (Screw-On), 1 m.	61-000162-02*1
4	QX Cordset, Host, Serial, M12 12-Pin Socket (Screw-On)-to-DB-9 Socket, 1 m.	61-000153-02*1
5	Power Supply, 100-240VAC, +24VDC, M12 12-Pin Socket	97-000012-01
6	QX Cordset, Host, Ethernet, M12 8-Pin Plug (Screw-On)-to-RJ45, 1 m.	61-000160-03 ^{*1}
7	QX Cordset, M12 12-Pin Plug & M12 12-Pin Socket-to-MS-Connect 210 (RS-232), 2 m.	61-000158-03
8	Power Supply, 100-240VAC, +24VDC, TRK 3-Pin, U.S. / Euro Plug)	97-000012-02
9	Connectivity Box	FIS-0210-0001G*2
-	Kit, 6 in. Mounting Arm / Adapter, QX-830, QX-870	98-000016-01
-	Kit, Mounting Stand Base Plate	98-000054-01

*1. Cordsets available in multiple lengths *2. Refer to MS-Connection page for complete listing of MS-Connection 210 options

Laser Barcode Scanner QX-830 series

System Configurations

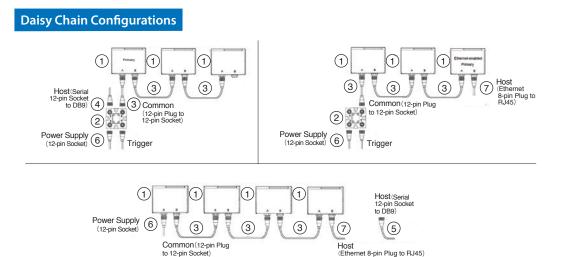

No.	Туре	Model
1	QX-830 Laser Barcode Scanner	FIS-0830-□□□G
2	QX-1 Interface Device	98-000103-02
3	QX Cordset,Common,M12 12-Pin Socket(Screw-On)-to-M12 12-Pin Plug(Screw-On), 1 m.	61-000162-02*
4	QX Cordset, Host, Serial, M12 12-Pin Socket (Screw-On)-to-DB-9 Socket, 1 m.	61-000153-02*
5	QX Cordset, Host, Serial, M12 12-Pin Plug (Screw-On)-to-DB-9 Socket, 1 m.	61-000152-02*
6	Power Supply, 100-240VAC, +24VDC, M12 12-Pin Socket	97-000012-01
7	QX Cordset, Host, Ethernet, M8 8-Pin Plug (Screw-On)-to-RJ45, 1 m.	61-000160-03
-	Kit, 6 in. Mounting Arm / Adapter, QX-830, QX-870	98-000016-01
-	Kit, Mounting Stand Base Plate	98-000054-01

* Cordsets available in multiple lengths.

Laser Barcode Scanner QX-870 series

Industrial Raster Laser Barcode Scanner



The QX-870 laser barcode scanner partners the latest technologies in barcode reading and connectivity into an easy to use solution for barcode track, trace and control applications. Simple to set up and deploy, it features a programmable sweeping raster to read multiple codes, in varying locations, even if they are damaged or mis-aligned.

With plug and play setup and the most aggressive decode algorithms available, the QX-870 an ideal laser scanner for any industrial application.

Embedded Ethernet

QX–870: At a Glance

- Scans / second: 300 to 1400
- Read Range: 25 to 762 mm
- Optional Embedded Ethernet TCP / IP & EtherNet / IP
- IP65 Enclosure



ESP*Easy Setup Program: Single-point software solution provides quick and easy setup and configuration of all OMRON Microscan readers.



ESP

EZ Button: This performs reader setup and configurationwith no computer required.

GOO REA

Visible Indicators: Performance indicators include "good read" green flash and LEDs.



Sweeping Raster: This programmable feature enables the reader for multiple symbols at varying distances and locations.



QX Platform: Quick Connect system and X-Mode technology combine to provide simple connectivity, networking, and high performance decoding.

QX-870: Available Codes



Stacked

All Standard





Quick Connect System

- Plug and play setupSingle or multi-scanner
- solutions

High Performance

beam width.

Intelligent Raster

In addition to sweep

the QX-870 features a

angle and speed controls,

programmable raster with

intelligent auto framing

technology. Advanced software will automatically frame the raster height

and width of the laser to match the barcode, allowing

selective targeting of codes

within a single read cycle.

Aggressive decoding

capabilities allow reliable

reading of barcodes out to

762 mm, at up to a 254 mm

Decodes damaged, poorly printed, or

misaligned codes

X-Mode Technology

- Ensures high read rates
- and throughput

Ethernet Protocols

The QX-870 includes optional embedded Ethernet TCP / IP and EtherNet / IP for high speed communication.

Application Examples

- Any industrial environment from light to heavy duty
- Automotive assembly
- Packaging and sortation
- Electronics production
- Embedded within machinery

Code Verification System

Ordering Information

Laser Barcode Scanners

Scan mode	Read range	Interface	Model
	Low Density		FIS-0870-0004G
Constantin en De estant	Medium Density	_ Serial •	FIS-0870-0005G
Sweeping Raster	High Density		FIS-0870-0006G
	Low Density / Plastic Window		FIS-0870-0007G
	Low Density		FIS-0870-1004G
Sweeping Raster	Medium Density	Serial * and Ethernet	FIS-0870-1005G
	High Density		FIS-0870-1006G

* Supports RS-232, RS-422, or RS-485.

Accessories

Туре	Model
QX-1 Interface Device	98-000103-02
QX Cordset, Common, M12 12-pin Socket (Screw-On) to M12 12-pin Plug (Screw-On), 3 m	61-000148-02
QX Cordset, Common, M12 12-pin Socket (Screw-On) to M12 12-pin Plug (Screw-On), 1 m	61-000162-02
QX Cordset, Host, Serial, M12 12-pin Socket (Screw-On) to DB-9 Socket, 1 m	61-000153-02
QX Cordset, Host, Serial, M12 12-pin Socket (Screw-On) to DB-9 Socket, 3 m	61-000164-02
QX Cordset, Host, Serial, M12 12-pin Plug (Screw-On) to DB-9 Socket, 1 m	61-000152-02
QX Cordset, Host, Serial, M12 12-pin Plug (Screw-On) to DB-9 Socket, 3 m	61-000165-02
QX Cordset, Host, Ethernet, M12 8-pin Plug (Screw-On) to RJ45, 1 m	61-000160-03
QX Cordset, M12 12-pin Plug to M12 12-pin Socket to DB-25 Plug Turck Connectors	61-000172-02
QX Cordset, M12 12-pin Plug & M12 12-pin Socket to MS-Connect 210, RS-232, 2 m	61-000158-03
QX Cordset, M12 12-pin Plug (Screw-On) to Flying Leads, 3 m	61-000166-02
QX Cordset, M12 12-pin Plug & Socket to IB-131, RS-232, 2 m	61-000159-03
QX Cordset, M12 12-pin Socket to IB-131, RS-232 / RS-485, 2 m	61-000159-04

Power Supplies

Туре	Model
Power Supply, 100-240 VAC, +24 VDC, M12 12-pin Socket	97-000012-01
QX Power Supply, 24 V, M12 12-Pin Plug, USA /Euro Plug	97-000012-04

Mounting and Connectors

Туре	Model
Mounting Plate Kit for QX-830 / QX-870	98-500006-01
Right Angle Mirror Kit for QX-830	98-200026-02
Mounting Arm / Adapter Kit for QX-830 / QX-870, 152 mm (6 inches)	98-000016-01
Mounting Arm Extension Kit for all scanners,152 mm (6 inches)	98-000037-01
L-Bracket Kit for QX Series	98-000148-01
Mounting Stand Base Plate Kit	98-000054-01
Trigger Connector, 4-pin Plug (screw terminal and field wireable for custom wiring into IB-131)	20-610024-01

Laser Barcode Scanner QX-870 series

Ratings and Specifications

		Code 39, Codabar, Code 93, Interleaved 2 of 5, Code 128, PDF417, Micro PDF417,
Applicable codes	Standard	Pharmacode, UPC, GS1 Databar
	Application standards	UCC / EAN-128, AIAG
Reading performance	Mirror type	Rotating, 10-faceted
	Scan rate	Adjustable from 300 to 1,400 scans/s, default=500
	Scan width angle	60° (typ.)
	Pitch	±50° max.
	Skew	±40° max.
	Label contrast	25% min. absolute dark to light differential at 655 nm wavelength
Communications	Interface	RS-232 / 422 / 485 and / or Ethernet [*]
	Protocols	Point-to-Point, Point-to-Point w / RTS / CTS, Point-to-Point w / XON / XOFF, Point-to-Point w / RTS / CTS & XON / XOFF, Multidrop, Daisy Chain, User-Defined Multidrop, Ethernet TCP / IP, EtherNet / IP
I / O specifications	Input 1 / Trigger / New Master	Bi-directional optoisolated 4.5 to 28 V rated (13 mA at 24 VDC)
	Outputs (1, 2 & 3)	Optoisolated, 1 to 28 V rated, (Ice <100 mA at 24 VDC, current limited by user)
Power requirement		10 to 28 VDC, 200 mV p-p max. ripple, 270 mA at 24 VDC (typ.)
	Туре	Laser diode
	Output wavelength	655 nm nominal
	Beam divergence	0.4 mrad (typ.)
Laser light	Pulse time	40 to 186 µs
	Maximum output	1.75 mW
	Operating life	50,000 hours at 25°C
	Safety class	Visible laser: IEC 60825-1 Class 2
	Ambient temperature range	Operating: 0 to 50°C, Storage: -40 to 75°C
Environmental specifications	Ambient humidity range	Up to 90% (with no icing or condensation)
specifications	Degree of protection	IP65
Weight		Approx. 453 g
Dimensions		109 x 45 x 95 mm (H x D x W)
Safety standards		FCC, UL / cUL, CE, CB
Material		Aluminum diecast

* Depends on model. See Ordering Information for details.

Raster Mirror Performance

80
60
40
20

PIN ASSIGNMENTS*

Connector A (Serial) *M12 12-pin plug*

Pin Assignment			
1	Trigger		
2	Power		
3	Default		
4	New Master		
5	Output 1		
6	Output 3		
7	Ground		
8	Input Common		
9	Host RxD		
10	Host TxD		
11	Output 2		
12	Output Common		

Connector B (Serial) *M12 12-pin socket*

	1			
Pin Assignment				
1	Trigger			
2	Power			
3	Terminated			
4	Input 1			
5	422 / 485 TxD (+)			
6	422 / 485 RxD (+)			
7	Ground			
8	Input Common			
9	TxD / RTS			
10	RxD / CTS			
11	422 / 485 TxD (–)			
12	422 / 485 RxD (-)			

Pin Assignment			
1	N/C		
2	Power		
3	N/C		
4	N/C		
5	422 / 485 TxD (+)		
6	422 / 485 RxD (+)		
7	Ground		
	N/C		
9	N/C		
10	N/C		
11	422 / 485 TxD (–)		
12	422 / 485 RxD (-)		

Connector P / M (Serial) Connector B (Ethernet) M12 12-pin plug M12 8-pin socket

Pir	Pin Assignment				
1	Terminated				
2	Terminated				
3	Terminated				
4	TX (–)				
5	RX (+)				
6	TX (+)				
7	Terminated				
8	RX (–)				


Connector T (Trigger) *M12 4-pin socket*

Pin	Assignment	
гш	Assignment	

	17 (55) grinnent
1	Power
2	Trigger
3	Ground
4	Input

*Note: Detailed connector pinout information is available in the User's Manual.

Read Ranges*

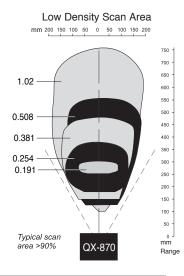

mm 200 150 100 50 0 50 100 150 200 300 -0.762 250 0.508 200 0.381 150 0.254 100 0.191 50 0 Typical scan area >90% mm Range QX-870

Read range

64 to 140 mm

38 to 178 mm

38 to 216 mm

38 to 280 mm

25 to 304 mm

Narrow-bar-width

0.191 mm


0.254 mm

0.381 mm

0.508 mm

0.762 mm

Medium Density Scan Area

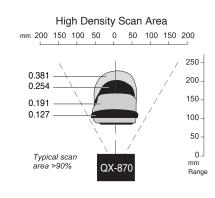

Read range Contact OMRON.

102 to 127 mm

89 to 171 mm

82 to 203 mm 82 to 228 mm

Narrow-bar-width

0.084 mm

0.127 mm

0.191 mm

0.254 mm

0.381 mm

(Unit: mm)

 Narrow-bar-width
 Read range

 0.191 mm
 254 to 305 mm

 0.254 mm
 178 to 381 mm


 0.381 mm
 152 to 483 mm

 0.508 mm
 127 to 558 mm

 1.02 mm
 102 to 762 mm

* Ranges based on a Grade A, Code 39 label, at 500 scans per second. Data subject to change.

Dimensions

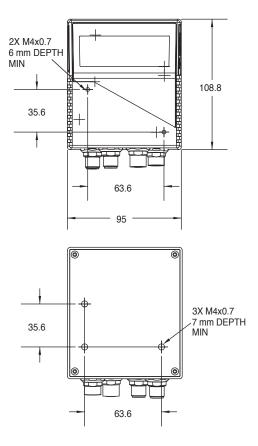



Laser Label Indications

This warning label is attached to the laser Barcode scanner. Never remove this label or place objects in front of it.

Laser Barcode Scanner QX-870 series

1


System Configurations

3

Trigger

Power

Supply

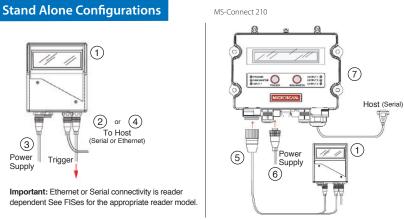


Important: Ethernet or Serial connectivity is reader dependent See FISes for the appropriate reader model.

No.	Туре	Model
1	QX-870 Laser Barcode Scanner	FIS-0870-□□□G
2	QX Cordset, Host, Serial, M12 12-Pin Plug (Screw-On)-to-DB-9 Socket, 1 m.	61-000152-02*1
3	Power Supply, 100-240VAC, +24VDC, M12 12-Pin Socket	97-000012-01
4	QX Cordset, Host, Ethernet, M8 8-Pin Plug (Screw-On)-to-RJ45, 1 m.	61-000160-03*1
5	QX Cordset, M12 12-Pin Plug & M12 12-Pin Socket-to-MS-Connect 210 (RS-232), 2 m.	61-000158-03
6	Power Supply, 100-240VAC, +24VDC, TRK 3-Pin, U.S. / Euro Plug)	97-000012-02
7	Connectivity Box	FIS-0210-0001G*2
-	Kit, 6 in. Mounting Arm / Adapter, QX-830, QX-870	98-000016-01
-	Kit, Mounting Stand Base Plate	98-000054-01

*1. Cordsets available in multiple lengths *2. Refer to MS-Connection page for complete listing of MS-Connection 210 options

Daisy Chain Configurations

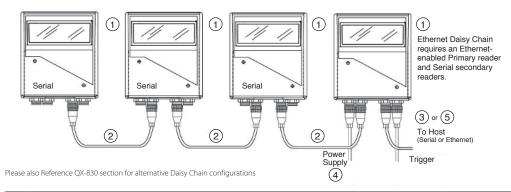

No.	Туре	Model
1	QX-870 Laser Barcode Scanner	FIS-0870-□□□G
2	QX Cordset, Common, M12 12-Pin Socket (Screw-On)-to-M12 12-Pin Plug (Screw-On),1 m.	61-000162-02 [*]
3	QX Cordset, Host, Serial, M12 12-Pin Plug (Screw-On)-to-DB-9 Socket, 1 m.	61-000152-02*
4	Power Supply, 100-240VAC, +24VDC, M12 12-Pin Socket	97-000012-01
5	QX Cordset, Host, Ethernet, M8 8-Pin Plug (Screw-On)-to-RJ45, 1 m.	61-000160-03*
-	Kit, 6 in. Mounting Arm / Adapter, QX-830, QX-870	98-000016-01
-	Kit, Mounting Stand Base Plate	98-000054-01

* Cordsets available in multiple lengths

OMRON 23

МЕМО	
·	
·	
·	
<u></u>	
·	
·	
· · · · · · · · · · · · · · · · · · ·	
<u> </u>	
·	
<u> </u>	
<u> </u>	
<u> </u>	
·	
· · · · · · · · · · · · · · · · · · ·	

Laser Barcode Scanner

Handheld DPM Code Reader **HS-360X** series

"Ultra-Rugged" Hand Held Scanner



The HS-360X Ultra-Rugged Handheld Imagers is Omron Microscan's newest generation of industrial Direct Part Mark (DPM) handheld imagers, purpose built from the ground up to set new standards for durability and performance. With best in class out of box performance most applications require NO setup. An all NEW user interface WebLink_{PC} makes setup for more difficult applications intuitive and easy.

HS-360X: At a Glance

- Wired or Wireless
- Ultra-Rugged DPM Handheld
- Industry-Leading DPM Decoding Performance with X-Mode
- Intuitive WebLink_{PC} Interface

All Standard Liner PDF417 Stacked Data Matrix QR Micro QR 驟 2D

HS-360X Available Codes

GS1 Databar



X-Mode Decode Algorithms

Ultra-Rugged

5,000 tumbles.

The HS-360X withstands

multiple drops from 8' and

The HS-360X includes industry-leading X-Mode decoding algorithms to consistently read damaged, distorted or otherwise challenging directly marked codes at high decode rates.

Performance Indicators

In addition to a beeper, visual and vibrating indicators provide silent confirmation of successful reads for noisy or sensitive environments

Industrial Fluid and **Chemical Tolerable** Many industrial fluids and chemicals deemed tolerable.

Charging Station

The charging station is IP65 and transmits and receives data over a Bluetooth class 1 or 2 out to 300 feet. It includes a Wi-Fi friendly mode and a paging button to locate a misplaced imager.

Ease of Use - WebLink_{PC} Scanner configuration and deployment with browser based user interface and device discovery.

Ordering Information

Туре	Applicable countries	Model
Handheld DPM Scanner, Wired, HDS-3608		HDS-3608-0001
Handheld DPM Scanner, Wireless, HDS-3678	Common (except for India / Korea)	HDS-3678-0001
Battery Spare for HS-360X Wireless Type		98-9000224-01
Handheld DPM Scanner, Wired, HDS-3608 INDIA / KOREA		HDS-3608-0002
Handheld DPM Scanner, Wireless, HDS-3678 INDIA / KOREA	India / Korea	HDS-3678-0002
Battery Spare for HS-360X Wireless Type, INDIA / KOREA		98-9000224-02
Cradle / Charger, HS-360X Wireless Type		12-9000937-01
Cable, USB, Shielded, 2m, EXT 12V (Power Supply Required)		12-9000942-01
Cable, USB, Shielded, 4.6m, EXT 12V (Power Supply Required)	6	12-9000943-01
Cable, USB, Shielded, 2m	Common	12-9000946-01
Cable, USB, Shielded, 4.6m		12-9000947-01
Cable, RS-232, DB9 Socket, 2M, Straight, HS-360X		12-9000953-01
AC power Cord, 1.8m, JAPAN, C13 connecter	Japan	12-9001046-01
AC power Cord, 1.9m, INDIA, C13 connecter	India	12-9000963-01
AC power Cord, 2.5m, US, C13 connecter	United States	12-9000959-01
AC power Cord, 2.5m, EU / Korea, C13 connecter	Europe / Korea	12-9000960-01
AC power Cord, 2.5m, UK, C13 connecter	UK	12-9000961-01
AC power Cord, 2.5m, CHINA, C13 connecter	China	12-9000962-01
KIT, Power Supply for Cradle / Charger, HS-360X Wireless Type (A / C Power Cord Required)		98-9000181-01
KIT, Power Supply for Battery Charger, 4 Slot, HS-360X Wireless Type (A / C Power Cord Required)		98-9000182-01
4 Slot, Battery Charger, HS-360X Wireless Type (Power Supply Required)	Common	98-9000185-01
Intelligent Stand		98-9000186-01

Ratings and Specifications

	1D	UPC / EAN, UPC / EAN with supplementals, Bookland, EAN, ISSN, UCC Coupon Extended Code, Code 128, GS1- 128, ISBT 128, ISBT Concatenation, Code 39, Code 39 Full ASCII, Trioptic Code 39, Code 32, Code 93, Code 11, Interleaved 2 of 5, Discrete 2 of 5, Codabar, MSI, Chinese 2 of 5, Matrix 2 of 5, Korean 3 of 5, GS1 DataBar variants		
Applicable codes	2D	PDF417, MicroPDF417, Composite Codes, TLC-39, Data Matrix, Maxicode, QR Code, MicroQR, Aztec, Han Xin, GS1-QR, GS1-DM		
	Postal	US Postnet, US Planet, UK Postal, Japan Post, Australia Post, Royal Mail 4 State Customer, KIX Code (Dutch), UPU 4 State Postal FICS (Post US4), USPS 4 State Postal (Post US3)		
	Field of view (Horizontal x Vertical) nominal	31° (H) × 23° (V)		
	Roll	0 to 360°		
Development	Pitch	±60°		
Reading performance	Skew	±60°		
	Scans per charge	Up to 100,000		
	Minimum resolution	Code 39: 0.0762 mm PDF417: 0.1016 mm DataMatrix: 0.1016 mm		
Interface		USB, RS-232 The scanner supports the following protocols over USB: HID Keyboard (default mode), SNAPI, COM Port Emulation, USB CDC		
Power		5 VDC + / - 10% @ 360 mA (RMS typical)		
Light source		Aiming pattern: 655 nm Laser / Illumination: Warm white and red 634nm LEDs		
Ambient temperature range		Wireless Scanner Operating:-20 to +50°C, Storage: -40 to +70°C Wired Scanner Operating:-30 to +50°C, Storage: -40 to +70°C		
Environmental	Ambient humidity range	5%RH to 95%RH (with no icing or condensation),		
specifications	Drop specifications	Wireless Scanner: Withstands multiple 8 ft. / 2.4 m drops to concrete at room temperature. Wired Scanner: Withstands multiple 6.5 ft. / 2.0 m drops to concrete at -30° C to 50° C.		
	Degree of protection	IP65 and IP67		
	ESD	20 kV air discharge: 10 kV contact discharge		
	Ambient light immunity	0 to 10,037 foot-candles / 0 to 108,000 Lux (direct sunlight)		
Weight		Wireless Scanner: Approx. 402 g (with Battery) Wired Scanner: Approx. 304 g (without Cable)		
Dimensions		Wireless Scanner: 185 mm (H) \times 143 mm (D) \times 77 mm (W) Wired Scanner: 185 mm (H) \times 132 mm (D) \times 77 mm (W)		

Cradle

Power requirements for host-powered	5.0V ± 10%
Power requirements for external power supply	12.0V ± 5%
Typical current draw when not charging	80mA @ 5V; 30mA @ 12V
Typical current draw in safe charging mode	1200mA @ 5V (BC 1.2), 475mA (non-BC1.2); 700mA @ 12V
Typical current draw in safe charging mode	400mA @ 5V; 200mA @ 12V
Interfaces	USB, RS-232
Radio	Bluetooth, Up to 100 meters / 300 ft. in open air range / environment Serial Port & HID Profiles 2.402 to 2.480 GHz Adaptive Frequency Hopping (co-existence with 802.11 wireless networks) 3Mbit / s (2.1Mbit / s) for Classic Bluetooth 1Mbit / s (0.27Mbit / s) for Low Energy
Ambient temperature range	Operating : -20 to 50°C,Storage : -40 to 70°C
Charging temperature	0 to 40°C nominal, 5 to 35°C ideal
Ambient humidity range	5%RH to 95%RH (non-condensing)
ESD	25 kV air discharge 10 kV contact discharge
Weight	Approx. 390 g
Dimensions	82.6 mm (H) x 229.4 mm (D) x 99.8 mm (W)
Safety standards	EN/IEC 60950-1
EMC	IEC61000-4-(2,3,4,5,6,11)
EMI	FCC Part 15 Class B, ICES-003 Class B Japan VCCI Class B

OMRON 27


Handheld DPM Code Reader HS-360X series

Read Ranges

Barcode Type	Symbol Density	HS-360X Typical Working Ranges		
barcoue type		Near	Far	
Code 39	0.0762 mm	5 mm	71 mm	
Code 39	0.127 mm	5 mm	71 mm	
PDF417	0.1524 mm	5 mm*	81 mm	
PDF417	0.127 mm	10 mm	63 mm	
Data Matrix	0.254 mm	0 mm	86 mm	
	0.127 mm	10 mm	63 mm	
QR	0.254 mm	0 mm	86 mm	
UPC	0.3302 mm	25 mm*	147 mm*	

* Field of view/barcode width limited. Decode ranges measured with DPM Mode Off, photographic paper barcodes and under 30fcd ambient light conditions.

Dimensions

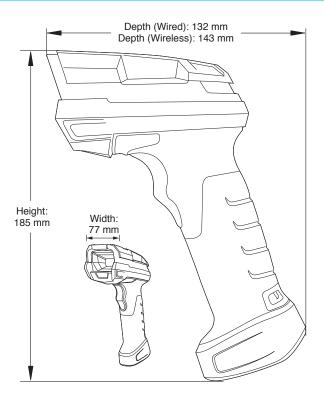



Laser Label Indications

This warning label is attached to the Code Reader. Never remove this label or place objects in front of it.

Auto Focus Multi Code Reader

Auto Focus Multi Code Reader



Powerful functionality in a compact design. The V430-F reliably reads different codes at different distances using the liquid lens.

V430-F: At a Glance

- Best in class: 5 Mpix *1
- Smallest in class *2
- Reading distance: 50 to 300 mm
- Maximum skew / pitch: 30°

V430–F: Available Codes



Refer to the V430 series catalog(Cat. No. Q258) for details.

Liquid lens for autofocus

The V430-F uses a liquid lens that does not need a drive mechanism or motor, providing unlimited autofocus and long life.

Quick troubleshooting from web browser

The V430-F has pre-installed software for setup. You can easily troubleshoot using a PC or tablet with the browser-based interface.

Print Quality Grading function

This function enables an in-line check of the relative quality change and the parameter where the change occurred.

Applicable standards • ISO / IEC 15415 • ISO / IEC 15416 • ISO / IEC TR29158

(AMD PM-1-2006) • ISO / IEC 16022

Laser Barcode Scanner

*2. Fixed mount multi code readers with 1.2 Mpix or more.Based on Omron investigation in March 2018.

Ordering Information

Code Readers

Number of pixels	Field of view	Reading distance *	Model
E million nivels (Color)	Wide View	Autofocus	V430-F000W50C
5 million pixels (Color)	Middle View	50 to 300 mm	V430-F000M50C
	Wide View	Autofocus	V430-F000W12M
1.2 million pixels	Middle View	50 to 300 mm	V430-F000M12M
(Monochrome)	Narrow View	Autofocus 40 to 150 mm	V430-F000N12M
	Middle View	Fixed Focus 50 mm	V430-F050M03M
0.3 million pixels (Monochrome)		Fixed Focus 81 mm	V430-F081M03M
(Fixed Focus 102 mm	V430-F102M03M

* Refer to Read Ranges on p.31 for detail.

Mounting Brackets

Туре	Model
L Bracket (It's possible to adjust the angle.)	V430-AM0
Mounting Block	V430-AM1

Cables

Туре	Connecter	Length	Model
	Straight	3m	V430-W8-3M
I/O Cable	Straight	5m	V430-W8-5M
I/O Cable	Right angle down	3m	V430-W8LD-3M
	Right angle up	3m	V430-W8LU-3M
	Straight	3m	V430-WE-3M
Eth ann at Calala	Straight	5m	V430-WE-5M
Ethernet Cable	Right angle down	3m	V430-WELD-3M
	Right angle up	3m	V430-WELU-3M
Cordset, M12 12-pin Socket to DB9 Socket with M12 12-pin Plug	Straight	3m	V430-W2-3M


Optics Options

Туре	Model
Front Window (for replacement)	V430-AF0
Diffuser	V430-AF1
Polarizer	V430-AF2
Right Angle Mirror	V430-AF3

Auto Focus Multi Code Reader V430-F series

Ratings and Specifications

	Model	V430-F000□50C	V430-F000□12M	V430-F□□□M03M			
Applicable codes	Bar code	Code 39, Code 128, BC412, ITF (Interleaved 2 of 5), EAN / UPC, Codabar, Code 93, Pharmacode, PLANET, POSTNET, Japanese Post, Australian Post, Royal Mail, Intelligent Mail, KIX, UPU, GS1 Databar (Composite)					
1	2D code	DataMatrix (ECC000-ECC200), GS1 DataMatrix, QR Code, Micro QR Code, Aztec Code, DotCode, PDF417, Micro PDF417, GS1 Databar (Stacked)					
	Number of reading digits	No upper limit (depends on bar width and reading distance)					
	Aiming light	Two Blue LEDs					
Reading performance *2		Inner LEDs: Four White and Four Red I	EDs (wave length: 625 nm)				
	Light source	Outer LEDs: Eight White LEDs	Outer LEDs: Eight Red LEDs (wave length: 617 nm)	Outer LEDs: Eight Red LEDs (wave length: 617 nm)			
	Reading distance / Field of view	Refer to Read Ranges on page 31 for detail.					
	Pitch angle (α)	±30°					
	Skew angle (β)	±30°					
	Tilt angle (γ)	±180°					
	Effective pixels	2592 (H) x 1944 (V)	1280 (H) x 960 (V)	752 (H) x 480 (V)			
	Color / Monochrome	Color CMOS	Monochrome CMOS	Monochrome CMOS			
mage capture levice	Shutter method	Rolling shutter	Global shutter	Global shutter			
evice	Frame rate	5 fps	42 fps	60 fps			
	Shutter speed	50 us to 100 ms					
mage logging	1	FTP					
leading trigger		External trigger (edge, level), Trigger k	by command (Ethernet, RS-232C)				
	Input signals	Trigger, New Master: 4.5 to 28 V rated (10 mA at 28 VDC)					
	Output signals	Output1, Output2, Output3: 1 to 28 V rated (100 mA Max. at 24 VDC)					
/ O pecifications	Communication specification	RS-232C, Ethernet TCP / IP					
	Ethernet specifications	100BASE-TX / 10BASE-T					
ndicator lamps	1	PASS (Green), TRIG (Amber), MODE (Amber), LINK (Amber), FAIL (Red), PWR (Green)					
ower voltage		5.0 to 30.0 VDC (including ripple)					
Consumption curr	ent	0.18 A (typ.) (at 24 VDC)					
	Ambient temperature range	Operating: 0 to 40°C, Storage: -50 to +75°C (with no icing or condensation)					
	Ambient humidity range	Operating: 5 to 95%RH, Storage: 5 to 85%RH (with no condensation)					
	Ambient atmosphere	No corrosive gases					
nvironmental pecifications	Vibration resistance (destruction)	10 to 55 Hz, double amplitude: 0.35 mm, X / Y / Z directions, 10 cycles / axis					
	Shock resistance (destruction)	150 m / s ² , 3 times in each X / Y / Z directions					
	Degree of protection	IEC 60529 IP67					
Veight	Main body only	Approx. 68 g					
veight	Packing weight	Approx. 174 g					
Dimensions	Main body Dimension	44.5 (W) \times 44.5 (D) \times 25.4 (H) mm					
Jinensions	Packing Dimension	170 (W) × 117 (D) × 86 (H) mm					
Accessories		Instruction manual ("Read me first"), C	Compliance Sheet (CE)				
ED class		Risk Group Exempt (IEC 62471-1)					
Safety standards		EN61326-1: 2013 FCC Part 15, Subpart B (Class A) UL60950-1					
Vaterial	Case	Aluminum diecast, alumite (black)					
hatenai	Reading window	Acrylic					
validation in its a	ictual work environment.	Omron's read capability validation standa nance is defined with center of field of vi		do its own			
3. Pitch angle	Skew angle	Tilt angle					



Auto Focus Multi Code Reader V430-F series

Read Ranges (Reference)

		Reading distance	Field of view (mm)		Reading ranges (mm)		Minimum 2D cell size (Reference)	
		(mm)	Horizontal	Vertical	Inside	Outside	(mm)	
			50	51	37	43	59	0.09
		Wide View V430-F000W50C		96	75	80	124	-
5 million	· · ·	5010000500	300	265	210	203	397	-
pixels		Middle View V430-F000M50C		35.5	25	46.5	54.5	0.09
				66	49	94	110	-
	v-			184	143	227	373	-
		140 L 10	50	57.2	42.9	37	64	0.13
		Wide View V430-F000W12M		109.5	82.2	74	131	-
				314.3	235.7	224	427	-
		Middle View V430-F000M12M		36.5	27.4	47.5	55	0.09
1.2 million pixels				71.4	53.6	88	116	-
	V430-F000IVITZIVI		300	198.4	148.8	185	400	-
	Narrow View V430-F000N12M		40	10	7.5	38.5	41.5	0.05
			81	20.6	15.4	78.5	83.5	-
			150	39	29.5	132	153	-
	Middle View	V430-F050M03M	50	35	21.5	43	58	0.13
0.3 million pixels		V430-F081M03M	81	49	33	65	97	0.19
pixels		V430-F102M03M	102	65	41	83	121	0.26

Dimensions

Code

V430-F

Reader 52.5 56.9 PASSA UTERA VIENA UTERA MIGORE UTERA LINIX UTERA PAJL UTERA 44.5 M3 X .5 B 5mm DP. 44.5 OPTICAL CENTER 6 -0-25.4 Ŧ 12.7 12.9 0 Đ . 16.0 14.2 38.0 M3 X .5 . E 5mm DP. 14.2 1 16.0 . B

Related Manuals

Cat. No.	Model	Manual
Z392	V430	Auto Focus Multi Code Reader V430-F-series User's Manual

(Unit: mm)

Laser Barcode Scanner

Code Verification System

Desktop Barcode Verification System



Comes with handheld top cover (not shown) to keep label in position on viewing window.

LVS-9510: At a Glance

- Validates to ISO / IEC, ANSI, GS1, and UDI print quality standards.
- Software upgrade options include Multi-Sector for verification of multiple barcodes on a label.
- 21 CFR Part 11 compliant-ready.
- Certified by GS1 US.
- Supports 15 languages with the ability to add more languages.
- Quality data reporting for auditing purposes.
- Manage operator permissions using LVS-95XX software or using Microsoft Active Directory.
- Includes NIST-Traceable Calibrated Conformance Standard Test Card for calibrating the system.

LVS-9510: Avail able Symbologies



Please see the Ratings and Specifications for a complete list of supported symbologies.

The LVS-9510 is a high-performance system for offline verification of barcodes to ISO / IEC, ANSI, GS1, and UDI standards.

The LVS-9510 is unique in the world of ISO verification due to its ease of use and ability to verify linear (1D) and two-dimensional (2D) codes without any change of equipment. The system automatically determines the symbology and aperture needed to evaluate the code and identifies and highlights trouble spots.

The LVS-9510 offers a "stitching" feature that allows grading of barcodes that are larger than the field of view.

ISO / ANSI for 1D

LVS-95XX series barcode verifiers inspect all nine ISO / ANSI parameters for linear (1D) barcodes, have the ability to identify blemishes, and can perform simple human-readable validation.

ISO / ANSI for 2D

The LVS-95XX series verifies 2D codes and reports all parameters as specified in the applicable symbology specification.

Analytical Tools

Equipped with numerous analytical tools to identify and evaluate barcode errors. Problems are color-coded to make problem solving easy.

Software

LVS-95XX software includes GS1 System Symbol Specification Tables. GS1 tables set standards for barcode data structure and how to maintain the quality of codes during barcode creation. OMRON Microscan offers an online training course on GS1 tables and how these apply to different organizations.

Software Upgrade: EAIV

The Enhanced Application Identifier Verification (EAIV) option verifies that all GS1 Application Identifiers, such as Expiration Date, Global Trade Item Number, GIbal Trade Item Number, embedded in the data structure of a GS1 barcode match the data pr grammed in the EAIV feature by the user.

User Permission Options

Manage permissions through LVS-95XX software: Passwords are stored in a local database. All passwords are encrypted, include an expiration date, and count failed password attempts.

Manage permissions through Microsoft Active Directory: User privileges are based on Microsoft authentication and LVS-95XX permissions are assigned based on group membership.

Ordering Information

Code Verification Systems

Туре	Field of view	Model	
	76mm	9510-5-3.0	
LVS-9510 Verifier	102mm	9510-5-4.0	
LVS-9510 verifier	144mm	9510-5-4.5	
	159mm	9510-5-6.250	

Accessories

Tuno	Model
Туре	Niddel
EAN / UPC Calibrated Conformance Test Card	98-CAL020
GS1-128 Calibrated Conformance Test Card	98-CAL021
Data Matrix Calibrated Conformance Test Card	98-CAL010
LVS-9510 and LVS-958 Software Upgrade Option: Multi-Sector Verification	98-SOF0039
LVS-95 🗆 Software Upgrade Option: Automatic Login Feature	98-SOF0056
Software Upgrade Option: EAIV (Enhanced Application Identifier Verification)	98-SOF0088
LVS-95 IQ-OQ Validation Procedure Guidelines, v. 4.3 and later (includes text cards)	98-LVS0077
Validation Test Cards (25 test cards)	98-LVS-VTC

Laser Barcode Scanner

Ratings and Specifications

		AIAG / DAMA / JAPIA / Odette
		ALDI
		ISO / IEC TR 29158 (DPM Cat 0)
		DHL
		FPMAJ
		French CIP
		GS1 General Specifications
		HDMA Guidelines
		Health Industry Barcode (HIBC)
	Application standards	
		IFAH
		ISO / IEC 15415 / 15416
		Italian Pharmacode
		Japan Codabar
		Laetus Miniature Pharmacode
		Laetus Pharmacode
		Laetus Standard
		MIL-STD-130N Change 1
		Pharmacy Product Number (PPN)
		Automatic GS1 or ISO
		Chinese Sensible (Han Xin) Code
		GS1 General Specifications
Supported standards		GS1 (NTIN)
supporteu stariadius		HDMA Guidelines
		Miniature Pharmacode
		Postal (EIB, USPS IMB / Code 128, POSTNET, Japan Post)
		PPN Code
		PZN-big, normal, small (German Pharmacode)
		PZN 7 and PZN 8
		Data Matrix for Healthcare
		Data Matrix (ECC 200)
		EAN/UPC
		EAN / UPC and extended codes
		EAN / UPC with CC
	GS1 US certification	GS1 DataBar Omnidirectional
		ITF-14
		GS1 DataBar-14 with CC (formerly RSS-14 with CC)
	ISO conformance standards	UCC / EAN with Supplementals
		UCC / EAN-128
		UCC / EAN-128 with CC
		ISO / IEC 15415, 15416, 15418
		ISO / IEC 15426-1, 15426-2
		ISO / IEC TR29158 (DPM Cat 0) / AIM DPM-1-2006
		All supported ISO / IEC symbology specifications
		Codabar
		Code 128, Code 39, Code 93
		GS1 DataBar Expanded and Limited
		DataBar
		DataBar Expanded and Limited
		DataBar Omnidirectional
		DataBar Stacked and Truncated
		EAN / JAN-13
		EAN / JAN-8
		Enterprise Intelligent Barcode (EIB) 4-State (4SB)
		GS1-128
	Linear (1D) symbologies	Hanxin Code
		HIBC
		Interleaved 2 of 5 (ITF)
		Interleaved 2 of 5 (ITF) ITF-14
		Interleaved 2 of 5 (ITF) ITF-14 Japan Post
		Interleaved 2 of 5 (ITF) ITF-14 Japan Post MSI Plessey
		Interleaved 2 of 5 (ITF) ITF-14 Japan Post
		Interleaved 2 of 5 (ITF) ITF-14 Japan Post MSI Plessey Pharmacode–Italian and Laetus
Supported symbologies		Interleaved 2 of 5 (ITF) ITF-14 Japan Post MSI Plessey Pharmacode–Italian and Laetus PZN 7, PZN 8
Supported symbologies		Interleaved 2 of 5 (ITF) ITF-14 Japan Post MSI Plessey Pharmacode–Italian and Laetus PZN 7, PZN 8 UPC-A, UPC-E
Supported symbologies		Interleaved 2 of 5 (ITF) ITF-14 Japan Post MSI Plessey Pharmacode–Italian and Laetus PZN 7, PZN 8 UPC-A, UPC-E USPS-128
Supported symbologies		Interleaved 2 of 5 (ITF) ITF-14 Japan Post MSI Plessey Pharmacode–Italian and Laetus PZN 7, PZN 8 UPC-A, UPC-E USPS-128 USPS Intelligent Mail Barcode (4-State Customer Barcode)
Supported symbologies		Interleaved 2 of 5 (ITF) ITF-14 Japan Post MSI Plessey Pharmacode–Italian and Laetus PZN 7, PZN 8 UPC-A, UPC-E USPS-128 USPS Intelligent Mail Barcode (4-State Customer Barcode) Aztec
Supported symbologies		Interleaved 2 of 5 (ITF) ITF-14 Japan Post MSI Plessey Pharmacode–Italian and Laetus PZN 7, PZN 8 UPC-A, UPC-E USPS-128 USPS Intelligent Mail Barcode (4-State Customer Barcode)
Supported symbologies		Interleaved 2 of 5 (ITF) ITF-14 Japan Post MSI Plessey Pharmacode–Italian and Laetus PZN 7, PZN 8 UPC-A, UPC-E USPS-128 USPS-Intelligent Mail Barcode (4-State Customer Barcode) Aztec DataBar with CC-A, CC-B, or CC-C
Supported symbologies		Interleaved 2 of 5 (ITF) ITF-14 Japan Post MSI Plessey Pharmacode–Italian and Laetus PZN 7, PZN 8 UPC-A, UPC-E USPS-128 USPS Intelligent Mail Barcode (4-State Customer Barcode) Aztec DataBar with CC-A, CC-B, or CC-C EAN/JAN-13 with CC-A, CC-B, or CC-C
Supported symbologies		Interleaved 2 of 5 (ITF) ITF-14 Japan Post MSI Plessey Pharmacode–Italian and Laetus PZN 7, PZN 8 UPC-A, UPC-E USPS-128 USPS Intelligent Mail Barcode (4-State Customer Barcode) Aztec DataBar with CC-A, CC-B, or CC-C EAN/JAN-13 with CC-A, CC-B, or CC-C
Supported symbologies		Interleaved 2 of 5 (ITF) ITF-14 Japan Post MSI Plessey Pharmacode–Italian and Laetus PZN 7, PZN 8 UPC-A, UPC-E USPS-128 USPS Intelligent Mail Barcode (4-State Customer Barcode) Aztec DataBar with CC-A, CC-B, or CC-C EAN/JAN-13 with CC-A, CC-B, or CC-C EAN/JAN-8 with CC-A, CC-B, or CC-C ECN/JAN-8 with CC-A, CC-B, or CC-C
Supported symbologies		Interleaved 2 of 5 (ITF) ITF-14 Japan Post MSI Plessey Pharmacode–Italian and Laetus PZN 7, PZN 8 UPC-A, UPC-E USPS-128 USPS Intelligent Mail Barcode (4-State Customer Barcode) Aztec DataBar with CC-A, CC-B, or CC-C EAN/JAN-13 with CC-A, CC-B, or CC-C EAN/JAN-8 with CC-A, CC-B, or CC-C ECC-200 (Data Matrix) • EIB CMDM
Supported symbologies		Interleaved 2 of 5 (ITF) ITF-14 Japan Post MSI Plessey Pharmacode–Italian and Laetus PZN 7, PZN 8 UPC-A, UPC-E USPS-128 USPS Intelligent Mail Barcode (4-State Customer Barcode) Aztec DataBar with CC-A, CC-B, or CC-C EAN/JAN-13 with CC-A, CC-B, or CC-C EAN/JAN-8 with CC-A, CC-B, or CC-C ECC-200 (Data Matrix) • EIB CMDM • French CIP
Supported symbologies	Two dimensional (CD)	Interleaved 2 of 5 (ITF) ITF-14 Japan Post MSI Plessey Pharmacode–Italian and Laetus PZN 7, PZN 8 UPC-A, UPC-E USPS-128 USPS Intelligent Mail Barcode (4-State Customer Barcode) Aztec DataBar with CC-A, CC-B, or CC-C EAN/JAN-13 with CC-A, CC-B, or CC-C EAN/JAN-8 with CC-A, CC-B, or CC-C ECC-200 (Data Matrix) • EIB CMDM • French CIP • GS1 Data Matrix
Supported symbologies	Two-dimensional (2D)	Interleaved 2 of 5 (ITF) ITF-14 Japan Post MSI Plessey Pharmacode–Italian and Laetus PZN 7, PZN 8 UPC-A, UPC-E USPS-128 USPS Intelligent Mail Barcode (4-State Customer Barcode) Aztec DataBar with CC-A, CC-B, or CC-C EAN/JAN-13 with CC-A, CC-B, or CC-C EAN/JAN-8 with CC-A, CC-B, or CC-C ECC-200 (Data Matrix) • EIB CMDM • French CIP
Supported symbologies	Two-dimensional (2D) symbologies	Interleaved 2 of 5 (ITF) ITF-14 Japan Post MSI Plessey Pharmacode–Italian and Laetus PZN 7, PZN 8 UPC-A, UPC-E USPS-128 USPS Intelligent Mail Barcode (4-State Customer Barcode) Aztec DataBar with CC-A, CC-B, or CC-C EAN/JAN-13 with CC-A, CC-B, or CC-C EAN/JAN-8 with CC-A, CC-B, or CC-C ECC-200 (Data Matrix) • EIB CMDM • French CIP • GS1 Data Matrix
Supported symbologies		Interleaved 2 of 5 (ITF) ITF-14 Japan Post MSI Plessey Pharmacode–Italian and Laetus PZN 7, PZN 8 UPC-A, UPC-E USPS-128 USPS Intelligent Mail Barcode (4-State Customer Barcode) Aztec DataBar with CC-A, CC-B, or CC-C EAN/JAN-13 with CC-A, CC-B, or CC-C EAN/JAN-8 with CC-A, CC-B, or CC-C ECC-200 (Data Matrix) • EIB CMDM • French CIP • GS1 Data Matrix • NTIN and PPN GS1-128 with CC-A, CC-B, or CC-C
Supported symbologies		Interleaved 2 of 5 (ITF) ITF-14 Japan Post MSI Plessey Pharmacode–Italian and Laetus PZN 7, PZN 8 UPC-A, UPC-E USPS-128 USPS Intelligent Mail Barcode (4-State Customer Barcode) Aztec DataBar with CC-A, CC-B, or CC-C EAN/JAN-13 with CC-A, CC-B, or CC-C EAN/JAN-8 with CC-A, CC-B, or CC-C ECC-200 (Data Matrix) • EIB CMDM • French CIP • GS1 Data Matrix • NTIN and PPN GS1-128 with CC-A, CC-B, or CC-C MaxiCode
Supported symbologies		Interleaved 2 of 5 (ITF) ITF-14 Japan Post MSI Plessey Pharmacode–Italian and Laetus PZN 7, PZN 8 UPC-A, UPC-E USPS-128 USPS Intelligent Mail Barcode (4-State Customer Barcode) Aztec DataBar with CC-A, CC-B, or CC-C EAN/JAN-13 with CC-A, CC-B, or CC-C EAN/JAN-13 with CC-A, CC-B, or CC-C EAN/JAN-8 with CC-A, CC-B, or CC-C ECC-200 (Data Matrix) • EIB CMDM • French CIP • GS1 Data Matrix • NTIN and PPN GS1-128 with CC-A, CC-B, or CC-C MaxiCode Micro QR Code
Supported symbologies		Interleaved 2 of 5 (ITF) ITF-14 Japan Post MSI Plessey Pharmacode–Italian and Laetus PZN 7, PZN 8 UPC-A, UPC-E USPS-128 USPS Intelligent Mail Barcode (4-State Customer Barcode) Aztec DataBar with CC-A, CC-B, or CC-C EAN/JAN-13 with CC-A, CC-B, or CC-C EAN/JAN-8 with CC-A, CC-B, or CC-C ECC-200 (Data Matrix) • EIB CMDM • French CIP • GS1 Data Matrix • NTIN and PPN GS1-128 with CC-A, CC-B, or CC-C MaxiCode Micro QR Code Micro QR Code Micro QR Code
Supported symbologies		Interleaved 2 of 5 (ITF) ITF-14 Japan Post MSI Plessey Pharmacode–Italian and Laetus PZN 7, PZN 8 UPC-A, UPC-E USPS-128 USPS Intelligent Mail Barcode (4-State Customer Barcode) Aztec DataBar with CC-A, CC-B, or CC-C EAN/JAN-13 with CC-A, CC-B, or CC-C EAN/JAN-8 with CC-A, CC-B, or CC-C ECC-200 (Data Matrix) • EIB CMDM • French CIP • GS1 Data Matrix • NTIN and PPN GS1-128 with CC-A, CC-B, or CC-C MaxiCode Micro QR Code Micro PDF417 PDF417
Supported symbologies		Interleaved 2 of 5 (ITF) ITF-14 Japan Post MSI Plessey Pharmacode–Italian and Laetus PZN 7, PZN 8 UPC-A, UPC-E USPS-128 USPS Intelligent Mail Barcode (4-State Customer Barcode) Aztec DataBar with CC-A, CC-B, or CC-C EAN/JAN-13 with CC-A, CC-B, or CC-C EAN/JAN-8 with CC-A, CC-B, or CC-C ECC-200 (Data Matrix) • EIB CMDM • French CIP • GS1 Data Matrix • NTIN and PPN GS1-128 with CC-A, CC-B, or CC-C MaxiCode Micro QR Code Micro PDF417 PDF417 QR Code
Supported symbologies		Interleaved 2 of 5 (ITF) ITF-14 Japan Post MSI Plessey Pharmacode–Italian and Laetus PZN 7, PZN 8 UPC-A, UPC-E USPS-128 USPS Intelligent Mail Barcode (4-State Customer Barcode) Aztec DataBar with CC-A, CC-B, or CC-C EAN/JAN-13 with CC-A, CC-B, or CC-C EAN/JAN-8 with CC-A, CC-B, or CC-C ECC-200 (Data Matrix) • EIB CMDM • French CIP • GS1 Data Matrix • NTIN and PPN GS1-128 with CC-A, CC-B, or CC-C MaxiCode Micro QR Code Micro PDF417 PDF417

* Contact OMRON for a complete list of supported ECC-200 (Data Matrix) codes.

Laser Barcode Scanner

Minimum PC requirements (PC supplied by customer)		Windows® 7 Professional, Windows® 8.1 Pro, or Windows® 10 Pro		
		Intel [®] Core [™] 2 Duo Processor or higher		
		• 2 GB RAM		
		800 x 600 screen resolution		
		One USB 2.0 port available per unit		
Camera		Monochrome 5 million pixels		
Illumination		White LED, red filter (660 nm)		
Environmental	Ambient temperature range	Operating: 10 to 30°C, Storage: 0 to 40°C		
		Operating: 20% to 80% (with no icing or condensation),		
specifications	Ambient humidity range	Storage: 20% to 95% (with no icing or condensation)		
Communications		USB 2.0 A plug to B plug cable, 1.8 m		
Power voltage		12 VDC at 2.5 A max.		
	Unpackaged standalone	Approx. 2.72 kg		
Weight	Shipping weight	Approx. 5.89 kg		
		(Includes all items packaged in shipping box, such as power supply and cables)		
Dimensions		279.4 x 228.6 x 279.4 mm (H x D x W) (Includes rubber feet on system base)		
Dimensions		139.7 x 190.5 mm		
Top cover	Weight	Approx. 155.92 g		
Safety standards		FCC, CE, UL		
		Included with 9510-5-3.0: EAN / UPC Calibrated Conformance Standard Test Card		
Calibrated Conformance Tes	st Card	Included with 9510-5-4.0: EAN / UPC Calibrated Conformance Standard Test Card		
(Included with system)		Included with 9510-5-4.5: EAN / UPC Calibrated Conformance Standard Test Card		
		Included with 9510-5-6.250: GS1-128 Calibrated Conformance Standard Test Card		
Calibrated Conformance Test Card (Option)		EAN / UPC Calibrated Conformance Standard Test Card (Model: 98-CAL020)		
		GS1-128 Calibrated Conformance Standard Test Card (Model: 98-CAL021)		

Options

Field of View Options

Model	Minimum X dim	Field of view	
Model	1D	2D	(approximate)
9510-5-3.0	0.10 mm	0.15 mm	76 mm
9510-5-4.0	0.15 mm	0.23 mm	102 mm
9510-5-4.5	0.18 mm	0.25 mm	144 mm
9510-5-6.250	0.24 mm	0.33 mm	159 mm

Dimensions



(Unit: mm)

OMRON 35

Code Verification System LVS-9585 series


Portable Barcode Verification System



LVS-9585: At a Glance

- Verify a broad variety of direct part marks as well as 1D and 2D printed barcodes with a single model.
- Software automatically selects best lighting performance from integrated red or white dome and 30° angle lighting.
- Validates printed barcodes to ISO / IEC, ANSI, GS1, and UDI print quality standards.
- Validates direct part marks (DPM) to ISO, MIL-STD-130, and GS1 standards.
- Software options include Multi-Sector for verification of multiple barcodes and GS1 AI content check.
- 21 CFR Part 11 compliant-ready.
- Supports 15 languages with the ability to add more.
- ${\boldsymbol{\cdot}}$ Export verification reports to Excel or SQL database.
- Includes NIST-Traceable Calibrated Conformance
- Standard Test Card for calibrating the system.
- Optional adjustable mounting stand.

LVS–9585: Avai lable Symbologies

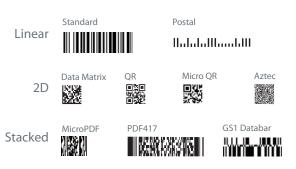

Please see Ratings and Specifications for a complete list of supported symbologies.

The LVS-9585 is a high-performance handheld solution for off-line barcode verification to ISO / IEC, ANSI, and GS1 standards. Featuring a high-resolution 5.0 megapixel camera, the LVS-9585 reads and analyzes linear (1D) and two-dimensional (2D) codes up to 76.19 mm wide and up to 57.15 mm tall. 1D and 2D direct part marks (DPM) of up to 44 mm x 44 mm can be verified to MIL-STD-130, ISO, and GS1 standards.

The LVS-9585 verifies multiple symbologies, including any combination of linear, 2D (Data Matrix, QR Code, and Aztec Code), and stacked linear (PDF417, MicroPDF, and Composite codes).

Powered by a 6.5-foot (2.0 m) USB 2.0 cable, the LVS-9585 verifies barcodes on a wide range of surfaces including plastics, PCBs, metal, cardboard, and shipping containers.

ISO/ANSI for 1D

LVS-95XX series barcode verifiers inspect all nine ISO and ANSI parameters for linear (1D) barcodes, have the ability to identify blemishes, and can perform simple human-readable validation.

ISO/ANSI for 2D

The LVS-95XX series verifies 2D codes and reports all parameters as specified in the applicable symbology specification.

Analytical Tools

Equipped with numerous analytical tools to identify and evaluate barcode errors. Problems are color-coded to make problem solving easy.

Software

LVS-95XX software includes GS1 System Symbol Specification Tables. GS1 tables set standards for barcode data structure and how to maintain the quality of codes during barcode creation. OMRON Microscan offers an onlinetraining course on GS1 tables and how these apply to different organizations.

Software Upgrade: EAIV

The Enhanced Application Identifier Verification (EAIV) option verifies that all GS1 Application Identifiers, such as Expiration Date, Global Trade Item Number (GTIN), and Batch Number, embedded in the datastructure of a GS1 barcode match the data programmed in the EAIV feature by the user.

User Permission Options

Manage permissions through LVS-95XX software: Passwords are stored in a local database. All passwords are encrypted, include an expiration date, and count failed password attempts.

Manage permission through Microsoft Active Directory: User privileges are based on Microsoft authentication and LVS-95XX permissions are assigned based on group membership.

Portability

Connects to the latest Windows OS tablets.

Multi Code Reader

aser Barcode Scanner

Ordering Information

Code Verification Systems

Туре	Model
LVS-9585 Handheld 1D, 2D & DPM Barcode Verification, High Resolution	9585-DPM-HD
LVS-9585 Handheld 1D, 2D & DPM Barcode Verification, Red and White Light	9585-DPM

Accessories

Туре	Model
EAN / UPC Calibrated Conformance Test Card	98-CAL020
GS1-128 Calibrated Conformance Test Card	98-CAL021
Data Matrix Calibrated Conformance Test Card	98-CAL010
LVS-9510 and LVS-958 Software Upgrade Option: Multi-Sector Verification	98-SOF0039
LVS-95 🗆 Software Upgrade Option: Automatic Login Feature	98-SOF0056
Software Upgrade Option: EAIV (Enhanced Application Identifier Verification)	98-SOF0088
LVS-9580 Upgrade (1D / 2D to DPM)	98-SOF0095
LVS-95 I IQ-OQ Validation Procedure Guidelines, v. 4.3 and later (includes text cards)	98-LVS0077
Validation Test Cards (25 test cards)	98-LVS-VTC
LVS-9580 / 9585 Mounting Stand Adapter Bracket for use with AMSCOPE BSS-140	98-9000200-01

Laser Barcode Scanner

Ratings and Specifications

		AIAG / DAMA / JAPIA / Odette
		ALDI
		ISO / IEC TR 29158
		DHL
		FPMAJ
		French CIP
		GS1 General Specifications
		HDMA Guidelines
		Health Industry Barcode (HIBC)
	Application standards	ISO / IEC 15415 / 15416
		Italian Pharmacode
		Japan Codabar
		Laetus Miniature Pharmacode
		Laetus Pharmacode
		Laetus Standard
		MIL-STD-130N Change 1
		Pharmacy Product Number (PPN)
		Automatic GS1 or ISO
Supported standards		GS1 (NTIN)
		Miniature Pharmacode
		Postal (EIB, USPS IMB / Code 128, POSTNET, Japan Post)
		PZN-big, normal, small (German Pharmacode)
		Data Matrix for Healthcare
		Data Matrix (ECC 200)
		EAN/UPC
		EAN/UPC and Extended Codes
		EAN/UPC with CC
	GS1 US certification	GS1 DataBar Omnidirectional
	dor ob certification	ITF-14
		GS1 DataBar-14 with CC (formerly RSS-14 with CC)
		UCC / EAN with Supplementals
		UCC / EAN-128
		UCC / EAN-128 with CC
		ISO / IEC 15415, 15416, 15418
		ISO / IEC 15426-1, 15426-2
	ISO conformance standards	ISO / IEC TR29158(DPM Cat 0, 1, 2) / AIM DPM-1-2006
		All supported ISO / IEC symbology specifications
		Codabar
		Code 128, Code 39, Code 93
		GS1 DataBar Expanded and Limited
		DataBar
		DataBar Expanded and Limited
		DataBar Omnidirectional
		DataBar Stacked and Truncated
		EAN/JAN-13
		EAN/JAN-8
		Enterprise Intelligent Barcode (EIB) 4-State (4SB)
		French CIP
		GS1-128
	Linear (1D) symbologies	
		Hanxin Code
		HIBC
		Interleaved 2 of 5 (ITF)
		ITF-14
		Japan Post
		MaxiCode
Supported symbologies		MSI Plessey
- sponced symbologies		Pharmacode–Italian and Laetus
		PTAIMACODE-Italian and Laetus
		UPC-A and UPC-E
		USPS-128
		USPS Intelligent Mail Barcode (4-State Barcode)
		Aztec Code
		DataBar with CC-A, CC-B, or CC-C
		EAN / JAN-13 with CC-A, CC-B, or CC-C
		EAN / JAN-8 with CC-A, CC-B, or CC-C
		ECC-200 (Data Matrix)
	Two-dimensional (2D) symbologies	
		Enterprise Intelligent Barcode (EIB) Complex Mail Data Marks (CMDM)
		GS1-128 with CC-A, CC-B, or CC-C
		Micro QR Code
		MicroPDF417
		PDF417
		QR Code
		QR Code UPC-A with CC-A, CC-B, or CC-C

* Contact OMRON for a complete list of supported ECC-200 (Data Matrix) codes. CC=Composite Components

Laser Barcode Scanner

Code Verification System LVS-9585 series

	• Windows [®] 7 Pro SP1 or Windows [®] 10 Pro
	• Intel® Core™ i3 or higher
(PC supplied by customer)	• 4 GB RAM
	• 800 x 600 screen resolution;
	One USB 2.0 port available per unit
DPM (9585-DPM)	44 x 44 mm
HD (9585-DPM-HD)	33 x 30 mm
	1D = 4.0 mils (0.10 mm)
	2D = 5.9 mils (0.15 mm)
HD (9585-DPM-HD)	2D = 2.0 mils (0.05 mm)
	5 million pixels
	Object distance: Contact
	Red dome (660 nm), white dome, 30° angle
Ambient temperature range	Operating: 4 to 46°C, Storage: -20 to 60°C
Ambient humidity range	Operating: 20% to 80% (with no icing or condensation),
	Storage: 20% to 95% (with no icing or condensation)
	USB 2.0 A plug to Mini-B plug cable, 2 m
	USB powered 5 VDC at 400 mA
Unpackaged standalone	Approx. 0.68 kg
Shipping weight	Approx. 1.51 kg (Includes all cables and other items packaged in shipping box)
·	215.9 x 139.7 x 120.6 mm (H x D x W)
st Card	EAN / UPC Calibrated Conformance Standard Test Card
	FCC, CE, UL
	DPM (9585-DPM) HD (9585-DPM-HD) DPM (9585-DPM) HD (9585-DPM-HD) Ambient temperature range Ambient humidity range

Options



LVS-9580 / 9585 Mounting Stand Adapter Bracket Model: 98-9000200-01

This adapter bracket is designed for use with an Amscope model BSS-140 stand. Together with the BSS-140, the assembly allows the verifier to be held in a fixed position, raised to a 368 mm maximum height and 495 mm horizontal adjustment. The verifier can be rotated a full 360° while mounted, allowing for alignment against the DPM symbol for a broad variety of parts.

Dimensions



(Unit: mm)

Code Verification System LVS-9580 series


Portable Barcode Verification System



LVS-9580: At a Glance

- Stitching feature to grade barcodes larger than the field of view.
- Ideal for multiple line production and warehouse environments.
- Validates printed barcodes to ISO / IEC, ANSI, GS1, and UDI print quality standards.
- Validates direct part marks (DPM) to ISO, MIL-STD-130, and GS1 standards.
- Software upgrade options include Multi-Sector for verification of multiple barcodes on a label.
- 21 CFR Part 11 compliant-ready.
- Supports 15 languages with the ability to add more.
- Quality data reporting for auditing purposes.
- Includes NIST-Traceable Calibrated Conformance Standard Test Card for calibrating the system.

LVS-9580: Available Symbologies

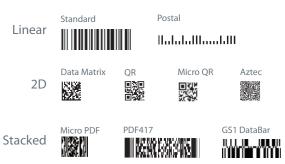

Please see the Ratings and Specifications for a complete list of supported symbologies.

The LVS-9580 is a high-performance handheld solution for off-line barcode verification to ISO / IEC, ANSI, GS1, and UDI standards. Featuring a high-resolution 5.0 megapixel camera, the LVS-9580 reads and analyzes linear (1D) and two-dimensional (2D) codes up to 76.19 mm wide and up to 57.15 mm tall. 1D and 2D direct part marks (DPM) of up to 44 mm x 44 mm can be verified to MIL-STD-130, ISO, and GS1 standards.

The LVS-9580 verifies multiple symbologies, including any combination of linear, 2D (Data Matrix, QR Code, and Aztec Code), and stacked linear (PDF417, MicroPDF, and Composite codes).

Powered by a 2.0 m USB 2.0 cable, the LVS-9580 verifies barcodes on a wide range of surfaces including plastics, PCBs, metal, cardboard, and shipping containers.

ISO/ANSI for 1D

LVS-95XX series barcode verifiers inspect all nine ISO and ANSI parameters for linear (1D) barcodes, have the ability to identify blemishes, and can perform simple human-readable validation.

ISO/ANSI for 2D

The LVS-95XX series verifies 2D codes and reports all parameters as specified in the applicable symbology specification.

Analytical Tools

Equipped with numerous analytical tools to identify and evaluate barcode errors. Problems are color-coded to make problem solving easy.

Software

LVS-95XX software includes GS1 System Symbol Specification Tables. GS1 tables set standards for barcode data structure and how to maintain the quality of codes during barcode creation. OMRON Microscan offers an online training course on GS1 tables and how these apply to different organizations. Software Upgrade: EAIV The Enhanced Application Identifier Verification (EAIV) option verifies that all GS1 Application Identifiers, such as Expiration Date, Global Trade Item Number (GTIN), and Batch Number, embedded in the data structure of a GS1 barcode match the data programmed in the EAIV feature by the user.

User Permission Options

Manage permissions through LVS-95XX software: Passwords are stored in a local database. All passwords are encrypted, include an expiration date, and count failed password attempts.

Manage permissions through Microsoft Active Directory: User privileges are based on Microsoft authentication and LVS-95XX permissions are assigned based on group membership.

Portability

Connects to the latest Windows OS tablets.

aser Barcode Scanner

Ordering Information

Code Verification Systems

Туре	Model
LVS-9580 Handheld 1D & 2D Barcode Verification	9580-C-3
LVS-9580 Handheld 1D, 2D & DPM Barcode Verification	9580-DPM
LVS-9580 Handheld 1D, 2D & DPM Barcode Verification, High Resolution	9580-DPM-HD

Accessories

Туре	Model
EAN / UPC Calibrated Conformance Test Card	98-CAL020
GS1-128 Calibrated Conformance Test Card	98-CAL021
Data Matrix Calibrated Conformance Test Card	98-CAL010
LVS-9510 and LVS-958 Software Upgrade Option: Multi-Sector Verification	98-SOF0039
LVS-95	98-SOF0056
Software Upgrade Option: EAIV (Enhanced Application Identifier Verification)	98-SOF0088
LVS-9580 Upgrade (1D / 2D to DPM)	98-SOF0095
LVS-95 I IQ-OQ Validation Procedure Guidelines, v. 4.3 and later (includes text cards)	98-LVS0077
Validation Test Cards (25 test cards)	98-LVS-VTC
LVS-9580 / 9585 Mounting Stand Adapter Bracket for use with AMSCOPE BSS-140	98-9000200-01

Ratings and Specifications

Application standards	ALDI ISO / IEC TR 29158 DHL FPMAJ French CIP GS1 General Specifications HDMA Guidelines Health Industry Barcode (HIBC) IFAH ISO / IEC 15415 / 15416 Italian Pharmacode Japan Codabar Laetus Miniature Pharmacode Laetus Standard MIL-STD-130N Change 1 Pharmacy Product Number (PPN) Automatic GS1 or ISO GS1 (NTIN) Miniature Pharmacode Postal (EIB, USPS IMB / Code 128, POSTNET, Japan Post) PZN-big normal small (German Pharmacode) Data Matrix for Healthcare Data Matrix (ECC 200)
GS1 (NTIN)	PZN-big normal small (German Pharmacode) Data Matrix for Healthcare Data Matrix (ECC 200) EAN / UPC
	EAN / UPC and Extended Codes EAN / UPC with CC GS1 DataBar Omnidirectional ITF-14 GS1 DataBar-14 with CC (formerly RSS-14 with CC) UCC / EAN with Supplementals UCC / EAN-128
ISO conformance standards	UCC / EAN-128 UCC / EAN-128 with CC ISO / IEC 15415, 15416, 15418 ISO / IEC 15426-1, 15426-2 ISO / IEC TR29158 (DPM Cat 0) / AIM DPM-1-2006
	GS1 (NTIN)

Code Verification System LVS-9580 series

		Codabar
		Code 128 Code 39 Code 93
		GS1 DataBar Expanded and Limited
		DataBar
		DataBar Expanded and Limited
		DataBar Omnidirectional
		DataBar Stacked and Truncated EAN/JAN-13
		EAN/JAN-15 EAN/JAN-8
		Enterprise Intelligent Barcode (EIB) 4-State (4SB)
	Lizzar (1D) sumbala siza	French CIP
		GS1-128
	Linear (1D) symbologies	Hanxin Code
		HIBC
		Interleaved 2 of 5 (ITF) ITF-14
		Japan Post
		MaxiCode
Supported symbologies		MSI Plessey
		Pharmacode–Italian and Laetus
		PZN 7 and PZN 8
		UPC-A and UPC-E
		USPS-128
		USPS Intelligent Mail Barcode (4-State Barcode) Aztec Code
		DataBar with CC-A, CC-B, or CC-C
		EAN/JAN-13 with CC-A, CC-B, or CC-C
		EAN/JAN-8 with CC-A, CC-B, or CC-C
		ECC-200 (Data Matrix)
	Two-dimensional (2D)	Enterprise Intelligent Barcode (EIB) Complex Mail Data Marks (CMDM)
	symbologies	GS1-128 with CC-A, CC-B, or CC-C
		Micro QR Code MicroPDF417
		PDF417
		QR Code
		UPC-A with CC-A, CC-B, or CC-C
		UPC-E with CC-A, CC-B, or CC-C
		• Windows®7 Pro SP1 or Windows®10 Pro
		• Intel® Core™ i3 or higher
Minimum PC requirements	s (PC supplied by customer)	• 4 GB RAM
		800 x 600 screen resolution
		One USB 2.0 port available per unit
	Standard (9580-C-3)	76.19 mm horizontal
Field of view		76.19 mm horizontal 57.15 mm vertical
Field of view	Standard (9580-C-3) DPM (9580-DPM)	76.19 mm horizontal
Field of view		76.19 mm horizontal 57.15 mm vertical
Field of view	DPM (9580-DPM)	76.19 mm horizontal 57.15 mm vertical 44 x 44 mm
	DPM (9580-DPM) HD (9580-DPM-HD)	76.19 mm horizontal 57.15 mm vertical 44 x 44 mm 33 x 30 mm
Field of view Minimum cell size	DPM (9580-DPM) HD (9580-DPM-HD) Standard (9580-C-3) DPM (9580-DPM)	76.19 mm horizontal 57.15 mm vertical 44 x 44 mm 33 x 30 mm 1D = 4.0 mils (0.10 mm) 2D = 5.9 mils (0.15 mm)
	DPM (9580-DPM) HD (9580-DPM-HD) Standard (9580-C-3)	76.19 mm horizontal 57.15 mm vertical 44 x 44 mm 33 x 30 mm 1D = 4.0 mils (0.10 mm) 2D = 5.9 mils (0.15 mm) 2D = 2.0 mils (0.05 mm)
	DPM (9580-DPM) HD (9580-DPM-HD) Standard (9580-C-3) DPM (9580-DPM)	76.19 mm horizontal 57.15 mm vertical 44 x 44 mm 33 x 30 mm 1D = 4.0 mils (0.10 mm) 2D = 5.9 mils (0.15 mm) 2D = 2.0 mils (0.05 mm) 5 million pixels
Minimum cell size	DPM (9580-DPM) HD (9580-DPM-HD) Standard (9580-C-3) DPM (9580-DPM)	76.19 mm horizontal 57.15 mm vertical 44 x 44 mm 33 x 30 mm 1D = 4.0 mils (0.10 mm) 2D = 5.9 mils (0.15 mm) 2D = 2.0 mils (0.05 mm)
Minimum cell size	DPM (9580-DPM) HD (9580-DPM-HD) Standard (9580-C-3) DPM (9580-DPM)	76.19 mm horizontal 57.15 mm vertical 44 x 44 mm 33 x 30 mm 1D = 4.0 mils (0.10 mm) 2D = 5.9 mils (0.15 mm) 2D = 2.0 mils (0.05 mm) 5 million pixels
Minimum cell size Camera Illumination	DPM (9580-DPM) HD (9580-DPM-HD) Standard (9580-C-3) DPM (9580-DPM) HD (9580-DPM-HD)	76.19 mm horizontal 57.15 mm vertical 44 x 44 mm 33 x 30 mm 1D = 4.0 mils (0.10 mm) 2D = 5.9 mils (0.15 mm) 2D = 2.0 mils (0.05 mm) 5 million pixels Object distance: Contact Red dome (660 nm)
Minimum cell size Camera Illumination Environmental	DPM (9580-DPM) HD (9580-DPM-HD) Standard (9580-C-3) DPM (9580-DPM)	76.19 mm horizontal 57.15 mm vertical 44 x 44 mm 33 x 30 mm 1D = 4.0 mils (0.10 mm) 2D = 5.9 mils (0.15 mm) 2D = 2.0 mils (0.05 mm) 5 million pixels Object distance: Contact Red dome (660 nm) Operating: 4 to 46°C, Storage: -20 to 60°C
Minimum cell size Camera Illumination	DPM (9580-DPM) HD (9580-DPM-HD) Standard (9580-C-3) DPM (9580-DPM) HD (9580-DPM-HD)	76.19 mm horizontal 57.15 mm vertical 44 x 44 mm 33 x 30 mm 1D = 4.0 mils (0.10 mm) 2D = 5.9 mils (0.15 mm) 2D = 2.0 mils (0.05 mm) 5 million pixels Object distance: Contact Red dome (660 nm) Operating: 4 to 46°C, Storage: -20 to 60°C Operating: 20% to 80% (with no icing or condensation),
Minimum cell size Camera Illumination Environmental specifications	DPM (9580-DPM) HD (9580-DPM-HD) Standard (9580-C-3) DPM (9580-DPM) HD (9580-DPM-HD) Ambient temperature range	76.19 mm horizontal 57.15 mm vertical44 x 44 mm33 x 30 mm1D = 4.0 mils (0.10 mm) 2D = 5.9 mils (0.15 mm)2D = 2.0 mils (0.05 mm)5 million pixelsObject distance: ContactRed dome (660 nm)Operating: 4 to 46°C, Storage: -20 to 60°COperating: 20% to 80% (with no icing or condensation), Storage: 20% to 95% (with no icing or condensation)
Minimum cell size Camera Illumination Environmental specifications Communications	DPM (9580-DPM) HD (9580-DPM-HD) Standard (9580-C-3) DPM (9580-DPM) HD (9580-DPM-HD) Ambient temperature range	76.19 mm horizontal 57.15 mm vertical 44 x 44 mm 33 x 30 mm 1D = 4.0 mils (0.10 mm) 2D = 5.9 mils (0.15 mm) 2D = 2.0 mils (0.05 mm) 5 million pixels Object distance: Contact Red dome (660 nm) Operating: 4 to 46°C, Storage: -20 to 60°C Operating: 20% to 80% (with no icing or condensation), Storage: 20% to 95% (with no icing or condensation) USB 2.0 A plug to Mini-B plug cable, 2 m
Minimum cell size Camera Illumination Environmental specifications	DPM (9580-DPM) HD (9580-DPM-HD) Standard (9580-C-3) DPM (9580-DPM) HD (9580-DPM-HD) Ambient temperature range	76.19 mm horizontal 57.15 mm vertical44 x 44 mm33 x 30 mm1D = 4.0 mils (0.10 mm) 2D = 5.9 mils (0.15 mm)2D = 2.0 mils (0.05 mm)5 million pixelsObject distance: ContactRed dome (660 nm)Operating: 4 to 46°C, Storage: -20 to 60°COperating: 20% to 80% (with no icing or condensation), Storage: 20% to 95% (with no icing or condensation)
Minimum cell size Camera Illumination Environmental specifications Communications Power supply	DPM (9580-DPM) HD (9580-DPM-HD) Standard (9580-C-3) DPM (9580-DPM) HD (9580-DPM-HD) Ambient temperature range	76.19 mm horizontal 57.15 mm vertical 44 x 44 mm 33 x 30 mm 1D = 4.0 mils (0.10 mm) 2D = 5.9 mils (0.15 mm) 2D = 2.0 mils (0.05 mm) 5 million pixels Object distance: Contact Red dome (660 nm) Operating: 4 to 46°C, Storage: -20 to 60°C Operating: 20% to 80% (with no icing or condensation), Storage: 20% to 95% (with no icing or condensation) USB 2.0 A plug to Mini-B plug cable, 2 m
Minimum cell size Camera Illumination Environmental specifications Communications	DPM (9580-DPM) HD (9580-DPM-HD) Standard (9580-C-3) DPM (9580-DPM) HD (9580-DPM-HD) Ambient temperature range Ambient humidity range Unpackaged standalone	76.19 mm horizontal 57.15 mm vertical44 x 44 mm33 x 30 mm1D = 4.0 mils (0.10 mm) 2D = 5.9 mils (0.15 mm)2D = 2.0 mils (0.05 mm)5 million pixelsObject distance: ContactRed dome (660 nm)Operating: 4 to 46°C, Storage: -20 to 60°COperating: 20% to 80% (with no icing or condensation), Storage: 20% to 95% (with no icing or condensation)USB 2.0 A plug to Mini-B plug cable, 2 mUSB powered 5 VDC at 400 mAApprox. 0.64 kg
Minimum cell size Camera Illumination Environmental specifications Communications Power supply Weight	DPM (9580-DPM) HD (9580-DPM-HD) Standard (9580-C-3) DPM (9580-DPM) HD (9580-DPM-HD) Ambient temperature range Ambient humidity range	76.19 mm horizontal 57.15 mm vertical 44 x 44 mm 33 x 30 mm 1D = 4.0 mils (0.10 mm) 2D = 5.9 mils (0.15 mm) 2D = 2.0 mils (0.05 mm) 5 million pixels Object distance: Contact Red dome (660 nm) Operating: 4 to 46°C, Storage: -20 to 60°C Operating: 20% to 80% (with no icing or condensation), Storage: 20% to 95% (with no icing or condensation) USB powered 5 VDC at 400 mA Approx. 0.64 kg Approx. 1.81 kg (includes all cables and other items packaged in shipping box)
Minimum cell size Camera Illumination Environmental specifications Communications Power supply	DPM (9580-DPM) HD (9580-DPM-HD) Standard (9580-C-3) DPM (9580-DPM) HD (9580-DPM-HD) Ambient temperature range Ambient humidity range Unpackaged standalone	76.19 mm horizontal 57.15 mm vertical44 x 44 mm33 x 30 mm1D = 4.0 mils (0.10 mm) 2D = 5.9 mils (0.15 mm)2D = 2.0 mils (0.05 mm)5 million pixelsObject distance: ContactRed dome (660 nm)Operating: 4 to 46°C, Storage: -20 to 60°COperating: 20% to 80% (with no icing or condensation), Storage: 20% to 95% (with no icing or condensation)USB 2.0 A plug to Mini-B plug cable, 2 mUSB powered 5 VDC at 400 mAApprox. 0.64 kg
Minimum cell size Camera Illumination Environmental specifications Communications Power supply Weight Dimensions	DPM (9580-DPM) HD (9580-DPM-HD) Standard (9580-C-3) DPM (9580-DPM) HD (9580-DPM-HD) Ambient temperature range Ambient humidity range Unpackaged standalone	76.19 mm horizontal 57.15 mm vertical 44 x 44 mm 33 x 30 mm 1D = 4.0 mils (0.10 mm) 2D = 5.9 mils (0.15 mm) 2D = 2.0 mils (0.05 mm) 5 million pixels Object distance: Contact Red dome (660 nm) Operating: 4 to 46°C, Storage: -20 to 60°C Operating: 20% to 80% (with no icing or condensation), Storage: 20% to 95% (with no icing or condensation) USB powered 5 VDC at 400 mA Approx. 0.64 kg Approx. 1.81 kg (includes all cables and other items packaged in shipping box)

* Contact OMRON for a complete list of supported ECC-200 (Data Matrix) codes.

CC=Composite Components


Code Verification System LVS-9580 series

Options



LVS-9580 / 9585 Mounting Stand Adapter Bracket Part Number 98-9000200-01

This adapter bracket is designed for use with an Amscope model BSS-140 stand. Together with the BSS-140, the assembly allows the verifier to be held in a fixed position, raised to a 368 mm maximum height and 495 mm horizontal adjustment. The verifier can be rotated a full 360° while mounted, allowing for alignment against the DPM symbol for a broad variety of parts.

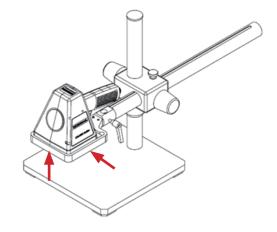

Dimensions



Laser Barcode Scanner

Handleld Code Reader

	МЕМО
	·
	· · · · · · · · · · · · · · · · · · ·
	·
	·
	·
	·
D	
	· · · · · · · · · · · · · · · · · · ·
	·
	· · · · · · · · · · · · · · · · · · · ·
	· · · · · · · · · · · · · · · · · · ·
2	

OMRON [45

Laser Barcode Scanner

Handleld Code Reader

Multi Code Reader

МЕМО	
<u>. </u>	
· · · · · · · · · · · · · · · · · · ·	
·	
·	
·	
·	
· · · · · · · · · · · · · · · · · · ·	
·	
·	
·	

	МЕМО
<u> </u>	
Inne	· · · · · · · · · · · · · · · · · · ·
Sca	
ode	
Laser Barcode Scanner	
er B	
Las	
ider	
Вез	
ode	
Ö	
Handleld Code Reader	
lan	
D	
eade	
e Di	
Multi Code Reader	
ulti (
\geq	
Code Verification System	
S	
Ition	
fica	
Veri	
de	
ů	

Terms and Conditions Agreement

Read and understand this catalog.

Please read and understand this catalog before purchasing the products. Please consult your OMRON representative if you have any questions or comments.

Warranties.

(a) Exclusive Warranty. Omron's exclusive warranty is that the Products will be free from defects in materials and workmanship for a period of twelve months from the date of sale by Omron (or such other period expressed in writing by Omron). Omron disclaims all other warranties, express or implied.

(b) Limitations. OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, ABOUT NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OF THE PRODUCTS. BUYER ACKNOWLEDGES THAT IT ALONE HAS DETERMINED THAT THE PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE.

Omron further disclaims all warranties and responsibility of any type for claims or expenses based on infringement by the Products or otherwise of any intellectual property right. (c) Buyer Remedy. Omron's sole obligation hereunder shall be, at Omron's election, to (i) replace (in the form originally shipped with Buyer responsible for labor charges for removal or replacement thereof) the non-complying Product, (ii) repair the non-complying Product, or (iii) repay or credit Buyer an amount equal to the purchase price of the non-complying Product; provided that in no event shall Omron be responsible for warranty, repair, indemnity or any other claims or expenses regarding the Products unless Omron's analysis confirms that the Products were properly handled, stored, installed and maintained and not subject to contamination, abuse, misuse or inappropriate modification. Return of any Products by Buyer must be approved in writing by Omron before shipment. Omron Companies shall not be liable for the suitability or unsuitability or the results from the use of Products in combination with any electrical or electronic components, circuits, system assemblies or any other materials or substances or environments. Any advice, recommendations or information given orally or in writing, are not to be construed as an amendment or addition to the above warranty.

See http://www.omron.com/global/ or contact your Omron representative for published information.

Limitation on Liability; Etc.

OMRON COMPANIES SHALL NOT BE LIABLE FOR SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR PRODUCTION OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED IN CONTRACT, WARRANTY, NEGLIGENCE OR STRICT LIABILITY.

Further, in no event shall liability of Omron Companies exceed the individual price of the Product on which liability is asserted.

Suitability of Use.

Omron Companies shall not be responsible for conformity with any standards, codes or regulations which apply to the combination of the Product in the Buyer's application or use of the Product. At Buyer's request, Omron will provide applicable third party certification documents identifying ratings and limitations of use which apply to the Product. This information by itself is not sufficient for a complete determination of the suitability of the Product in combination with the end product, machine, system, or other application or use. Buyer shall be solely responsible for determining appropriateness of the particular Product with respect to Buyer's application, product or system. Buyer shall take application responsibility in all cases.

NEVER USE THE PRODUCT FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY OR IN LARGE QUANTITIES WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCT(S) IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

Programmable Products.

Omron Companies shall not be responsible for the user's programming of a programmable Product, or any consequence thereof.

Performance Data.

Data presented in Omron Company websites, catalogs and other materials is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of Omron's test conditions, and the user must correlate it to actual application requirements. Actual performance is subject to the Omron's Warranty and Limitations of Liability.

Change in Specifications.

Product specifications and accessories may be changed at any time based on improvements and other reasons. It is our practice to change part numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the Product may be changed without any notice. When in doubt, special part numbers may be assigned to fix or establish key specifications for your application. Please consult with your Omron's representative at any time to confirm actual specifications of purchased Product.

Errors and Omissions.

Information presented by Omron Companies has been checked and is believed to be accurate; however, no responsibility is assumed for clerical, typographical or proofreading errors or omissions.

· EtherNet/IP™ is a trademark of ODVA.

·QR code is the registered trademark of DENSO WAVE.

·Windows is registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

·Intel and the Intel logo are trademarks of Intel Corporation in the U.S. and/or other countries.

·Other company names and product names in this document are the trademarks or registered trademarks of their respective companies.

•The product photographs and figures that are used in this catalog may vary somewhat from the actual products.

OMRON Corporation Industrial Automation Company Kyoto, JAPAN

Contact: www.ia.omron.com

Regional Headquarters OMRON EUROPE B.V. Wegalaan 67-69, 2132 JD Hoofddorp The Netherlands Tel: (31)2356-81-300/Fax: (31)2356-81-388

OMRON ASIA PACIFIC PTE. LTD. No. 438A Alexandra Road # 05-05/08 (Lobby 2), Alexandra Technopark, Singapore 119967 Tel: (65) 6835-3011/Fax: (65) 6835-2711 OMRON ELECTRONICS LLC 2895 Greenspoint Parkway, Suite 200 Hoffman Estates, IL 60169 U.S.A. Tel: (1) 847-843-7900/Fax: (1) 847-843-7787

OMRON (CHINA) CO., LTD. Room 2211, Bank of China Tower, 200 Yin Cheng Zhong Road, PuDong New Area, Shanghai, 200120, China Tel: (86) 21-5037-2222/Fax: (86) 21-5037-2200

Authorized Distributor:

© OMRON Corporation 2018 All Rights Reserved. In the interest of product improvement, specifications are subject to change without notice.

Cat. No. Q263-E1-01