NOTE: Please read all instructions carefully before using this product

Table of Contents

Safety Notice

Hardware Identifier

Assembly Instruction

Parts List

Warranty

Ordering Parts

Model MP-2106


Retain This Manual for Reference

09-10-07

OWNER'S MANUAL



MARCY PLATINUM MP-2106 HOME GYM

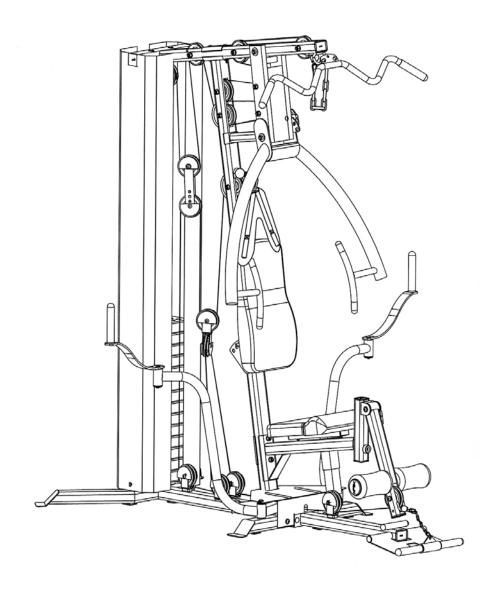

Escalade International Limited

Pleasant Road, Penllergaer, Swansea. SA4 9GE Tel: 00 44 1792 222 550 Fax 00 44 1792 895 781

www.escaladesports.co.uk info@escaladesports.co.uk

TABLE OF CONTENTS

BEFORE YOU BEGIN	1
IMPORTANT SAFETY NOTICES	
HARDWARE PACK	
ASSEMBLY INSTRUCTIONS	
WEIGHT RESISTANCE CHART	26
PARTS LIST	27
WARRANTY	28
ORDERING PARTS	28

BEFORE YOU BEGIN

Thank you for selecting the MARCY PLATINUM Home Gym MP-2106. For your safety and benefit, read this manual carefully before using the machine. As the distributor, we are committed to provide you complete customer satisfaction. If you have any questions, or find there are missing or damaged parts or you require assistance assembling this product, we guarantee you complete satisfaction through direct assistance. To avoid unnecessary delays, please call our customer service department Monday to Friday 9am to 5pm.

Tel: 0044 (0) 1792 222 562 E mail: customerservices@escaladesports.co.uk

Supplied by
Escalade International Ltd
Pleasant Road
Penllergaer
Swansea
SA4 9GE
Tel: 00 44 1792 222550

Fax: 00 44 1792 895781 www.escaladesports.co.uk

E mail: info@escaladesports.co.uk

IMPORTANT SAFETY PRECAUTIONS

This Gym is built for optimum safety. However, certain precautions apply whenever you operate a piece of exercise equipment. Be sure to read the entire manual before you assemble or use your Gym. In particular, note the following safety precautions:

- Keep children and pets away from the Gym at all times. Do not leave children unattended in the same room with the Gym. The Gym is not a toy and therefore parents and guardians should be aware of the natural tendency for children to play, leading to situations and behaviour for which the Gym is not intended.
- 2. If children are allowed to use the Gym their physical/mental development and above all, temperament should be taken into account. Constant supervision is therefore needed.
- 3. Only one person at a time should use the Gym.
- 4. If the user experiences dizziness, nausea, chest pain or any other abnormal symptoms, STOP the workout at once. Consult a physician immediately. Injuries may occur due to incorrect or excessive exercise.
- 5. Position the Gym on a clear leveled surface which is clear of all obstacles as not to restrict movement whilst exercising. DO NOT use the Gym near water or outdoors.
- 6. Keep hands away from all moving parts
- 7. Always wear appropriate clothing when exercising. DO NOT wear robes or other clothing that could become caught in the Gym. Running or aerobic shoes are also required when using the Gym.
- 8. Use the Gym only for its intended use as described in this manual. DO NOT use attachments not recommended by the manufacturer.
- 9. Do not place any sharp objects around the Gym.
- 10. Disabled persons should not use the machine without a qualified person or physician in attendance.
- 11. Before using the Gym to exercise, always do stretching exercises to properly warm up.
- 12. Never use the Gym if it is not functioning properly.
- 13. This product is intended for H=Domestic Home use only.


CARE AND MAINTENANCE


- 1. Inspect and tighten all parts before using the machine.
- 2. The machine can be cleaned using a damp cloth and mild non-abrasive detergent. DO NOT use solvents.
- 3. Periodically, spray the Guide Rods # 9 with silicon spray or light oil to ensure a smooth operation.
- 4. Failure to examine the Gym regularly may affect the safety level of the equipment.
- 5. Maximum user weight is 140kg.
- 6. Assembled Dimensions: L 176 x W 155 x H 204 cm

WARNING: BEFORE BEGINNING ANY EXERCISE PROGRAM, CONSULT YOUR PHYSICIAN. THIS IS ESPECIALLY IMPORTANT FOR INDIVIDUALS OVER THE AGE OF 35 OR PERSONS WITH PRE-EXISTING HEALTH PROBLEMS. READ ALL INSTRUCTIONS BEFORE USING ANY FITNESS EQUIPMENT. IMPEX INC. ASSUMES NO RESPONSIBILITY FOR PERSONAL INJURY OR PROPERTY DAMAGE SUSTAINED BY OR THROUGH THE USE OF THIS PRODUCT.

SAVE THESE INSTRUCTIONS.

WARNING LABEL

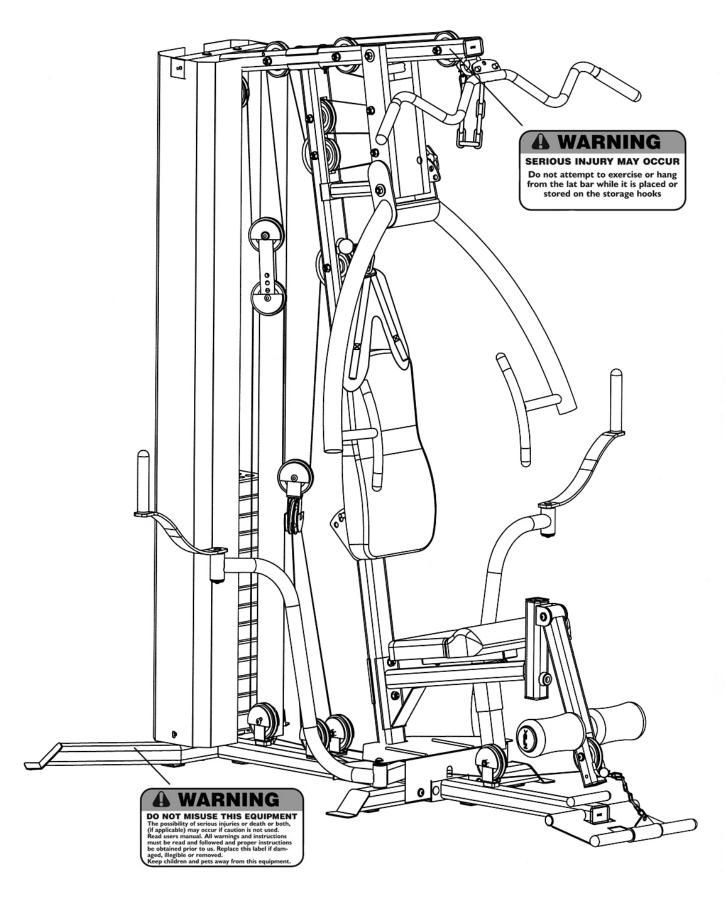


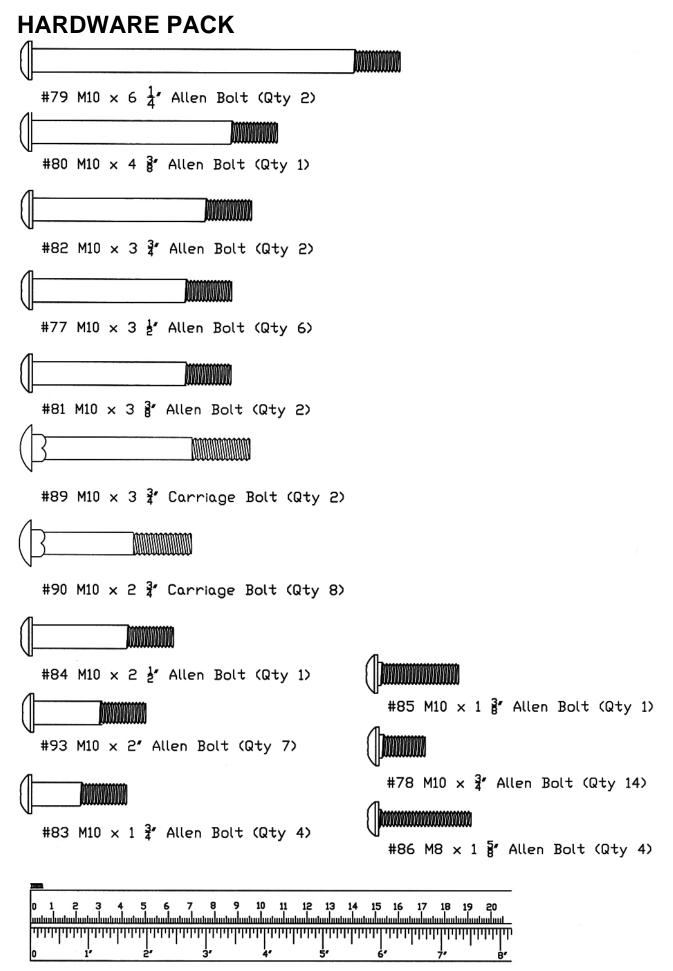


HARDWARE PACK



#30 7 ½" Front Press Axle (Qty 1)

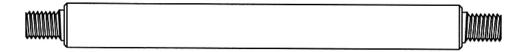

#29 6 3 Front Press Base Axle (Qty 1)

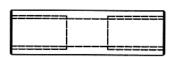

#72 Leg Developer Axle (Qty 1)




#51 Ø 1 $\frac{1}{4}$ " Front Press Bushing (Qty 2)



#52 \(\frac{7}{8}'' \) Leg Developer Bushing (Qty 2)



#49 Pulley Bushing (Qty 12)

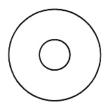

#59 Ø 1 $\frac{1}{4}$ Washer (Qty 6)



#88 Ø §″ Washer (Qty 4)




#91 M10 Aircraft Nut (Qty 38)




#92 Ø ¾″ Washer (Qty 60)


HARDWARE PACK

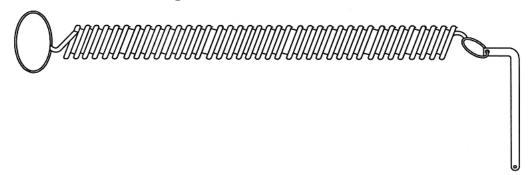


#42 Weight Plate Selector Pin(Qty 1)

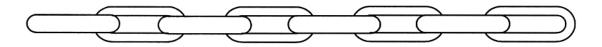


#36 Chain(Qty 2)

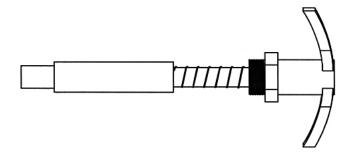

#38 Long T-shaped Lock Pin (Qty 1)

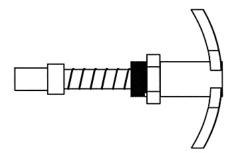

#39 T-shaped Lock Pin (Qty 1)

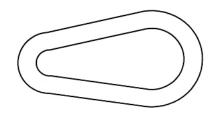

#37 Hook (Qty 5)


ASSEMBLY INSTRUCTION

Tools Required Assembling the Machine: Two Adjustable Wrenches and Allen Wrenches

NOTE: It is strongly recommended this machine be assembled by two or more people to avoid possible injury.


STEP 1 (See Diagram 1)

- A.) Insert two Guide Rods (#16) into the holes on the Rear Stabilizer (#15). Secure each Guide Rod with one M10 x ¾" Allen Bolt (#78) and Ø ¾" Washer (#92) from the bottom. Attach two Rubber Bumpers (#55) onto top of the two Guide Rods and slide down to the stopper on the Guide Rods.
- B.) Attach the Vertical Frame (#4) onto the Rear Base Frame (#14). Secure it with two M10 x 2 ¾" Carriage Bolts (#90), one 4 ¾" x 2 ¾" Bracket (#25), two Ø ¾" Washers (#92), and two M10 Aircraft Nuts (#91). DO NOT tighten the Nuts and Bolts yet.
- C.) Attach the Butterfly Base (#13) to the Rear Base Frame (#14). Attach the Front Base Frame (#12) to the Butterfly Base (#13). Align the holes and secure them together with two M10 x 2 ¾" Carriage Bolts (#90) from the bottom, two M10 x 3 ¾" Carriage Bolts (#89) from the side of Butterfly Base, four Ø ¾" Washers (#92), and four M10 Aircraft Nuts (#91).
- D.) Attach the Rear Base Frame (#14) to the Rear Stabilizer (#15). Secure them together with two M10 x 3 ¾" Allen Bolts (#82), two Ø ¾" Washers (#92), and one 1 5/8" x 1 ½" Bracket (#26).
- E.) Attach the Foot Plate (#17) to the Front Base Frame (#12). Align the holes and insert the 13" Foot Plate Axle (#18) through the holes.
- F.) Slide 14 Weight Plates (#45) onto the Guide Rods. Make sure the groves on all Plates face up and toward the back. Insert the Selector Rod (#28) through the center hole on the Weight Plates. Slide the Weight Selector Stem (#46) onto the Guide Rods.
- G.) Use the Weight Plate Selector Pin (#42) to select desired number of Weight Plates to exercise. NOTE: Each Plate weights approximately 10 lbs. Please refer to the Weight Resistance Chart on page 26.

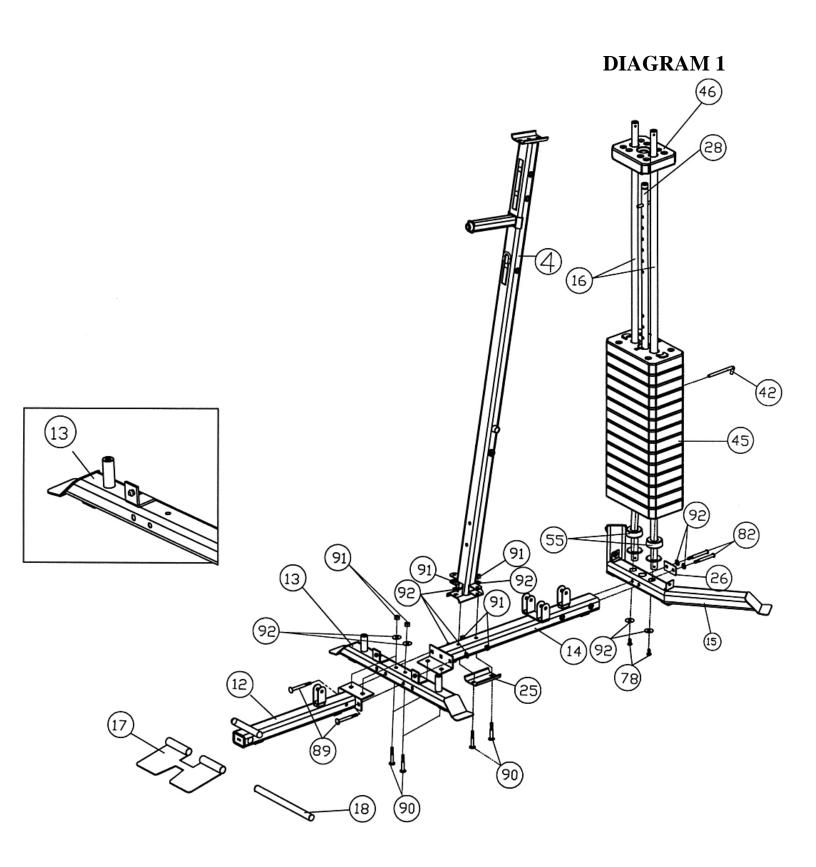

STEP 2 (See Diagram 2)


- A.) Attach the Upper Frame (#1) onto the two Guide Rods (#16). Secure it with two M10 x $^{3}4$ " Allen Bolts (#78) and \oslash $^{3}4$ " Washers (#92). DO NOT tighten the Bolts yet.
- B.) Place the Upper Frame (#1) onto the Vertical Frame (#4). Secure it with two M10 x 2 ³/₄" Carriage Bolts (#90), one 4 ³/₄" x 2 ³/₄" Bracket (#25), two Ø ³/₄" Washers (#92), and two M10 Aircraft Nuts (#91).
- C.) Securely tighten all Nuts and Bolts previously installed.
- D.) Attach the Seat Support Frame (#7) to the Vertical Frame (#4). Secure it with two M10 x 2 ¾" Carriage Bolts (#90), one 4 ¾" x 2 ¾" Bracket (#25), two Ø ¾" Washers (#92), and two M10 Aircraft Nuts (#91).
- E.) Attach the Leg Developer (#8) to the bracket on the Seat Support Frame. Secure it with one Leg Developer Axle (#72), two M10 x ¾" Allen Bolts (#78), and two Ø ¾" Washers (#92). Do not over tighten the Bolts. Make sure the Leg Developer is able to swivel.

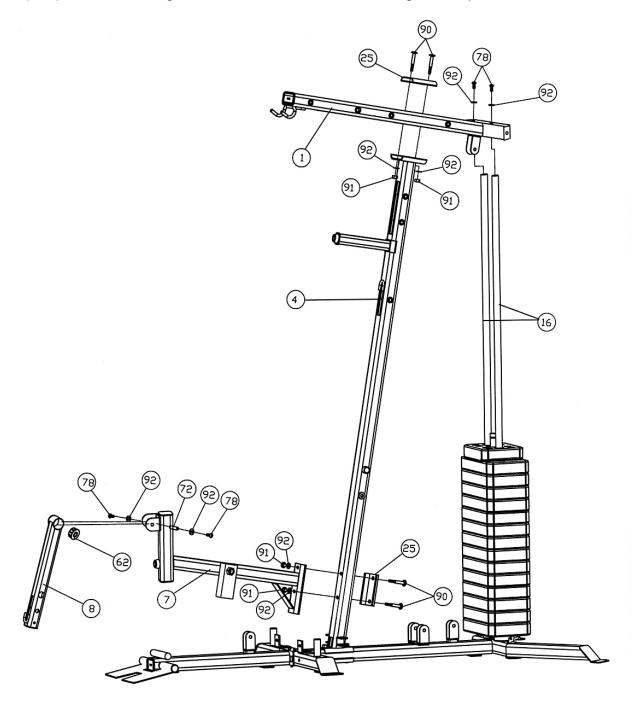

9


STEP 3 (See Diagram 3)

- A.) Attach the Front Press Base (#2) to the Upper Frame (#1). Secure it with one 6 3/4" Front Press Base Axle (#29), two Ø 1 1/4" Washers (#59), and two M10 Aircraft Nuts (#91).
- B.) Attach the Front Press (#3) to the Front Press Base (#2). Secure it with one 7 ½" Front Press Axle (#30), two Ø1 ¼" Washers (#59), and two M10 Aircraft Nuts (#91).
- C.) Thread the T-shaped Lock Pin (#39) into the hole on the Front Press to obtain the desired Front Press position.
- D.) Attach the Backrest Board (#31) to the Backrest Support Frame (#5). Secure it with two M8 x 1 5/8" Allen Bolts (#86) and Ø 5/8" Washers (#88).
- E.) Attach the Backrest Support Frame to the Vertical Frame (#4). Secure it with one M10 x 4 3/8" Allen Bolt (#80), two Ø ¾" Washers (#92), and one M10 Aircraft Nut (#91).
- F.) Thread the Long T-shaped Lock Pin (#38) into the hole on the side of the Vertical Frame to obtain the desired Backrest position.

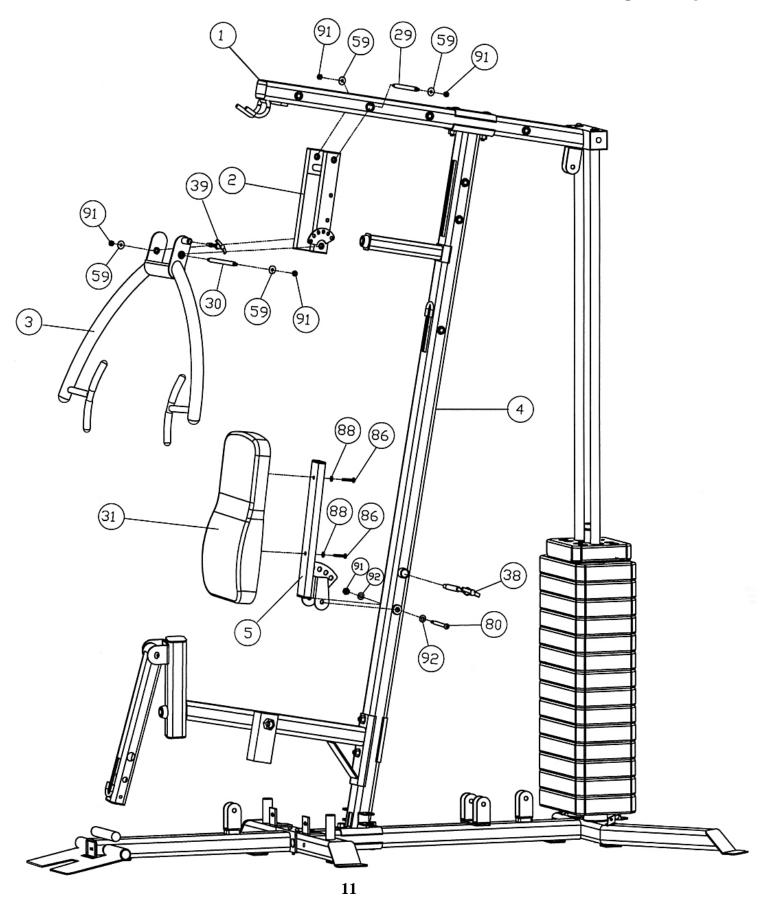


STEP 4 (See Diagram 4)

- A.) Attach the Seat (#32) to the Seat Post (#6). Secure it with two M8 x 1 5/8" Allen Bolts (#86) and Ø 5/8" Washers (#88).
- B.) Insert the Seat Post into the opening on the Seat Support Frame (#7). Thread the Lock Knob (#40) into the hole on the Seat Support Frame to lock the Seat at selected height.
- C.) Insert the Foam Tube (#23) halfway through the hole on the Leg Developer (#8). Push two Foam Rolls (#48) onto the Foam Tube from both ends. Plug two Foam Roll End Caps (#61) into the Ends.

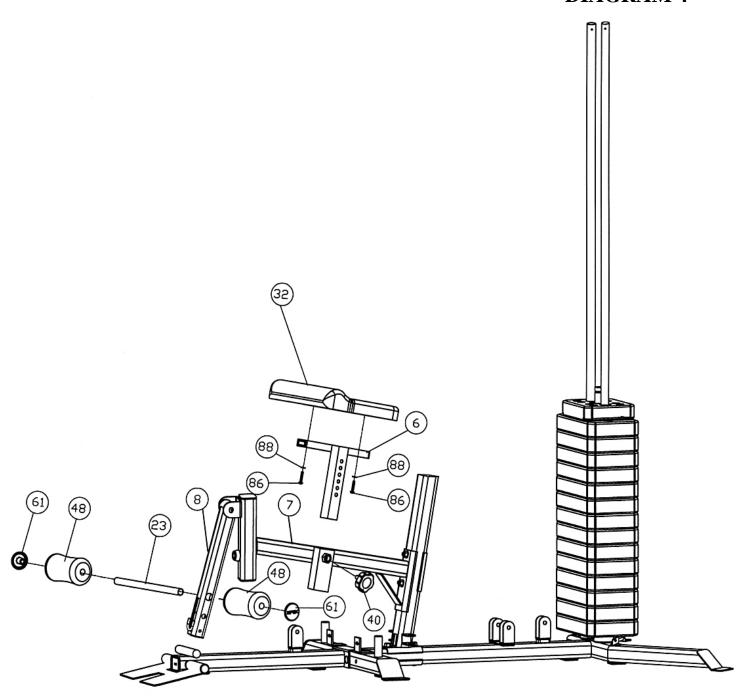


STEP 5 (See Diagram 5)

- A.) Slide the Right Butterfly (#10) onto the right axle on the Butterfly Base (#13).
- B.) Insert the Butterfly Handle (#9) into the pivot on the Right Butterfly. Secure it with one M10 x $\frac{3}{4}$ " Allen Bolt (#78) and \varnothing 1 $\frac{1}{4}$ " Washer (#59) from the bottom.
- C.) Repeat Procedures A and B above to install the other side. Do not over tighten the Bolts. Make sure the Handles are able to swivel.

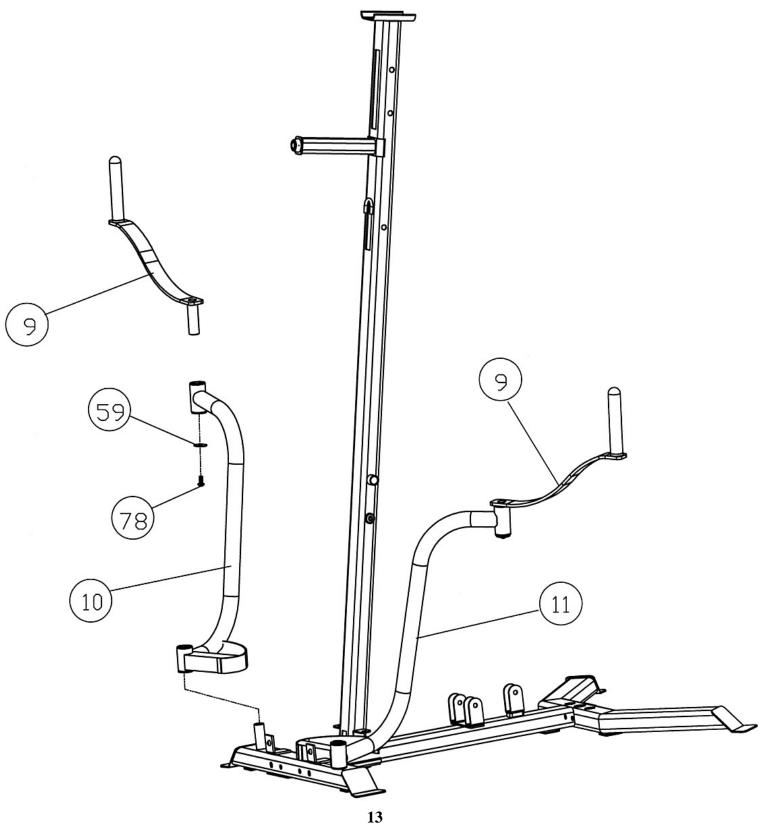

CABLE LOOP DIAGRAM

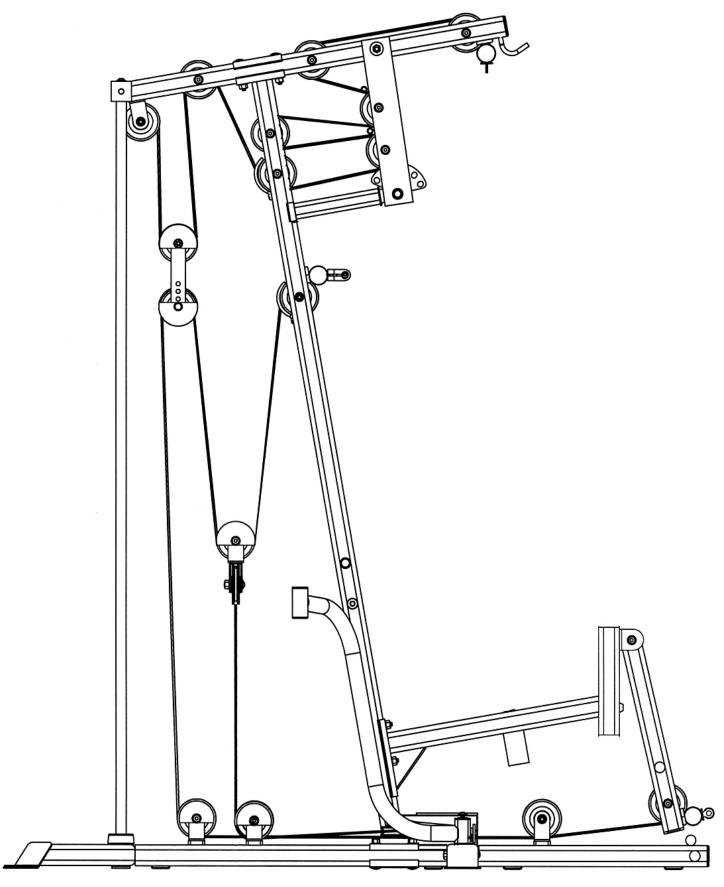


STEP 6 (See Diagram 6 & Upper Cable Loop Diagram)

- A.) Attach the 163" Upper Cable (#33) to the opening on the front of Upper Frame (#1). Make sure the ball stopper is underneath the Frame. Attach a Pulley (#47) to the Cable.
- B.) Secure the Pulley to the opening with one M10 x 3 ½" Allen Bolt (#77), two Pulley Bushings (#49), and one M10 Aircraft Nut (#91).
- C.) Draw the Cable over the Pulley along the Upper Frame towards the back of the machine to the opening in the middle of Upper Frame. Repeat Procedure B above to install a Pulley.
- D.) Draw the Cable around the Pulley then back to the upper opening on the Front Press Base (#2). Attach a Pulley to the opening. Secure it with one M10 x 6 ¼" Allen Bolt (#79), two Ø ¾" Washers (#92), and one M10 Aircraft Nut (#91).
- E.) Draw the Cable around the Pulley then towards the upper opening on the Vertical Frame (#4). Repeat Procedure B above to install a Pulley.
- F.) Draw the Cable around the Pulley and back to the lower opening on the Front Press Base. Repeat Procedure D above to install a Pulley.
- G.) Draw the Cable around the Pulley then to the lower opening on the Vertical Frame. Repeat Procedure B above to install a Pulley.
- H.) Draw the Cable underneath the Pulley then pull upward to another opening on the back of the Upper Frame. Repeat Procedure B above to install a Pulley.
- I.) Draw the Cable around the Pulley then downward. Attach a Pulley to the top hole on the Double Floating Pulley Brackets (#22).
- J.) Secure the Pulley to the brackets with one M10 x 2" Allen Bolt (#93), two Pulley Covers (#94), two Ø ¾" Washers (#92), and one M10 Aircraft Nut (#91). Let the Bracket hanging for now.
- K.) Draw the Cable around the Pulley then upward to the open bracket between the two Guide Rods. Repeat Procedure J above to install a Pulley.
- L.) Draw the Cable around the Pulley then downward to the Selector Rod (#28). Securely thread the Head Bolt at end of the Cable into the Selector Rod.


DIAGRAM 6 91 49) 92) 47 49 (33) (55) 163′′ 16

Upper Cable Loop Diagram

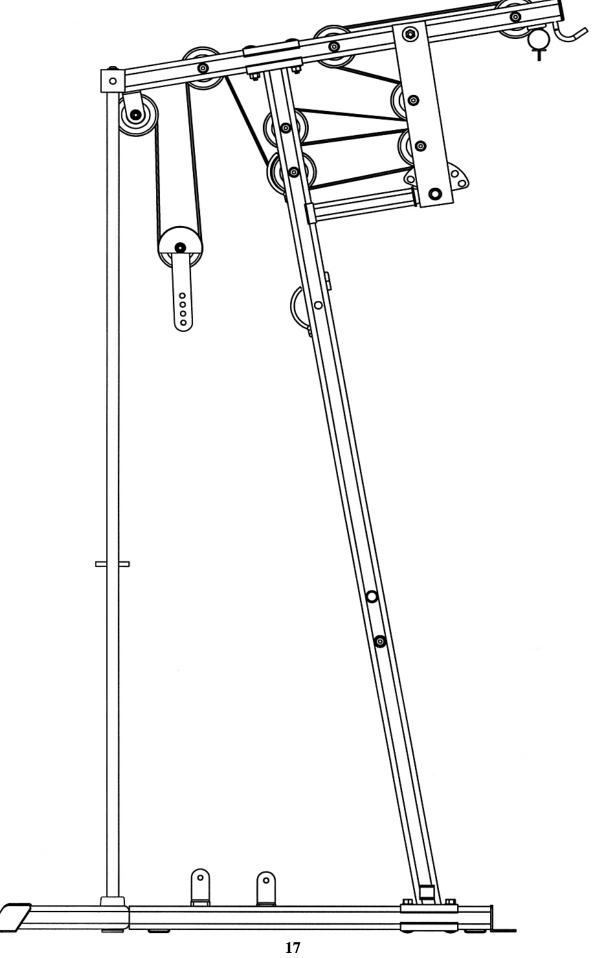


STEP 7 (See Diagram 7 & Lower Cable Loop Diagram)

- A.) Attach the 164" Lower Cable (#35) to the opening on the Leg Developer (#8). Attach a Pulley (#47) to the opening. Secure it with one M10 x 2 ½" Allen Bolt (#84), two Ø 7/8" Leg Developer Pulley Bushings (#52), and one M10 Aircraft Nut (#91).
- B.) Draw the Cable underneath the Pulley to the open bracket on the Front Base Frame (#12). Attach a Pulley to the bracket. Secure it with one M10 x 1 ¾" Allen Bolt (#83), two Ø ¾" Washers (#92), and one M10 Aircraft Nut (#91).
- C.) Draw the Cable underneath the Pulley towards the back of the machine through the bottom opening on the Vertical Frame (#4) to the open bracket on the Rear Base Frame (#14).
- D.) Install a Pulley to the bracket with M10 x 2" Allen Bolt (#93), two Pulley Covers (#94), two Ø 3/4" Washers (#92), and one M10 Aircraft Nut.
- E.) Draw the Cable underneath the Pulley then pull upward to the Double Floating Pulley Bracket (#22) previously installed in STEP-6. Repeat Procedure D above to install a Pulley. After completing the entire cable system, come back to the Double Floating Pulley Bracket and adjust the height of the lower Pulley to adjust the tightness of the Cables. Move up the hole to increase the tension. Move down the hole to loose the tension.
- F.) Draw the Cable around the Pulley then downward. Attach the Cable to an Angled Double Floating Pulley Bracket (#27). Repeat Procedure D above to install a Pulley. Let the Bracket hanging for now.
- G.) Draw the Cable around the Pulley then upward to the opening on the Vertical Frame (#4). Attach a Pulley to the opening. Secure it with one M10 x 3 ½" Allen Bolt (#77), two Pulley Bushings (#49), and one M10 Aircraft Nut (#91).
- H.) Insert the Cable through a Ball Stopper (#76). Attach the Cable to a U-shape Cable Connector (#41). Attach a Hook (#37) to the Connector. Secure the Connector and Hook with one M10 x 1 3/8" Allen Bolt (#85), two Ø ¾" Washers (#92), and one M10 Aircraft Nut (#91).

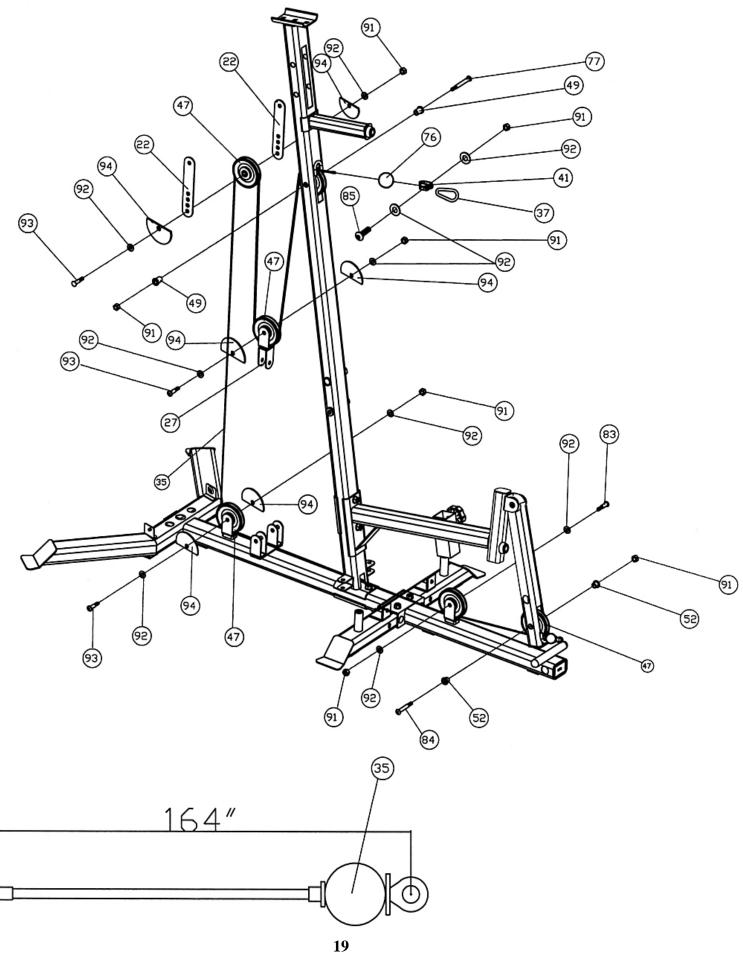


Lower Cable Loop Diagram

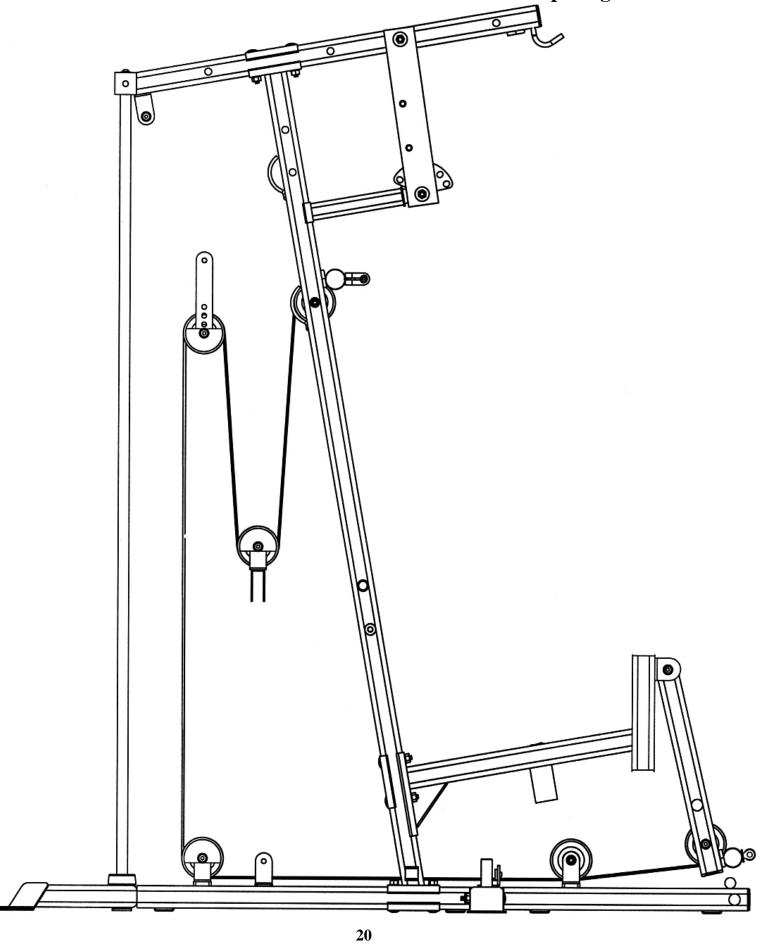


STEP 8 (See Diagram 8 & Butterfly Cable Loop Diagram)

- A.) Clip one end of the 98" Butterfly Cable (#34) to the open slot on the Right Butterfly (#10).
- B.) Draw the Cable to the open bracket on the right side of the Vertical Frame (#4). Attach a Small Pulley (#73) to the bracket
- C.) Secure it with one M10 x 1 ¾" Allen Bolt (#83), two Ø ¾" Washers (#92), and one M10 Aircraft Nut (#91).
- D.) Draw the Cable around the Small Pulley to the right open bracket on the Rear Base Frame (#14).
- E.) Attach a Pulley to the bracket. Secure it with M10 x 2" Allen Bolt (#93), two Pulley Covers (#94), two Ø ¾" Washers (#92), and one M10 Aircraft Nut (#91).
- F.) Draw the Cable underneath the Pulley then upward to the Angled Double Floating Pulley Bracket (#27) previously installed in Step-7. Repeat Procedure E above to install a Pulley.
- G.) Draw the Cable around the Pulley then downward to the left open bracket on the Rear Base Frame. Repeat Procedure E above to install a Pulley.
- H.) Draw the Cable underneath the Pulley to the left open bracket on the Vertical Frame. Install a Small Pulley to the bracket.
- I.) Draw the Cable around the Small Pulley then attach the end the Cable to the open slot on the Left Butterfly.
- J.) Attach the Butterfly Base Cover (#21) to the Butterfly Base (#13) to cover the left and right pivot on the Butterfly Base. Secure the Cover to the Pivots with two M10 x ¾" Allen Bolts (#83) and Ø ¾" Washers (#92).
- K.) Align the holes and secure the Cover to the Butterfly Base with two M10 x 3 3/8" Allen Bolts (#81), four Ø 3/4" Washers (#92), and twoM10 Aircraft Nut (#91).

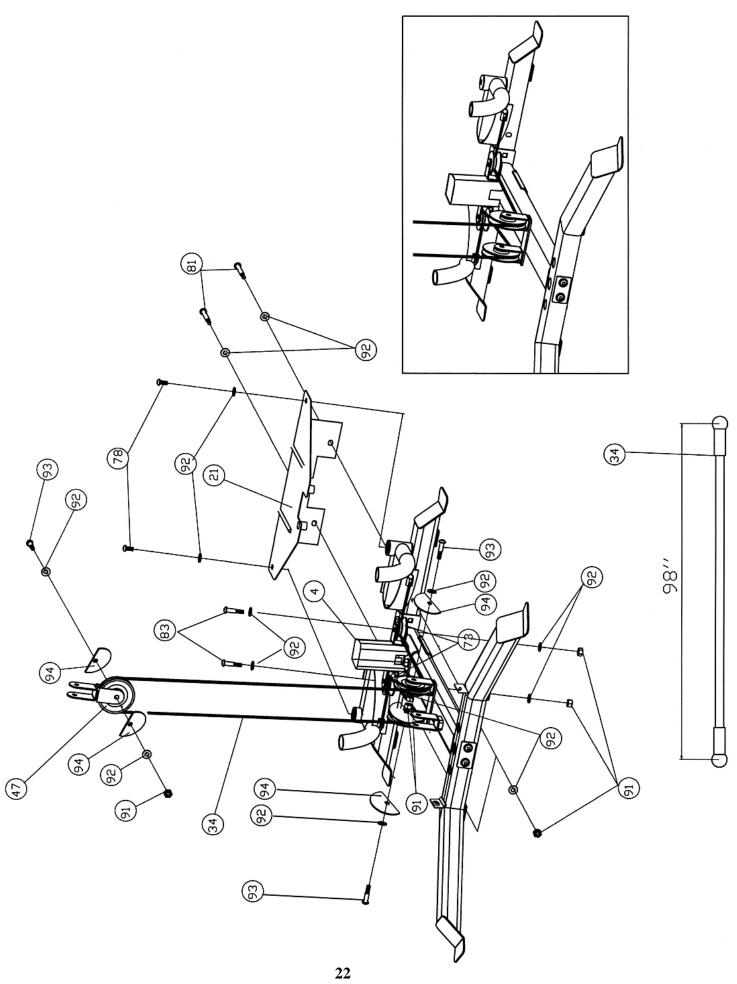


Butterfly Cable Loop Diagram

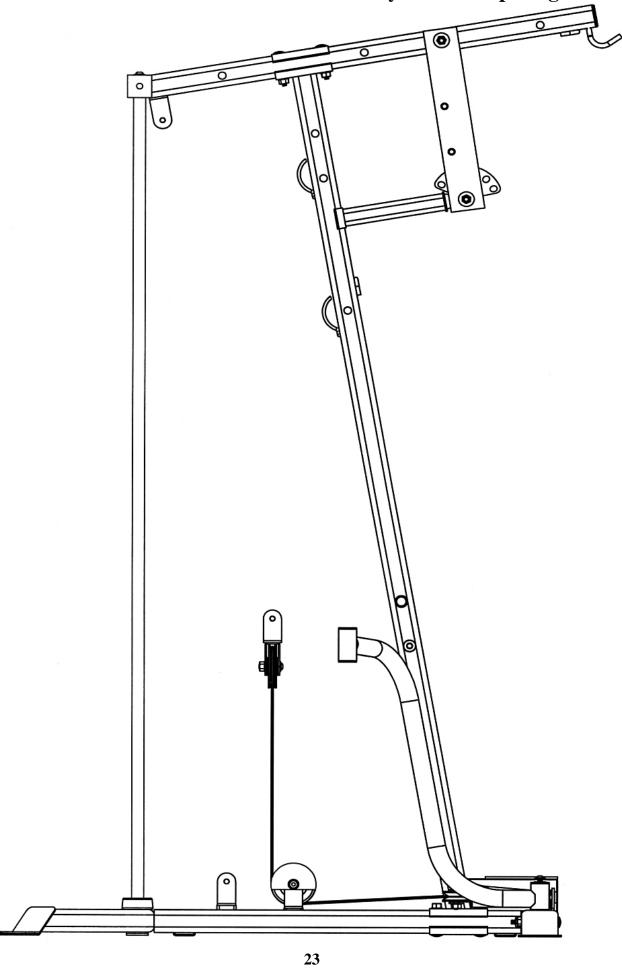


STEP 9 (See Diagram 9)

- A.) Connect the Lat Bar (#24) to the Upper Cable (#33) with two Hooks (#37) and one Chain (#36).
- B.) Connect the Abdominal Strap (#70) to the Lower Cable (#35) with a Hook.
- C.) Connect the Shiver Bar (#19) to the Lower Cable with two Hooks and a Chain. Replace Shiver Bar with Single Handle (#68) or Ankle Strap (#69) for various exercises.

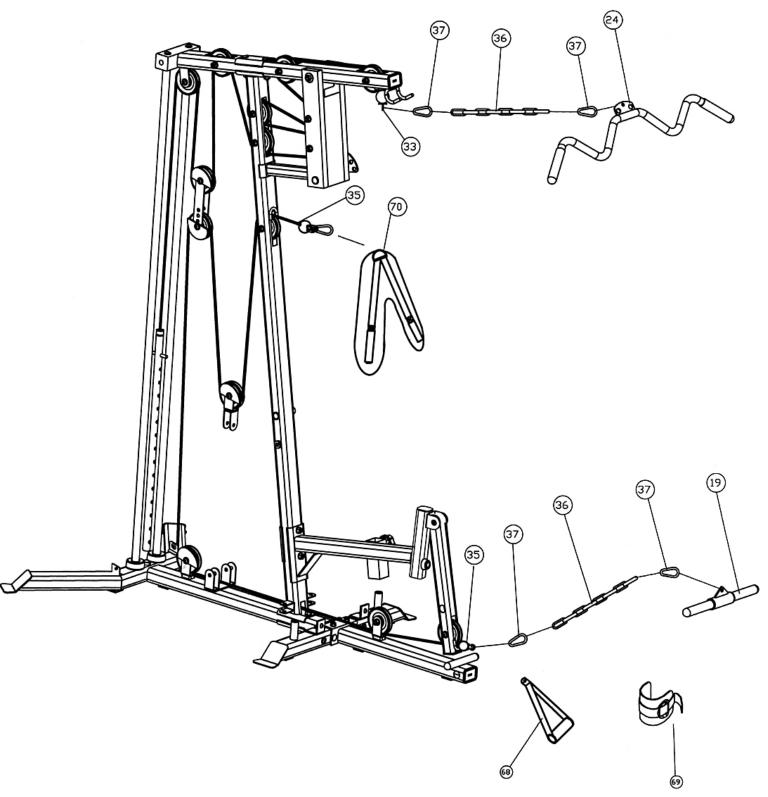

Step 10 (See Diagram 10)

- A.) Attach the two Weight Stack Covers (#74) to the Upper Frame (#1) and Rear Stabilizer (#15).
- B.) Secure them with four M10 x 3/4" Allen Bolts (#78) and four Ø 3/4" Washers (#92).

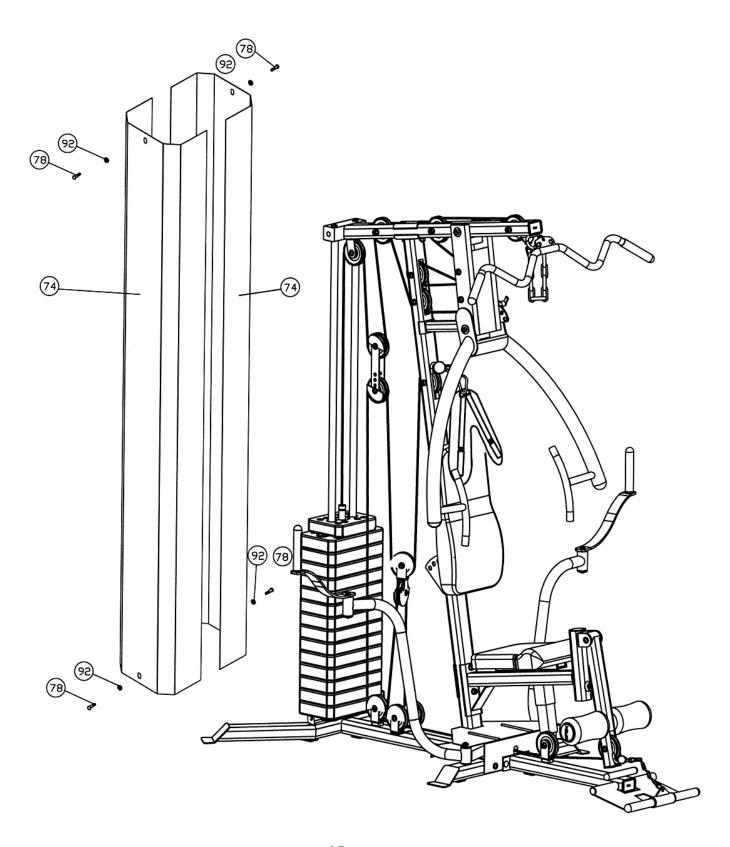

WEIGHT RESISTANCE CHART

	WEIGHT PLATE								
Station	1	2	3	4	5	6	7	8	9
Low Pulley	10	15	20	25	30	35	40	45	50
Lat Pull	14	18	23	27	32	36	41	45	50
Butterfly	5	7	10	13	15	18	21	24	26
Front Press	9	15	22	28	35	41	47	54	60
AB Crunch	10	15	20	25	30	35	40	45	50
Leg Developer	12	17	23	28	34	39	45	50	55

	WEIGHT PLATE								
Station	10	11	12	13	14				
Low Pulley	55	60	65	70	75				
Lat Pull	55	59	64	68	73				
Butterfly	29	32	35	37	40				
Front Press	66	73	79	85	92				
AB Crunch	55	60	65	70	75				
Leg Developer	61	66	72	77	83				

^{*}All weights are in KGS

^{*}Numbers are approximate. Actual weight may vary.

^{*}Value for butterfly is for each arm.

PARTS LIST

KE	Y NO.DESCRIPTION Q'ty				
1	Upper Frame	1	51	Ø 1 ¼" Front Press Bushing	2
2	Front Press Base	1	52	Ø 7/8" Leg Developer Bushing	2
3	Front Press	1	53	Ø 1" Bushing	8
4	Vertical Frame	1	54	Ø 1" Spacer	2
5	Backrest Support Frame	1	55	Rubber Bumper	2
6	Seat Post	1	56	Ø 1 ½" Spacer 2	
7	Seat Support Frame	1	57	Ø 1" Rubber Bumper	2
8	Leg Developer	1	58	Ø 1" x 5/8" Rubber Bumper	2
9	Butterfly Handle	2	59	Ø 1 ¼" Washer	6
10	Right Butterfly	1	60	Ø 1" Cone-shaped End Cap	4
11	Left Butterfly	1	61	Foam Roll End Cap	2
12	Front Base Frame	1	62	Leg Developer End Cap	2
13	Butterfly Base	1	63	2" x 1" End Cap	4
14	Rear Base Frame	1	64	Ø 1" End Cap	1
	Rear Stabilizer	1	65	Handle Sleeve	2
16	Guide Rod	2	66	2" x 2 ¾" Upper Frame End Cap	2
	Foot Plate	1	67	2" x 2" End Cap	3
18	13" Foot Plate Axle	1	68	Single Handle	1
19	Shiver Bar	1	69	Ankle Strap	1
20	Shiver Bar Handle	1	70	Abdominal Strap	1
21	Butterfly Base Cover	1	70 71	1" x 2 ¾" End Cap	-
22		2	72	Leg Developer Axle	4
23	Double Floating Pulley Bracket Foam Tube	1	73	Small Pulley	1 2
23 24	Lat Bar	1	73 74		2
	4 3/4" x 2 3/4" Bracket	3	7 4 75	Weight Stack Cover Ø 2" End Cap	2
26	1 5/8" x 1 ½" Bracket	1	73 76	Ball Stopper	1
27		•	70 77	M10 x 3 ½" Allen Bolt	6
28	Angled Double Floating Pulley Brac Selector Rod	κ υ ι 1 1	77 78	M10 x 3 ½ Allen Bolt	16
29	6 ¾" Front Press Base Axle	1	78 79	M10 x 6 1/4" Allen Bolt	2
	7 ½" Front Press Axle	1	80	M10 x 4 3/8" Allen Bolt	1
31	Backrest Board	1	81	M10 x 3 3/8" Allen Bolt	
		1	82	M10 x 3 3/4" Allen Bolt	2
32	Seat	1	83	M10 x 3 ¾ Allen Bolt	2 4
33 34	163" Upper Cable	1 1	84	M10 x 1 ½ Allen Bolt	1
	98" Butterfly Cable 164" Lower Cable			M10 x 2 ½ Allen Bolt	
35		1 2	85 86	M8 x 1 5/8" Allen Bolt	1
36	Chain Hook	5	87	M6 x 5/8" Screw	4 2
37 38		5 1	88	Ø 5/8" Washer 4	2
39	Long T-shaped Lock Pin	1			2
39 40	T-shaped Lock Pin Lock Knob	1	89 90	M10 x 3 ¾" Carriage Bolt	2 8
		:		M10 x 2 3/4" Carriage Bolt	
41 42	U-shaped Cable Connector	1	91	M10 Aircraft Nut	38
	Weight Plate Selector Pin	1	92	Ø ¾" Washer	60 7
43	5 3/8" Grip	6	93	M10 x 2" Allen Bolt	
44 45	6" Grip	4	94	Pulley Cover	14
45 46	Weight Selector Stam	14			
46 47	Weight Selector Stem	1			
47 49	Pulley	18			
48	Foam Roll	2			
49 50	Pulley Bushing	12			
50	Ø 1 ½" Bushing	8			

LIMITED WARRANTY

Escalade warrants this product to be free from defects in workmanship and material, under normal use and service conditions, for a period of two years on the frame and one year on all other parts and components from the date of purchase. This warranty extends only to the original purchaser. Escalade's obligation under this Warranty is limited to replacing damaged or faulty parts at Escalade's option.

All returns must be pre-authorized by Escalade. This warranty does not extend to any product or damage to a product caused by or attributable to freight damage, abuse, misuse, improper or abnormal usage, purchasers own repairs or for products used for commercial or rental purposes. No other warranty beyond that specifically set forth above is authorized by Escalade.

Escalade is not responsible or liable for indirect, special or consequential damages arising out of or in connection with the use or performance of the product or other damages with respect to any economic loss, loss of property, loss of revenues or profits, loss of enjoyments or use, costs of removal, installation or other consequential damages or whatsoever natures.

The warranty extended hereunder is in lieu of any and all other warranties and any implied warranties of merchantability or fitness for a particular purpose is limited in its scope and duration to the terms set forth herein.

Your statutory rights are not affected.

ORDERING REPLACEMENT PARTS

Replacement parts can be ordered by calling our Customer Service Department Monday to Friday 9am to 5pm.

Tel: 00 44 1792 222 562

E mail: customerservices@escaladesports.co.uk

When ordering replacement parts, please give the following information,

- 1. Model
- 2. Description of Parts
- 3. Part Number
- 4. Date of Purchase