


TRX 2.5 Illustrated

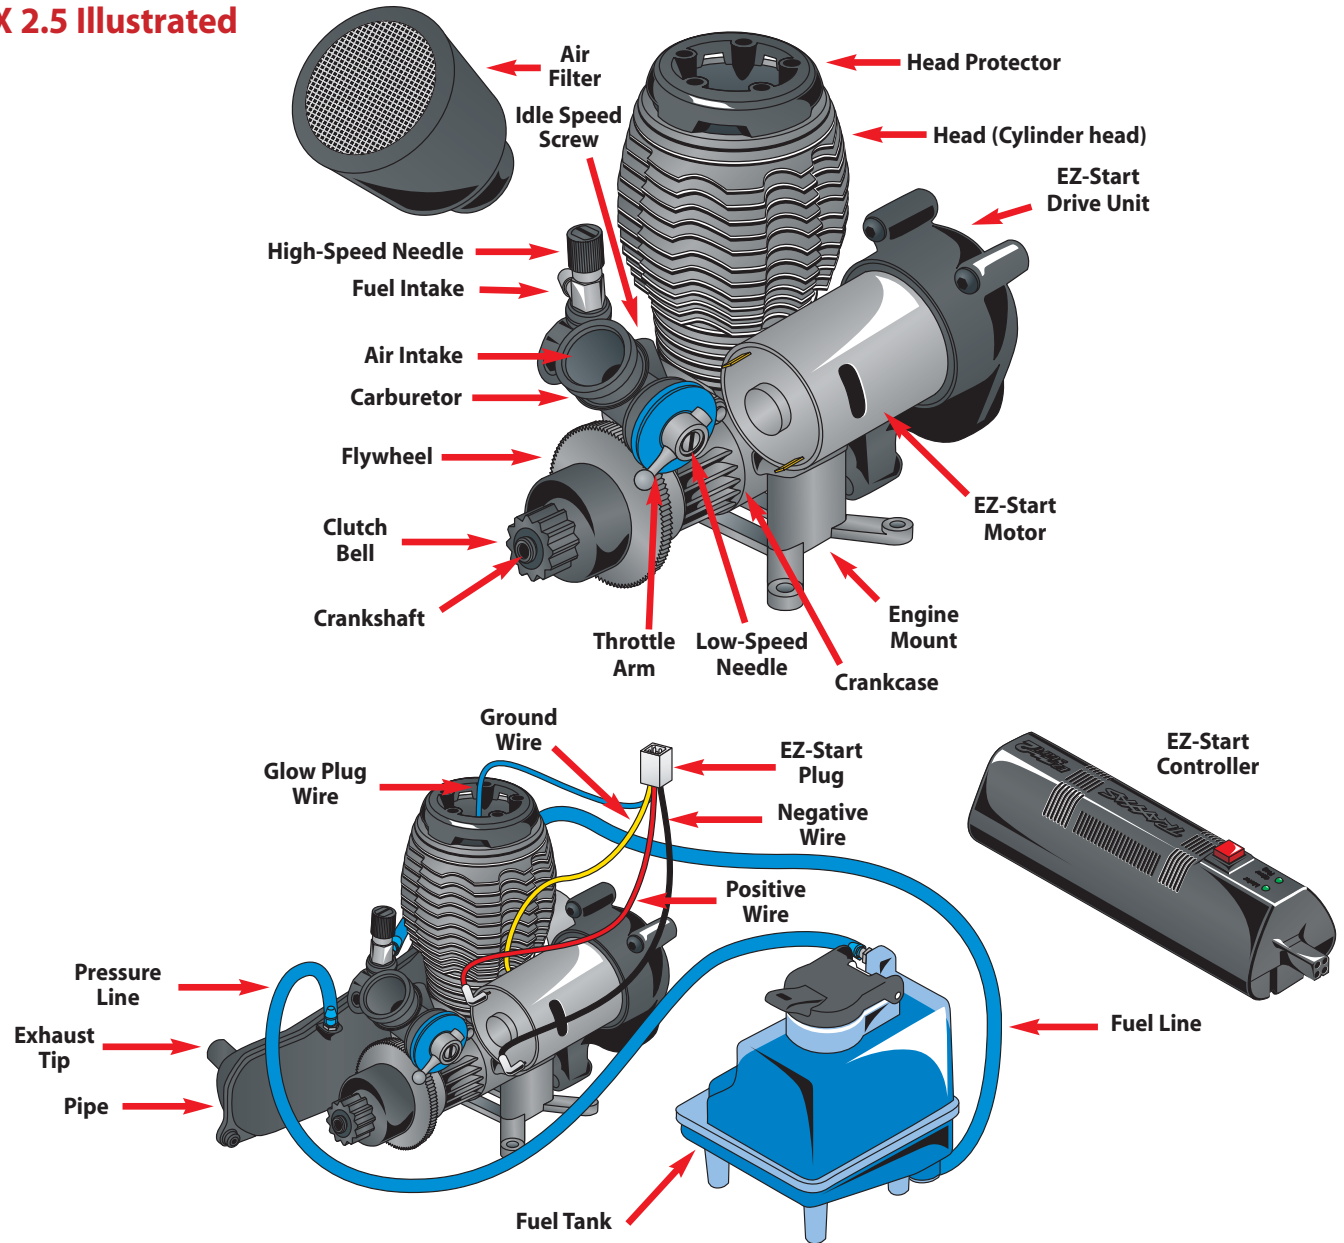

Terms to Know

You'll find these Nitro R/C engine terms throughout this section of the manual.

.15 - .15 or "15" refers to the size of the engine. The TRX 2.5 is .15 cubic inches or 2.5 cubic centimeters (cc). The name "TRX 2.5" is derived from the cc measurement.

ABC - Abbreviation for aluminum, brass, and chrome. Refers to engine construction that consists of an aluminum piston that slides in a chrome-plated brass sleeve. The TRX 2.5 uses ABC construction.

Air filter - The air filter sits atop the carburetor and prevents harmful dust and dirt from entering the engine. Dirt ingestion is the number one cause of premature engine failure so the engine should never be run without the air filter in place.

Big Block .15 - A .15 (2.5) engine that uses a larger crankcase size and longer stroke than typical .15 engines. Generally only used for specific racing classes.

Break-in - Break-in is the procedure for running a brand new engine according to specific instructions. This correctly prepares the engine for normal running. The break-in procedure can be different for different makes of engines. Follow the Traxxas directions for break-in exactly.

Carb - Abbreviation for carburetor.

Carburetor - The carburetor atomizes (mixes) the fuel with the air so that the engine can burn it. There are two types of carburetors, slide carbs and barrel carbs. The TRX 2.5 uses the superior slide carburetor design.

Clean-out - Cleaning-out is a condition that occurs when the engine is accelerating and the fuel mixture becomes sufficiently lean to allow the engine to continue into its upper RPM power band. Usually characterized by a noticeable decrease in blue exhaust smoke and a dramatic increase in engine speed.

Combustion chamber - The combustion chamber is machined into the bottom of the cylinder head. This is where the glow

plug ignites the fuel. The shape of the combustion chamber is designed to promote more efficient burning of the fuel.

Connecting rod - The connecting rod transfers the piston motion to the crankshaft. The TRX 2.5 racing engine uses a "knife-edged" connecting rod. The aerodynamic, sharpened edges allow it to "slice" through the pressurized air/fuel mixture inside the crankcase.

Cooling fins - The cooling fins are molded into the cylinder head and crankcase and cause heat to be drawn away from the engine. Heat is removed when it dissipates into the air passing across the cooling fins. It is important to keep the fins clean of dirt and debris for maximum cooling efficiency.

Crankcase - The engine "body" that contains all of the running mechanical components.

Crankshaft - The main shaft of the engine that contains the rotating assembly.

Cylinder head (head) - The finned aluminum part on top of the engine that is responsible for dissipating most of the engine's heat. The combustion chamber is machined into the bottom of the head.

Dyno - Abbreviation for dynamometer. A precise piece of testing equipment that accurately measures engine power and torque output over the engine's entire RPM range.

EZ-Start - Second generation Traxxas on-board electric starting system. The system consists of a hand held starter control unit and an on-board gearbox with an electric motor to spin the engine. The new EZ-Start contains many performance and reliability improvements over the first generation EZ-Start.

Filter foam - The oiled foam element inside the air filter housing. The filter foam in the TRX 2.5 must be thoroughly cleaned and re-oiled after every hour of run time.

Fit - Usually refers to the fit of the piston and sleeve. If the fit is tight, then the piston will feel very tight at top of the sleeve and the engine will have good sealing and compression. If the fit is loose, then compression will be low and the piston and sleeve should be replaced.



Learn terms related to the TQ-3 Radio System on page 12.

Flame-out - Occurs when the engine stops running at high RPM. Usually the fault of an excessively lean fuel mixture or glow plug failure.

Fuel - (10% 20%) The TRX 2.5 must have model engine fuel to run. Traxxas Top Fuel is recommended. Fuel is sold in quarts and gallons from hobby dealers. The 10 and 20% labeling refers to the percentage amount of nitromethane contained in the fuel (*see "nitro percentage" definition*).

Fuel mixture - The ratio of fuel to air as determined by the needle settings of the carburetor.

Fuel tubing (fuel line) - The thick silicone tubing that carries fuel from the fuel tank to the carburetor.

Glow plug - The glow plug is located in the cylinder head at the top of the combustion chamber. It contains a platinum element that glows red hot when voltage is applied. When the engine is being started, the heat from the glow plug ignites the fuel mixture and starts the combustion process.

Glow plug driver - This tool clips onto the glow plug and supplies the required voltage to light the glow plug element. It is also called an igniter. EZ-Start equipped engines do not require this separate tool.

Header - The aluminum tube that connects the exhaust system to the engine exhaust port. The length and diameter of the header must be carefully selected to extract the most power from the engine.

High-speed needle - Adjusts the carburetor's fuel/air mixture at high RPM.

Idle speed - The speed (RPMs) the engine runs at when the transmitter's throttle trigger is at neutral.

Idle speed screw - Located on the carburetor body. This screw adjusts the idle RPM of the engine.

Lean - A running condition where the engine is not getting enough fuel (for the available air). Symptoms include engine overheating, or the engine runs for a short time and then

stalls, particularly at high speed. This is a dangerous condition that should be corrected immediately or it can ruin your engine.

Leaning the mixture - Turning either the high speed and/or low-speed needle(s) clockwise to decrease the amount of fuel the engine receives.

Low-speed needle - Needle valve that controls the low-speed fuel mixture.

Needle valve - Valve consisting of a tapered needle that closes against a corresponding seat to regulate fuel flow.

Nitro - Abbreviation for nitro methane, a component of model engine fuel that improves fuel combustion and power output. Nitro also refers to a class of RC powered by model engines instead of electric.

Nitro content - The amount of nitro methane used in the fuel. Usually measured as a percentage of the total fuel volume. Traxxas engines are optimized to use 10-20% nitro. 30% nitro may be used for racing.

Nitromethane - Nitro methane is a component in the fuel that increases power from the combustion process up to a point. Engines are generally optimized to use a range of nitro content for the best power.

O-ring - Rubber "O"-shaped ring used as a sealing gasket.

Pipe - Abbreviation for the tuned exhaust pipe on a nitro engine. *See "Tuned Pipe" definition*.

Piston - The piston is the internal engine part that is attached to the upper end of the connecting rod and moves up and down in the cylinder sleeve. The precise fit between the piston and the sleeve creates a seal that allows engine to have the required compression for combustion.

Port - Ports are openings in the sleeve that allow atomized fuel to enter the combustion chamber and burned exhaust gasses to exit. The shape and location of the ports are a large factor in controlling the engine timing and power output.



Priming - Manually causing fuel to move from the fuel tank up to the carburetor. This is sometimes necessary after the engine has been sitting for a long period of time and all the fuel has drained back to the tank. On a Traxxas model this is done by holding your finger over the exhaust tip for one or two seconds while the engine is starting.

Punch - A term that refers to how quickly the model responds to throttle input or how quickly it accelerates.

Rich - A running condition where the engine is getting too much fuel for the available air. It is better to run an engine slightly rich to increase engine life. Excessively rich mixtures cause the engine to have sluggish performance with exaggerated blue smoke and unburned fuel coming from the exhaust.

RPM - Abbreviation for revolutions per minute (how many times the engine crankshaft spins in a minute).

Sleeve - Internal engine part that contains the piston. The precise fit between the sleeve and the piston creates a seal that allows engine to have the required compression for combustion. The sleeve in a TRX engine is made of brass and is then hard-chrome plated.

Slide carburetor - The throttle on a slide carburetor closes and opens by sliding a barrel in and out of the carburetor body. This type of carburetor is preferred for performance use because it provides a less restrictive "straight-through" air path than the barrel carburetor design.

Stall - When the engine stops running, usually due to an incorrect fuel mixture setting or running out of fuel.

Tuned pipe - The tuned exhaust pipe usually consists of a specially-shaped metal or composite chamber with baffles that is designed to enhance the power output of the engine.

Wear-in - Fitment process that occurs during engine break-in where internal engine parts develop an even more precise matched fit through actual use under controlled circumstances.

WOT - Abbreviation for wide-open throttle.



You may use higher nitro percentages than 20% in certain circumstances. Call 1-888-TRAXXAS for more information.

The Fuel

Use the Right Fuel

It's imperative that you use the correct fuel in your TRX 2.5 for maximum performance and engine life. Traxxas Top Fuel should be used to ensure correct engine lubrication, performance, and ease of tuning. Traxxas Top Fuel has been proven in thousands of engines, so you can count on it every day for great performance.



- ▶ Top Fuel is the only fuel which is 100% certified for use in Traxxas engines.
- ▶ Traxxas Top Fuel is made with just the right balance of the highest grade natural and synthetic lubricants to allow excellent throttle response and the best top-end performance, without sacrificing long-term durability.
- ▶ All of the components in the fuel are carefully selected from the best materials available and then custom blended to match the metallurgy and temperature characteristics of Traxxas engines.

You may use 10% or 20% nitro-content fuel. Use the same percentage all the time; don't switch back and forth between 10% and 20% fuel. If you break-in your engine on 20% fuel, then always use 20% fuel.

What about Other Fuels?

Can other brands of fuel be used besides Top Fuel? There are other fuels that can provide satisfactory performance; however there could be long-term costs in the form of decreased engine performance, loss of tuning ease, and shorter engine life.


Everyone has an opinion or a claim to make about fuel. The engineering team at Traxxas spent over 2-years developing the TRX 2.5 racing engine. No one knows more about the specific fuel requirements of Traxxas engines, than Traxxas engineers. We strongly urge you not to take chances with your engine investment and use the Traxxas fuel made for the TRX 2.5.

Handling the Fuel

- ▶ Follow all directions and warnings on the fuel can.
- ▶ Keep the fuel tightly capped at all times. Some components in the fuel can evaporate very quickly and upset the balance of the fuel.
- ▶ Do not store unused fuel in the fuel dispenser. Immediately return fresh unused fuel back into the fuel can.
- ▶ Do not mix old and new fuel. Never mix different brands of fuel together.
- ▶ Store the fuel in a cool dry location, away from any source of heat, ignition, or combustion.
- ▶ Read and follow the safety precautions on page 5 in this manual.

Filling the Fuel Tank

Use a fuel dispensing bottle (Traxxas Top Fueler, part# 5001) to put fuel into the SportMaxx's fuel tank. To fill the fuel bottle, squeeze the air out, insert the dispenser tip into the fuel can, and release your grip on the bottle. As the bottle expands, fuel will be drawn into it.

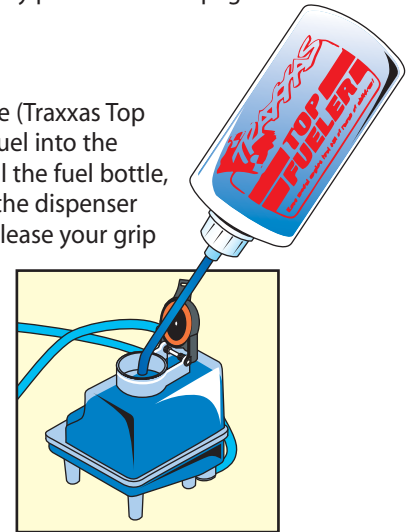

To fill your model flip up the spring-loaded cap on the fuel tank, insert the tip of the fuel bottle, and squeeze to dispense the fuel. Fill the tank until the fuel level reaches the base of the filler neck. Close the fuel tank lid, making sure it closes tightly.

Fuel Tank Seal Adjustment

The rubber seal on the fuel tank is important to the function of the engine. The fuel tank is pressurized by the exhaust system to provide reliable fuel flow. If the tank lid does not seal properly, an air leak will be created that can cause your engine to run erratically and be difficult to start. If necessary, the rubber O-ring tank seal can be adjusted for improved sealing by tightening the screw on the underside of the tank lid.

The Air Filter

The TRX 2.5 air filter is carefully designed to deliver maximum performance while protecting your engine from dust and dirt. Use only the supplied filter. **You will not improve engine performance by switching to an aftermarket filter**, and you may risk engine damage due to poor filtration.


The TRX 2.5 air filter assembly consists of 3 pieces:

1. A rubber filter base
2. A plastic housing consisting of a permanently assembled mesh cap and body
3. An oiled foam element

You must clean the filter after every hour of runtime, **even if the filter looks clean**. Dust (which is often too fine to see) and dirt constantly move through the filter anytime the engine is running. Even if you can't see dirt on the filter, it is present inside the foam after any amount of runtime. If you exceed the recommended cleaning intervals, your engine will be damaged. Engine damage or wear due to dirt ingestion is easy to detect, and one of the top causes of premature engine failure.


Air Filter Cleaning Instructions

1. Remove the air filter from the carburetor bore by pulling the entire filter firmly to the side to release it. Do not pull straight up.

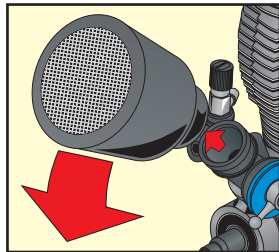

2. Disassemble the filter. Pull the rubber base out of the filter body. With the base removed, the foam element is visible in the bottom of the filter body. Pull out the foam element.

3. Clean the filter parts by thoroughly washing all three pieces of the filter assembly in hot soapy water (dishwashing detergent works well). Repeat twice.
4. Thoroughly dry the parts with a clean towel or compressed air. Remember to wear your safety glasses when working with compressed air.
5. Oil the foam element by saturating it with foam filter oil. Use the supplied Traxxas filter oil (part# 5263) or a high-quality, special-purpose foam filter oil like what is used for high-performance motorcycle and ATV engines. This type of filter oil is available at motorcycle pro-shops. If foam filter oil is not available, clean 30-40 weight motor oil can be substituted, but is not preferred. **Never run the engine without a properly oiled filter!** Apply 30 drops of the Traxxas filter oil evenly to the top, bottom and sides of the filter element (30 total drops divided among the 3 surfaces). Squeeze the filter element repeatedly to help spread the oil throughout. Squeeze the excess oil from the foam. The filter element should be evenly colored by the oil. Even color indicates that the oil is evenly distributed. **Note: Do not use the air filter oil for anything other than the air filter. It is not meant to be a lubricant.**
6. Reassemble the filter and install it on the engine, making sure the rubber base fits securely on the carburetor with no gaps or air leaks.

 Clean your air filter after every hour of runtime to avoid engine damage, even if the filter looks clean.

 If you use compressed air to dry your air filter assembly, wear safety glasses and avoid directing compressed air toward your skin.




See page 35 for more information on how air density affects engine tuning.

The Carburetor

Understanding the Carburetor adjustments


The carburetor performs several functions. It controls the engine's speed by restricting the intake of air and fuel into the engine. It atomizes the fuel (suspends the fuel droplets in the air) and also controls the air/fuel ratio of the mixture entering the engine (how much air for a given amount of fuel).

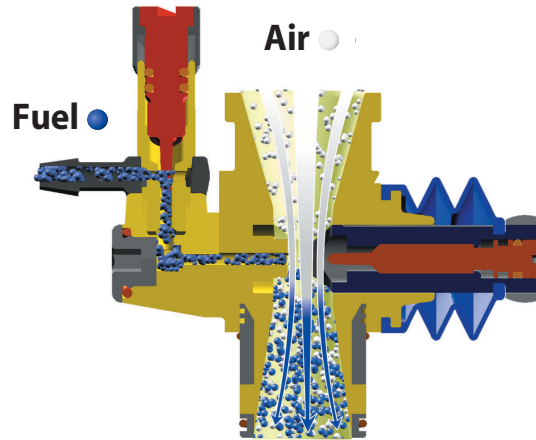

To help provide a better understanding of engine tuning and why it's necessary, the following is a brief explanation of the air/fuel combustion process that takes place inside the engine.

In order to create the cylinder pressure that results in power, the engine burns the air/fuel mixture. Both air and fuel, in correct amounts, are needed for proper combustion. It is the carburetor's job to mix the air and fuel together (atomize the fuel), in the correct proportion for the best possible combustion. This is the ideal air/fuel ratio. The ideal air/fuel ratio required for the engine remains roughly constant. Due to variations in atmospheric conditions (temperature, humidity, altitude etc.) fuel flow adjustment valves (called fuel mixture needles) are required to meter the fuel and maintain the ideal air/fuel ratio in these ever-changing conditions. For example, colder air is more dense (more air molecules) for a given volume of air and therefore requires more fuel (more fuel molecules) to maintain


the correct air/fuel ratio. Warmer air is less dense (fewer air molecules) and therefore needs less fuel to maintain the correct air/fuel ratio. The tuning needles are there to adjust how much fuel is made available for the carburetor to mix with the available air (atomization).

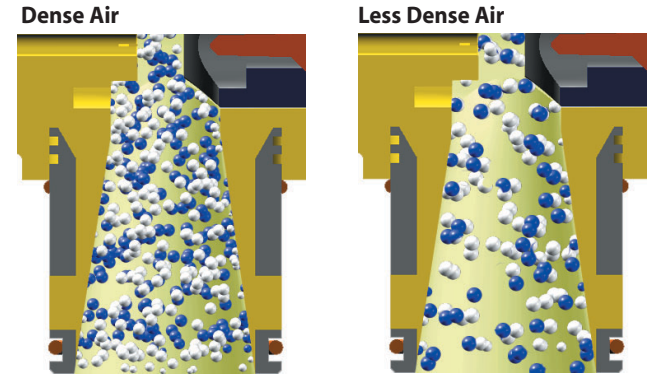

The Fuel Mixture Needles

The amount of fuel metered and atomized by the carburetor is controlled by the two mixture needles, the high-speed needle and the low-speed needle. The low-speed needle is used to meter the fuel used by the engine at idle and low RPM (part-throttle) engine speed. The high-speed needle is used to meter the fuel when the throttle is open from part throttle to wide-open throttle (WOT). Two needles on the TRX 2.5 provide precise control of the air/fuel ratio across the engine's entire RPM range.

The maximum possible fuel flow is always controlled by the high-speed needle. It works like the main water valve on a garden hose. Turn it clockwise to close the valve, counter-clockwise to open it. When the throttle is at idle or partially open, the low-speed needle again meters the fuel flow at the outlet (needle seat) where the fuel enters the carburetor venturi. This second valve acts like the spray nozzle at the end of the garden hose in our example. When you accelerate from idle, the throttle opens and the low-speed needle is pulled away from the needle seat. This allows more fuel to flow with the increased air flow. As the throttle is increased, the low-speed needle is

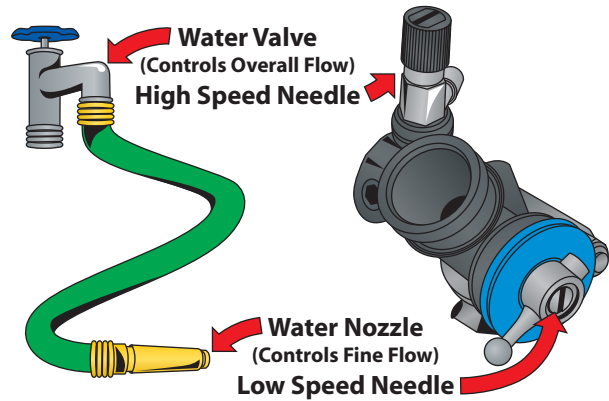

- ▶ Slightly lean fuel mixtures deliver stronger, more efficient combustion and more power, but with less lubrication.
- ▶ Slightly rich fuel mixtures deliver cooler running and more lubrication but with slightly less power.

Tuning the engine means finding the perfect balance between the two; excellent power to meet your needs while maintaining good lubrication for long engine life. **The optimal fuel mixture setting is rich** to provide a safety margin against having a lean condition if some variable changes (such as the temperature from one day to the next).


General fuel mixture settings are measured by the number of turns the needles are turned out from fully closed. The fuel mixture settings have been pre-set from the factory to typical break-in settings. Do not readjust your carburetor from the factory settings until after the engine is started and running, and you have been able to observe the engine running to assess what minor adjustments may be required to compensate for fuel, temperature, and altitude. Adjustments are usually made in 1/8 or 1/16-turn increments.

The Idle Speed Adjustment

The idle speed screw controls the closed position of the throttle slide. When the throttle servo is in its neutral position, the throttle slide should be stopped against the idle adjustment screw. Always use the idle speed adjusting screw to control engine idle. Do not use the throttle trim on the transmitter to adjust idle speed. The idle speed should be set as low as possible and still maintain reliable running.

pulled completely away from the needle seat leaving it fully open. At that point, fuel metering is entirely controlled by the high-speed needle. Again, using our water hose example, when the spray nozzle at the end of our garden hose is fully open, then the main water valve can be used to adjust how fast the water flows.

The engine's performance is directly linked to the fuel mixture. Richening the fuel mixture increases the amount of fuel in the air/fuel mixture ratio and leaning the fuel mixture decreases the amount of fuel in the air/fuel mixture ratio.

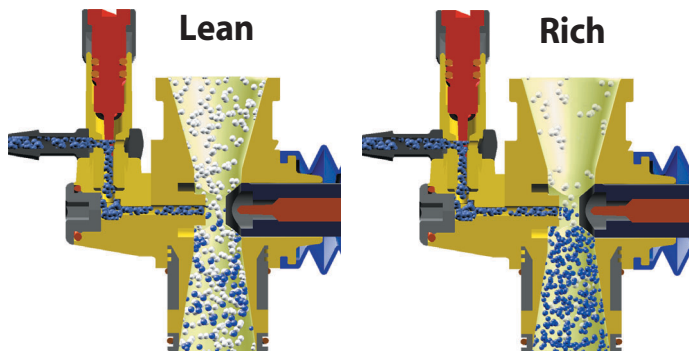

▶ See *Tuning the TRX 2.5 for Best Performance* on page 34 for complete information on adjusting the air/fuel mixture and idle speed.

💡 If your factory preset carburetor adjustments have been tampered with, use the following settings: set the low-speed needle so that the screw head is flush with the end of the slide. Set the high-speed needle to 4 turns out from closed. Always use the factory settings for initial starting. Only use these settings when the factory settings have been lost.



Use the Right Charger


The most convenient type of charger is an AC peak-detecting charger that plugs directly into an AC wall outlet. It contains special peak-detection circuitry that automatically shuts the charger off when the battery is fully charged.

If you're using a 15-minute timed charger, always fully discharge the battery pack before each charge. Some high mAh battery packs (1500 mAh or higher) require more than the standard 15 minutes of charge time. If the battery pack is cold after 15 minutes of charging, add another 5 minutes of charge time. Closely monitor the battery pack and stop charging it when it begins to feel warm to the touch. Never leave a battery charging unattended. Always follow charger manufacturer's instructions.

The Traxxas EZ-Start Electric Starting System

The Traxxas EZ-Start brings the convenience of push-button electric engine starting to your SportMaxx. The EZ-Start consists of a handheld control unit and an on-board motorized starter.


- ▶ Power for the EZ-Start system comes from a 7.2-volt rechargeable NiCad battery pack installed in the handheld control unit (battery not included).
- ▶ The engine glow plug is heated automatically by the EZ-Start system, eliminating the need to keep up with a separate glow plug igniter.
- ▶ The voltage to the glow plug is kept constant, regardless of the load placed on the starter by the starter motor.
- ▶ The "Glow Plug" LED (light emitting diode) on the control unit indicates the condition of the glow plug.
- ▶ The "Motor" LED indicates the status of the EZ-Start electric starter motor.
- ▶ The cush drive mechanism in the drive unit prevents damage to the gears caused by engine kickback.
- ▶ Smart Start™ protection circuitry prevents damage to the motor by cutting power if the load on the motor or other electronics exceeds safe limits.

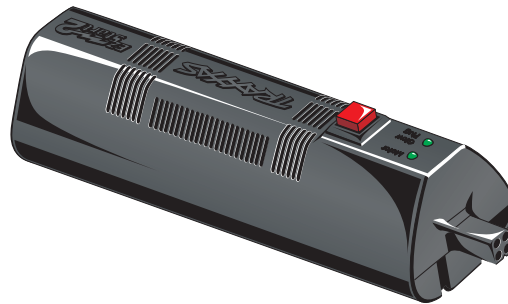

Installing the EZ-Start Battery

The EZ-Start system requires a fully charged 7.2-volt NiCad battery pack (not included). Use a charger (not included) designed for 7.2-volt battery packs. Charge the battery according to the charger manufacturer's directions.

1. Press the tab in the end of the battery compartment door to open
2. Plug a fully charged 7.2-volt NiCad battery pack into the connector inside.
3. Twist the battery 2 or 3 times to twirl the battery plug wires. This helps hold the wire and battery in place when the battery is placed in the compartment
4. Place the battery into the compartment and press the wires securely into place.
5. Slide the battery compartment door back on and lock the end tab.



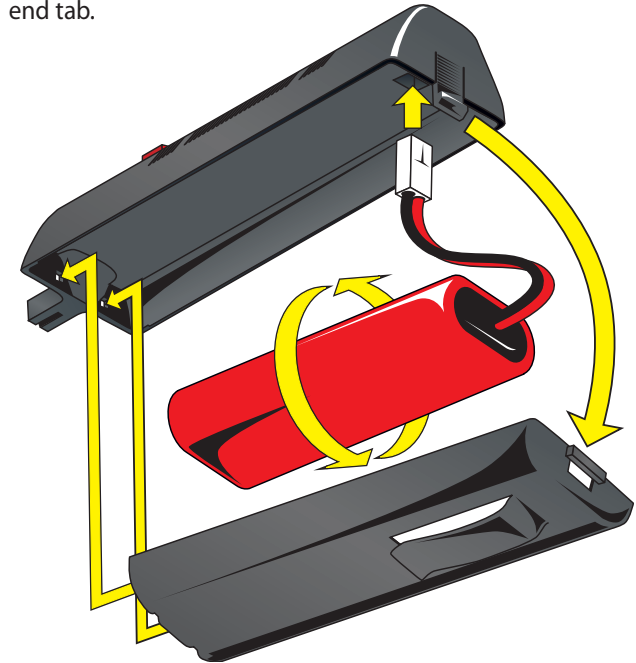


Using the EZ-Start

Your EZ-Start controller plugs into a 4-prong receptacle in the center of the pickup bed on your SportMaxx. When the red button on the controller is depressed, the EZ-Start motor begins to spin the engine, and power from the control unit heats the glow plug. Assuming all settings and preparations are correct, the engine should start almost immediately.


Each of the two status indicator LEDs on the handheld control unit, the **Motor** LED and the **Glow Plug** LED, should light green while starting. If either LED fails to light while starting, there is a fault indicated with that function:


- ▶ If the **Glow Plug** LED fails to light, the glow plug may be bad, or the glow plug wire may be damaged or disconnected.
- ▶ If the **Motor** LED fails to light and the starter fails to operate, then the EZ-Start is in protection mode.

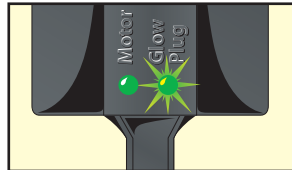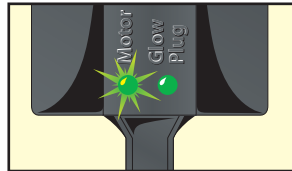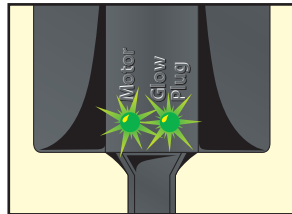


Protection Mode

The EZ-Start uses Smart Start™ technology to monitor the condition of the system and detect failures. The controller monitors the load being placed on the EZ-Start motor. If the load becomes excessive, the system shuts off power to the motor to prevent costly damage to the motor and the controller. This may occur, for example, if the engine floods with fuel during starting. The starter spins at first but when excessive fuel in the combustion chamber begins to lock up the engine, the starter motor slows under the heavier load. This causes the protection circuit to shut off the power to the motor. Allow at least 3 minutes for the starter motor to cool and the circuit to automatically reset before continuing. Use the time to find and eliminate the condition that caused the excessive load on the starter motor.

 When the EZ-Start controller is in protection mode, wait at least three minutes before attempting to start the engine, to give the starter motor time to cool.

 It's normal for your EZ-Start controller to become warm after repeated use.

 See page 43 for information on clearing a flooded engine.



See *Important Points to Remember* on page 5 for other precautions.



Never run your SportMaxx indoors. Since the TRX 2.5 racing engine exhaust fumes are harmful, always run your SportMaxx outdoors, in a well-ventilated area.



Your TRX 2.5 racing engine doesn't usually require priming. If you do need to prime your engine, watch the fuel line carefully to avoid flooding your engine. See page 43 for information on clearing a flooded engine.



Your carburetor is pre-set at the factory to give the correct air-to-fuel ratio and idle speed for engine break-in. Do not adjust the carburetor unless you observe a poor running condition that requires correction.

Breaking-in Your TRX 2.5 Racing Engine

The TRX 2.5 uses a ringless, aluminum-brass-chrome (ABC) piston/sleeve construction. This type of engine design relies on a very precise running fit between the piston and sleeve for cylinder sealing. **Engine break-in is necessary to allow the piston and sleeve to develop an extremely precise fit and optimum cylinder sealing. Therefore, proper engine break-in is critical to achieving the fastest, most reliable engine performance.**

Allow yourself about 1 to 1½ hours to complete the break-in procedure. The engine break-in period will take 5 tanks of fuel in a SportMaxx. The break-in time is not the time to impress your friends with your new SportMaxx. **You must wait until the engine is fully broken in before attempting sustained high speed running.** Patience and careful attention during break-in will reward you with the best-performing TRX 2.5 possible.

During break-in, your engine may appear to malfunction with symptoms like stalling, inconsistent performance, and fouled glow plugs. These are simply the normal "break-in pains" engines sometimes go through. They will disappear once your engine is fully broken in. Many owners report not experiencing any of these symptoms with the TRX 2.5. **We recommend replacing the glow plug with a new one after the engine break in procedure.**

Engine Break-in Procedure

The focus during break-in is to vary and limit the engine speed. This will be accomplished by accelerating and stopping at different rates for the first 5 tanks of fuel. As the engine begins to break-in, the duration and intensity of the acceleration will gradually increase. **Sustained high-speed running is not permitted until the 6th tank of fuel.** Perform the initial break-in on a large, flat, paved surface. **Apply all throttle and braking actions gently. Abrupt acceleration or braking could cause the engine to stall unnecessarily.**

- ▶ Special break-in fuels are not recommended. Use the same fuel you plan to use everyday.
- ▶ If possible, avoid breaking-in the engine on extremely hot or cold days.
- ▶ Pay careful attention to the fuel level. Do not allow the fuel tank

to run completely empty. An extremely low fuel level causes the mixture to run too lean. This could result in a burned glow plug or extremely high engine temperatures.

- ▶ Keep extra glow plugs handy (Traxxas part #3231). The break-in process can cause deposits to form on the plug leading to plug failure.

Follow the instructions exactly for each of the first 6 tanks of fuel.

Starting Your TRX 2.5 Racing Engine for the First Time

Before you start your TRX 2.5 racing engine for the first time, make sure you have read all instructions and precautions in this manual. **Pay close attention to the tank-by-tank break-in instructions in the next section, and make sure you have read and understood them before you run your engine.**

Your engine must be at room temperature (70°F or 21° C) or above the first time you start it. If it's cooler than room temperature outside, keep your SportMaxx indoors until you're ready to start it, then take it outside.

1. Turn on the radio system according to the instructions on page 18.
2. Make sure the throttle is in the idle position.
3. Connect the EZ-Start controller according to the instructions on page 31.
4. Press the starter button and watch for fuel moving through the fuel line up to the carburetor. Watch closely! The fuel moves very fast. If the fuel doesn't move through the line within 5 seconds, prime the engine by briefly (one or two seconds) covering the exhaust outlet until the fuel is just visible in the carburetor fuel line. **Watch carefully! If the engine is primed too long, it will flood with fuel and stop turning.**
5. Once fuel reaches the carburetor, the engine should quickly start and idle.
6. Disconnect the EZ-Start controller from the model.
7. Proceed with the engine break-in.

If your engine doesn't start, see *Troubleshooting Your SportMaxx* on page 42.

Tank 1

1. Drive the model with the **body off**.
 2. Driving procedure: **Gently pull the throttle trigger to 1/4 throttle over a 2-second count. Then gently apply the brake to stop.** Count the two seconds out while accelerating: one thousand one, one thousand two, and then stop. Operate the throttle trigger as smoothly as you can. **Repeat this starting and stopping procedure until the first tank of fuel is nearly empty.**
 3. Look for thick blue smoke exiting the exhaust outlet. If there is no smoke, richen the high-speed needle 1/4 turn, by turning the needle counterclockwise.
 4. When the fuel tank is nearly empty, shut off the engine by pinching the fuel line connected to the carburetor.
 5. Let the engine cool for 15 minutes.
- Note: If at any point the engine cuts out or stalls during gentle acceleration, richen the high-speed needle 1/4 turn by turning the needle counterclockwise.

Tank 2

1. From tank 2 forward, the SportMaxx should be driven **with the body on**.
2. Driving procedure: **Gently pull the throttle trigger to 1/2 throttle over a 2-second count. Then gently apply the brake to stop.** Count the two seconds out while accelerating: one thousand one, one thousand two, and then stop. **Repeat this starting and stopping procedure until the second tank of fuel is nearly empty.**
3. When the fuel tank is nearly empty, shut off the engine and let it cool for 15 minutes.

Tank 3

1. Driving procedure: **Gently pull the throttle trigger to 1/2 throttle over a 3-second count. Then gently apply the brake to stop.** Count the three seconds out while accelerating: one thousand one, one thousand two, one thousand three, and then stop. **Repeat this starting and stopping procedure until the third tank of fuel is nearly empty.**
2. As the engine loosens, the idle speed may increase and cause the model to try to creep forward when stopped. Reduce the idle

speed by turning the idle adjustment (see page 22) on the carburetor counterclockwise.

3. When the fuel tank is nearly empty, shut off the engine and refuel. From here on, you do not need to let the engine cool between tanks.

Tank 4

1. Driving procedure: **Gently pull the throttle trigger to full throttle over a 3-second count. Then gently apply the brake to stop.** Count the three seconds out while accelerating: one thousand one, one thousand two, one thousand three, and then stop. **Repeat this starting and stopping procedure until the fourth tank of fuel is nearly empty.**
2. Apply the throttle gradually! Your finger should not reach full throttle until the end of the three-second count.
3. Keep your driving smooth and consistent.
4. When the fuel tank is nearly empty, shut off the engine and refuel.

Tank 5

1. Driving procedure: **Gently pull the throttle trigger to full throttle over a 3-second count, hold for 2 more seconds, and then gently apply the brake to stop.** Count the five seconds out while accelerating. **Repeat this starting and stopping procedure until the fifth tank of fuel is nearly empty.**
2. When the fuel tank is nearly empty, shut off the engine and refuel.

Tank 6

During the sixth tank of fuel, the engine can be tuned for general performance use. Proceed to the next section in this manual.

Tank	Throttle	Time	Cool	Body	Notes
1	1/4	2 Seconds	15 Minutes	Off	Apply throttle gradually.
2	1/2	2 Seconds	15 Minutes	On	Apply throttle gradually.
3	1/2	3 Seconds	-	On	Reduce idle speed if necessary.
4	Full	3 Seconds	-	On	Keep your driving consistent.
5	Full	5 Seconds	-	On	Accelerate over 3 second count, hold for 2 seconds.



As you gain experience in the hobby, you may discover that many people have differing opinions on what is the proper procedure to break-in a model engine. *Only use the Traxxas break-in procedure.* Other break-in procedures could result in a weak, damaged, or otherwise poor performing engine. The procedure outlined here was extensively tested and proven to yield better performing engines than other "common" break-in methods. Even if you have years of experience using model engines, please do not ignore this caution!



When adjusting the low-speed fuel mixture, it is very important to make several high-speed runs with the SportMaxx between adjustments to clear out any excess fuel. Perform the pinch test immediately after. If the engine is allowed to idle for a long period of time, it could "load up" with fuel and give you an inaccurate measurement from your pinch test.



For your convenience, the low-speed needle has a positive stop that prevents it from being over tightened and damaging the needle and seat. This also provides an easy way to gauge how many turns out from closed the low-speed needle adjustment is set to.



When tuning for performance, watch closely to notice when there is no longer any increase in speed or power when the high-speed mixture is lean. If you lean the high-speed mixture to the point that the engine cuts-out, hesitates, or stalls, you are well into the danger zone and engine damage is likely. Richen the high-speed needle 1/4 turn and retune.

Tuning the TRX 2.5 for Best Performance

The engine's performance depends on the fuel mixture. Turn the mixture needles clockwise to lean the fuel mixture and counterclockwise to richen it. Leaning the fuel mixture will increase engine power up to the engine's mechanical limits. **Never run the engine too lean (not enough fuel flow). Never lean the engine until it begins to cut-out or stall. Leaning the engine beyond the safe allowable limits will result in poor performance and almost certain engine damage.** Indications of an overly lean mixture include:

- ▶ Cutting out or sudden loss of power during acceleration.
- ▶ Overheating (temperature beyond 270° F at the glow plug)
- ▶ Little or no blue smoke coming from the exhaust.

If any of these conditions are present, stop immediately and richen the high speed mixture 1/4 turn. The engine will probably be slightly rich at that setting and you can then retune for performance. Always tune for performance by starting rich and moving leaner toward the ideal setting. Never try to tune from the lean side. There should always be a light stream of blue smoke coming from the exhaust.

Before you begin tuning, the engine should be warmed up to its normal operating temperature and running slightly rich. All final tuning adjustments must be made to the engine at its normal operating temperature. You can tell the engine is running rich by noting any of the following:

- ▶ Sluggish acceleration with blue smoke coming from the exhaust.
- ▶ There is unburned fuel spraying from the exhaust tip
- ▶ Leaning the high-speed fuel mixture increases performance


High-Speed Fuel Mixture Adjustment

With the engine warm and running at a rich setting, gradually lean the high-speed fuel mixture in 1/16 turn increments. Make several high-speed passes with the SportMaxx after each adjustment to clear out the engine and note any change in performance. The TRX-2.5 is extremely powerful. Remember to apply the throttle gradually to prevent wheelies or loss of

control. Continue this procedure until one of the following conditions exist:

1. There is no longer any performance improvement
2. The engine begins to cut out at high speed (**Danger!**)
3. There is a sudden loss of power during acceleration (**Danger!**)
4. The engine begins to overheat. Symptoms of overheating include:
 - ▶ Steam or smoke coming from the engine (not exhaust)
 - ▶ Hesitation or stalling during acceleration
 - ▶ Popping or clattering sound when decelerating (detonation)
 - ▶ Fluctuating idle speed
 - ▶ Temperature measurement above 270° F at the glow plug

If any one of the above conditions occurs, the fuel mixture is already past the maximum safe lean setting. Richen the fuel mixture to the optimum setting by richening the high-speed needle at least 1/8 turn counterclockwise and retest. This setting will extend engine component life.

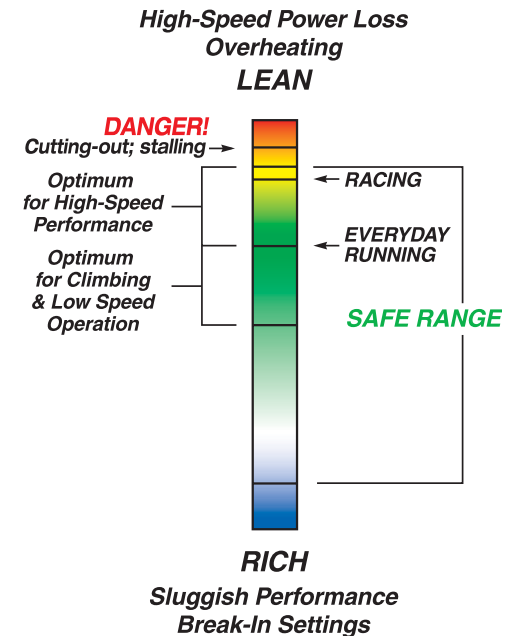

Low-Speed Fuel Mixture Adjustment

The low-speed mixture is always set after the high-speed needle is correctly adjusted. The low-speed mixture will be set using the pinch test.

1. Once the engine is warm, do several high-speed runs to confirm that the high-speed needle is set correctly.
2. Bring the vehicle in and pinch closed the fuel line going into the carburetor. The engine should run for 2-3 seconds, speed up, and then die.
3. If the engine runs longer than 3 seconds, then lean the low-speed needle 1/16 turn, make several more high-speed runs, and retest.
4. If the engine dies immediately without speeding up, then richen the low-speed needle 1/8 turn, make several more high-speed runs, and retest.

When the low-speed needle is set correctly, the engine's throttle response should be very quick, possibly even to the point of making it difficult to keep the SportMaxx from doing a wheelie when you accelerate!

Idle Speed Adjustment

Once the high and low-speed mixtures have been set, reduce the idle speed to the minimum reliable idle speed. Remember, this adjustment should be made while the engine is running at normal operating temperature.

1. Turn the throttle trim on the transmitter so that the brakes are applied. This ensures that the throttle slide is resting against the idle adjustment screw.

2. If necessary, remove the air filter to gain access to the idle adjustment screw.
3. Turn the screw counterclockwise to reduce the idle speed, or clockwise to increase it. The idle speed should be set as low as possible while still maintaining reliable running characteristics.
4. Reset the throttle trim on the transmitter

Fine-Tuning the Carburetor


After fine-tuning your TRX 2.5 racing engine at the end of the break-in procedure, no major adjustments to the fuel mixture are usually necessary. Make note of the temperature, humidity, and barometric pressure at the time you finished fine tuning your carburetor. Current weather conditions can be found online from national websites, local TV news websites, and Television. This information will be considered your baseline setting. You may need to adjust your carburetor needles to compensate for changes in temperature and barometric pressure (air density) from day to day. Generally, you'll need to richen the fuel mixture when the weather is colder than your baseline temperature and the air density is higher. Lean the fuel mixture when weather is warmer than your baseline temperature and the air density is lower. The chart below provides general guidelines on how weather conditions affect air density when they move higher or lower than your baseline setting (see page 28 for detailed info on how air density affects mixture settings).

If the...	is..	then the air density is...	adjust (correct) the fuel mixture to be...
Humidity	Lower	Slightly more dense	Slightly richer
	Higher	Slightly less dense	Slightly leaner
Pressure (barometer)	Lower	Less dense	Leaner
	Higher	More dense	Richer
Temperature	Lower	More dense	Richer
	Higher	Less dense	Leaner
Altitude	Lower	More dense	Richer
	Higher	Less dense	Leaner
Nitro %	Lower		Leaner
	Higher		Richer

Tuning The Engine By Temperature

The following procedures require an optional infrared temperature probe or on-board temperature gauge (Traxxas on-board digital temperature gauge, part#4090).


Engine temperature can be used as an effective tuning aid when you understand the relationship between engine temperature and ambient temperature.

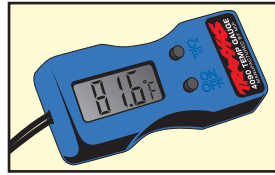

The engine operating temperature, when tuned for maximum performance, will vary according to atmospheric conditions. The atmospheric condition that has the most influence on engine temperature is air temperature. Expect the engine temperature to vary almost in direct proportion to atmospheric temperature. Assuming you tuned the engine for the same maximum performance each day, the engine will run about twenty degrees hotter when it's ninety degrees outside than it would in seventy-degree weather. For this reason, we cannot give you a definitive temperature range that indicates the best possible engine tuning.


The temperature gauge can aid you in tuning by giving you a relative indication of how your adjustments are affecting the engine and by preventing you from exceeding maximum engine temperature. For example, as you lean the fuel mixture, the engine performance will increase along with the temperature. If you continue to lean the fuel mixture and the temperature increases but the engine performance does not change, then you have exceeded the maximum safe lean setting.

Even if it's 100°F outside, you should be able to tune for maximum performance. Try to keep your engine from exceeding 270°F when measured at the glow plug. If tuning for maximum performance results in engine temperature exceeding 270°F, try to increase airflow to the engine by cutting out the rear of the body, windshield, and front valance. If the engine temperature still cannot be kept below 270°F, richen the high-speed needle slightly.

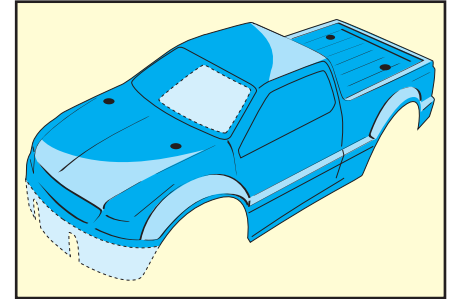

Introduction

Your TRX 2.5 racing engine is broken in, the fuel mixture is balanced, and the idle is set...now it's time to have some fun! This section contains instructions on driving and making adjustments to your SportMaxx. Before you go on, here are some important precautions to keep in mind.

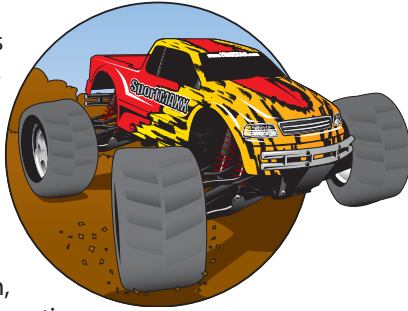

Driving Tips

- ▶ Monster trucks by design have a high center of gravity that requires a different driving technique. To prevent rollovers, slow down as you approach turns and then apply strong throttle through the turns. This technique will help the SportMaxx grab the surface and turn sharper.
- ▶ Do not apply brakes and turn the wheel at the same time. You could tip the truck over.
- ▶ When jumping, apply some throttle while the SportMaxx is in the air to keep the truck's nose up and land level on all 4 wheels. Be careful not to over-rev the engine or land at full throttle. Either could seriously damage your SportMaxx. If the nose of the truck is too high, then quickly tap the brake to level the truck in the air..
- ▶ Drive over large obstacles (such as curbs and rocks) at an angle, instead of head on. This will allow the suspension to articulate and absorb the impact much easier.

- ▶ **Don't run your SportMaxx in water, mud, snow, or wet grass.** It's tempting, but water and mud are easily drawn through the air filter and will severely damage the engine. Small amounts of moisture can cause electronics to fail and loss of control over your SportMaxx.
- ▶ The TRX 2.5 is extremely powerful. Remember to apply the throttle gradually to prevent wheelies or loss of control.
- ▶ Don't hold the SportMaxx off the ground and rev the engine excessively with no load on the engine. This practice could result in internal engine damage. Avoid over-revving the engine when the SportMaxx is airborne after a jump.
- ▶ Avoid excessive high-speed running for extended periods of time or over long distances. This could cause the engine to build up enough speed to exceed maximum safe RPM limits.
- ▶ Don't drive your SportMaxx with drive train damage of any kind. The engine could be damaged due to overloads on the engine caused by drivetrain friction, or over-revving caused by loose or missing parts.
- ▶ Don't tow anything with your SportMaxx. The engine is cooled by airflow created by speed. Towing creates a high load on the engine, and at the same time limits cooling of the engine due to low vehicle speed.
- ▶ If your SportMaxx gets stuck, stop driving immediately. Move the vehicle and then continue driving.

Adjusting Your SportMaxx



Factory toe-in settings can be achieved by

installing the rod ends on the turnbuckles until they bottom out against the shoulder. If you desire more toe-out, the tips of the rod ends must be trimmed to allow them to screw down further onto the turnbuckle threads.

Once you become familiar with driving your SportMaxx, you might need to make adjustments for better driving performance.


Adjusting the Slipper Clutch

The SportMaxx features an adjustable slipper clutch on the spur gear to help protect the drive train from sudden shock loads (such as landing off of jumps with the engine at full throttle). Under normal conditions the slipper clutch should not slip. Before adjusting the slipper clutch, turn the model off. Do not adjust the slipper clutch while the engine is running.

Use the supplied glow plug (universal) wrench to tighten the slipper nut (clockwise) until it stops, and then back the nut out 1/4 of a turn. If you notice any decrease in performance after making changes to the slipper clutch adjustment, then it may be too loose. The slipper must not be allowed to slip during normal acceleration or the slipper could be damaged.

Adjusting the Toe-in


Your SportMaxx comes from the factory with zero degrees of toe-in in the front, and one degree of toe-in in the rear. You can adjust the toe-in on the front and rear of the truck. Set the steering trim on your transmitter to neutral. Now, adjust your steering

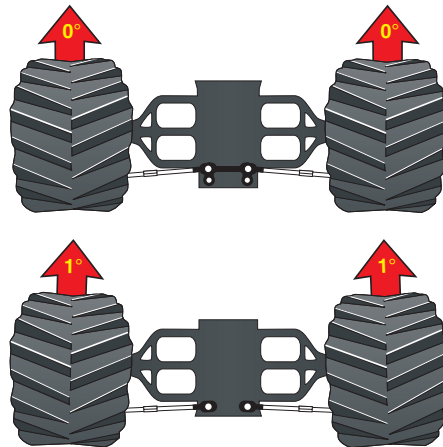


turnbuckles so that both front wheels are pointing straight ahead and are parallel to each other (0 degrees toe-in). This will ensure the same amount of steering in both directions. Adjust the rear toe control links so that the rear wheels have 1° of toe-in.

Adjusting the Camber

Two pivot balls are accessible through the spokes of each of the wheels on your SportMaxx. From the factory, the pivot balls are completely tightened into the suspension arms, which give each of the wheels -1° of camber. Unscrewing the bottom camber pivot ball with a 2.5mm hex wrench will increase the wheel's negative camber.

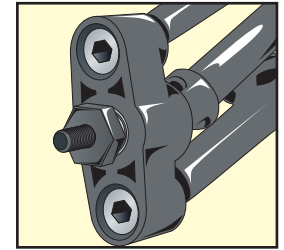

You should not adjust the top pivot ball; unscrewing it will increase positive camber and will also change the wheel's toe-in.

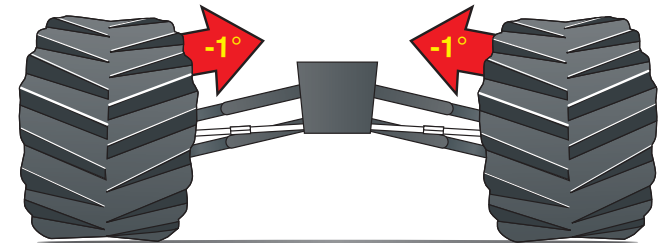

Adjusting the suspension


The SportMaxx has adjustable suspension so that it may be optimized for different kinds of terrain and driving styles.

Fine Tuning the Shocks

The eight shocks (oil dampers) on your SportMaxx have tremendous influence on its handling. Whenever you rebuild your shocks, or make any changes to the pistons, springs or oil, always do it carefully and in sets (front or rear). Piston head selection depends on the range of oil viscosities that you have available. For example, using a two-hole piston with lightweight oil will give you the same damping as a three-hole piston with heavier oil. We recommend using two-hole pistons with a range of oil viscosities from 10W to 40W (available from your hobby shop). The thinner viscosity oils (30W or less) flow with less resistance and provide less damping, while thicker oils provide


more dampening. Use only 100% pure silicone shock oil to prolong seal life. From the factory, the SportMaxx uses 30W oil.

The ride height for the SportMaxx can be adjusted by adding or removing the clip-on spring pre-load spacers. Note that changes in ride height will occur when changes in shock angle or spring rates are made. You can compensate for ride height changes by changing the pre-load spacers on the shocks

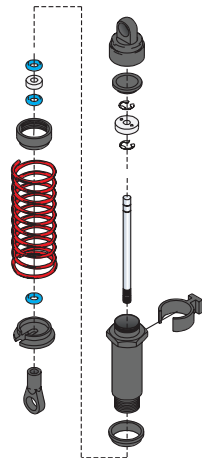

Caster Adjustment

The SportMaxx offers the ability to adjust the caster angle of the front suspension. Caster adjustment may be used to influence the understeer/oversteer handling characteristics of the SportMaxx. Increasing the caster angle will increase the tendency of the truck to oversteer (less traction on the rear tires, more traction on the front tires), while decreasing the caster angle will cause the truck to have a tendency to understeer (push in the turns). This effect becomes more pronounced at higher steering angles and higher spring rates. Caster is adjusted by repositioning the shims on the pivot point of the upper suspension arms.

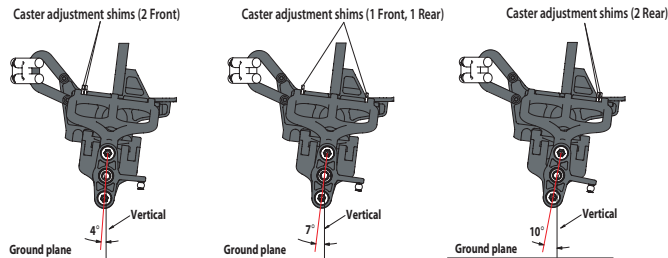


The stock caster setting is 7-degrees with one shim at each end of the arm. Reduce the caster angle to 4-degrees by removing

the rear shim and inserting it next to the front shim. The caster angle can be increased to 10-degrees by removing the front shim and inserting it next to the rear shim.

Shock Mounting Positions

Big bumps and rough terrain require a softer suspension with the maximum possible suspension travel and ride height. Racing on a prepared track or on-road use requires a lower ride height and firmer, more progressive suspension settings. The more progressive suspension settings help reduce body roll (increased roll stiffness), dive during braking, and squat during acceleration.

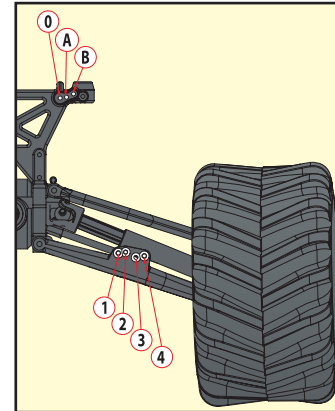

Upper shock mounting position (A) should generally be used with lower shock mounting positions 1 and 2. Upper shock mounting position (B) should be generally be used with lower shock mounting positions 3 and 4. The innermost upper shock mounting position (0) can be used for tuning with the inner pair of lower shock mounting positions on the arm (1,2). It is not compatible with lower shock mounting positions 3 and 4. Other combinations may be used to achieve individualized suspension settings.

Lower Shock Mounting Positions

In the out-of-the-box configuration, the shocks are installed in position (A) on the shock tower and position (2) on the lower suspension arm. This setting allows for moderate suspension travel and ride height. The more vertical position of the shocks allows for lower shock progression and the soft, plush feel that's characteristic of a Traxxas Maxx Truck.



For easier access to the rear-most shock mounting screw, remove the one end of the rear turnbuckle. In the front, remove the suspension pin from the lower front suspension arm to gain easier access to the lower shock mounting screws.

The outer pair of holes on the lower suspension arm should be used to lower the ride height of the SportMaxx, and increase the spring force (at the wheel). This setting will improve high-speed cornering on smoother terrain by lowering the center of gravity and providing a firmer suspension feel. Body roll, brake dive, and squat will be reduced.

Spring rate (at the wheel) increases as the lower shock mounting position is moved from position (1) to position (4). This is equivalent to using stiffer springs. Use higher spring rate settings for flatter terrain with smaller and fewer bumps, and lower spring rate settings for bigger bumps.

Ride height decreases as the lower shock mounting position is moved from position (1) to position (4). Each pair of lower shock mounting holes (1,2 and 3,4) has equal ride height. Use lower ride height for high-speed cornering and flat terrain, and when

racing on relatively smooth tracks. Increase the ride height for rougher terrain and tracks.


Upper Shock Mounting Positions

The upper shock mounting positions will have suspension effects opposite from the lower shock mounting positions.

Spring rate (at the wheel), increases as the upper shock mounting position is moved from position (A) to position (B).

Ride height is not affected by changes in the upper shock mounting position.

Use the chart below to see the effect of the various shock mounting positions. The horizontal length of the lines indicates the amount of suspension travel. The angle or slope of the lines indicates the spring rate (at the wheel).

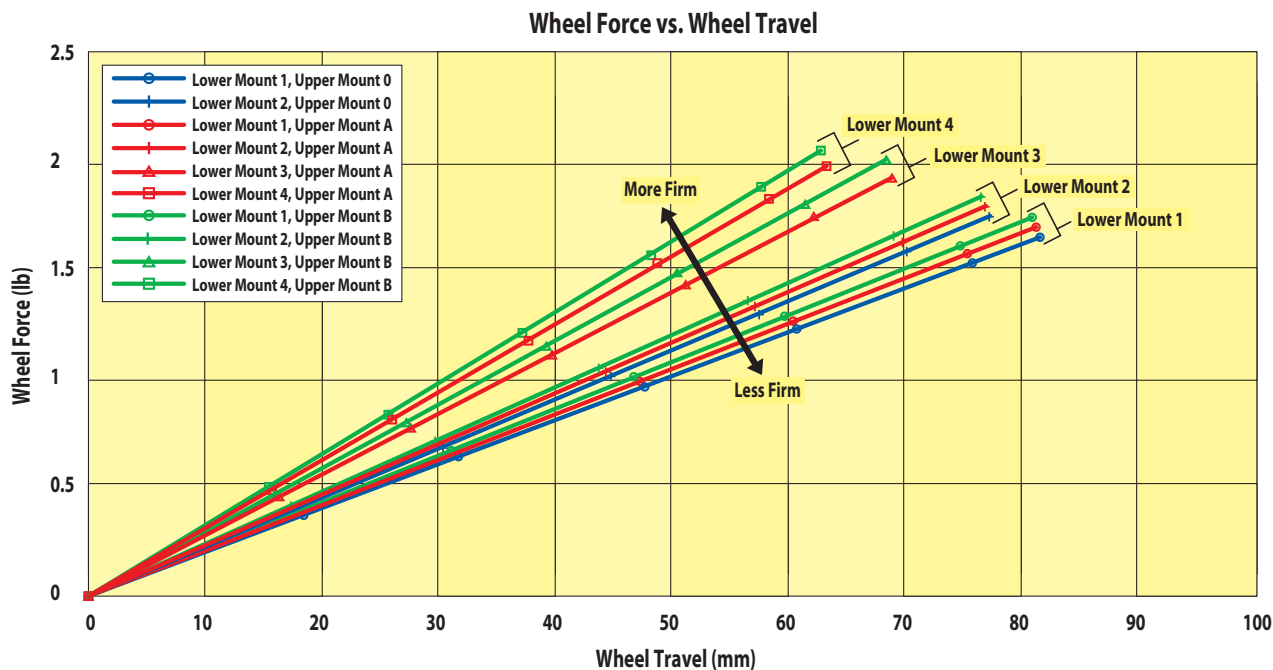

Troubleshooting Your SportMaxx

The following section addresses some very basic engine and radio questions you may have about your SportMaxx. Most questions arise from simple user errors or minor adjustments that are easy to correct. If you can't find a solution for your SportMaxx here, then visit our Web site at www.Traxxas.com and click on the Customer Support menu. There you will find a much more extensive and detailed online troubleshooting area. In addition, you may call Traxxas Customer Service at 1-888-TRAXXAS (outside the US call 972-265-8000).

Radio system does not work properly:

- ▶ If the power light on the transmitter does not come on, check for proper battery installation and that the batteries are new and/or fully charged. If the power light is blinking, then the transmitter batteries are weak and should be replaced. See page 13 for more details.
- ▶ If the transmitter light is on but the radio is still not responding, check for proper installation of the receiver batteries and that the batteries are new and/or fully charged. Check to make sure the on/off switch on the model is in the on position. Finally, if there is still no response check the red and black wires that connect the battery pack to the "batt" terminal on the receiver (you will have to remove the receiver cover). Make sure the wires are not pinched or damaged and that the plug is secure in the receiver. See page 14 for more details.

Short radio range:

- ▶ If the radio range appears short, then first check to make sure the transmitter antenna is fully extended and that the antenna in the SportMaxx is in place and has not been cut or damaged. Next, make sure the batteries are all fully charged. Finally, if you are still experiencing short range, try a different location. Sometimes there can be interference from various sources that can cause your radio to malfunction.

Engine will not spin (EZ-Start will not turn the engine):

- ▶ If neither LED on the controller lights, the EZ-Start battery could be discharged or improperly connected. Inspect and recharge if necessary.

- ▶ If the glow plug LED lights and the motor LED does not, then the EZ-Start controller is in protection mode. Allow the controller to cool for at least three minutes. The circuitry should automatically reset.
- ▶ Check to make sure the wires are connected to the EZ-Start motor in the SportMaxx. The red wire should connect to the positive motor terminal, indicated by a red dot next to the terminal.
- ▶ The engine could be flooded. If too much fuel accumulates in the combustion chamber at start up, the engine will hydraulically lock. Follow the procedure on page 43 for clearing a flooded engine.
- ▶ Check for binding at the engine flywheel. If you are not able to turn the engine by hand, the engine could be flooded, there could be binding in the clutch system, or there could be internal engine damage. (Note: It is normal for the engine to be extremely tight and hard to turn when the piston reaches the top of the compression stroke.)

Engine extremely sluggish, hard to start, and will not idle during tank 1 of the break in:

- ▶ It is possible that the factory adjusted break-in settings on your carburetor are too rich for your geographic location, atmospheric conditions, or fuel brand. Extremes in temperature, humidity, barometric pressure, and altitude can't always be accounted for with a single high-speed needle setting. The symptoms described above can occur when the air density is very low such as in high mountainous elevations, and extremely cold temperatures. Under these conditions, lean the fuel mixture slightly, 1/8 turn, to see if there is any improvement in starting and idling. Only lean the fuel mixture just until the engine will run and idle reliably and then proceed with the break in.
- ▶ The contents of different brands of fuel (other than Traxxas Top Fuel) in combination with extreme atmospheric conditions can also make the factory preset break-in settings too rich and cause the symptoms described above. Again, try leaning the fuel mixture slightly, 1/8 turn, to see if there is any improvement in starting and idling.

Engine spins but will not start:

- ▶ If the engine is spinning but will not start, first check to make sure that both the motor and glow plug LEDs on the EZ-Start controller light when the button is depressed. If the glow plug LED does not light, make sure the blue glow plug wire is tightly connected and is not damaged in any way. If the wire is good, then replace the glow plug. It is normal for glow plugs to require periodic replacement. Only use Traxxas heavy-duty long glow plugs (part #3231).
- ▶ Check to make sure the fuel is getting to the carburetor. Remove the fuel line where it connects to the carburetor to see if there is fuel in it. If not, you may need to prime the engine. Reconnect the fuel line and then refer to page 32 for instructions on priming the engine.
- ▶ Check your fuel mixture settings. It may be necessary to adjust the fuel mixture if the outside temperature or barometric pressure has changed significantly since the last time the engine was run (see *Fine Tuning the Carburetor* on page 36). Turn the high-speed needle out (rich/counterclockwise) 1/4 turn, hold the throttle trigger at about 1/2 throttle and try again to start the engine. Once started, retune the engine for performance (see page 35).
- ▶ The engine could be worn. If the fit between the piston and sleeve is loose, compression is reduced and the engine will be difficult to start when it is warm, and may tend to stall when running and when the throttle is closed suddenly to idle. Engine life depends on many factors including fuel type, air filter maintenance, needle settings, and how the engine was used. For example, if the engine was allowed to ingest dirt from lack of air filter maintenance or running through water, then the internal engine components could wear out extremely fast.

Engine performance sluggish:

- ▶ Engine performance depends mostly on the fuel mixture settings and how they compensate for the current atmospheric conditions. Before you suspect other failures with the engine, richen the high-speed needle at least 1/4 turn and then retune the engine for performance (see page 35).

- ▶ If the fuel mixture seems to be set correctly, make sure the fuel is fresh. If the fuel is old, or was left uncapped for a long period, then some of the important fuel components could have evaporated. Try new, fresh, Traxxas Top Fuel
- ▶ Try a new Traxxas 3231 glow plug. Sometimes a glow plug will work well enough to start the engine but not be able to deliver the engine's full performance potential.
- ▶ Check to make sure there is no binding in the driveline that would cause excessive loads on the engine.

Clearing a Flooded Engine:

If the engine is primed for too long during startup, then it can become flooded with fuel. When the engine is flooded it will no longer turn due to excess fuel in the combustion chamber preventing upward movement of the piston. Use the following procedure to clear a flooded engine.

1. Remove the blue glow plug wire.
2. Remove the glow plug and gasket with the glow plug wrench supplied with your model. A 5/16 nut driver will also work.
3. Turn the model upside down and plug in the EZ-Start controller.
4. Push the EZ-Start button for several seconds to clear the engine of excess fuel
5. Turn the model over and reinstall the glow plug and gasket.
6. Reconnect the blue glow plug wire to the glow plug.
7. Reconnect the EZ-Start controller
8. Do not prime the engine. Pull the throttle to 1/2 throttle and push the EZ-Start button. The engine should start immediately.

Maintaining and Storing Your SportMaxx

Your SportMaxx requires timely maintenance in order to stay in top running condition. **Neglecting the maintenance could allow dirt, deposits, and moisture to build up inside the engine leading to internal engine failure.** The following procedures should be taken very seriously.

After each hour of running:


- ▶ Clean and re-oil the air filter. The instructions for this procedure are on page 27. **We cannot stress enough the value of cleaning your air filter at the scheduled intervals. Do not neglect your air filter maintenance!**
- ▶ Clean the outside of the engine of accumulated dirt, oil, and grime. Accumulated grime will decrease the engine's ability to cool itself.

After each running session:


- ▶ Perform after-run maintenance on the engine. This clears the engine of destructive moisture and other corrosive deposits. **This is extremely important for the life of the engine. See page 45 for after-run maintenance procedures.**
- ▶ Inspect the vehicle for obvious damage or wear. Look for:
 1. Loose or missing screws
 2. Cracked, bent, or damaged parts
 3. Cut or loose wiring
 4. Cut or kinked fuel lines
 5. Signs of fuel leakage
- ▶ Inspect the gears for wear, broken teeth, or debris lodged between the teeth.

Other periodic maintenance:


- ▶ **Slipper clutch pegs** (friction material): The slipper clutch pegs will wear over time and require replacement. The life of the pegs depends on how the slipper clutch was adjusted and how the SportMaxx was used. If the slipper will not tighten or you are seeing signs of wear on the face of the gear, then the pegs should be replaced.

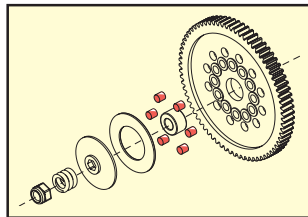


- ▶ **Piston/sleeve:** The life of the piston and sleeve will vary greatly with how the engine was used and maintained. The piston and sleeve should be replaced when they no longer seal effectively (loss of compression). Symptoms include the engine being difficult to start when warm, stalling when warm, and stalling when throttle is suddenly closed to idle. Replace the wrist pin and G-clip whenever the piston and sleeve are replaced.

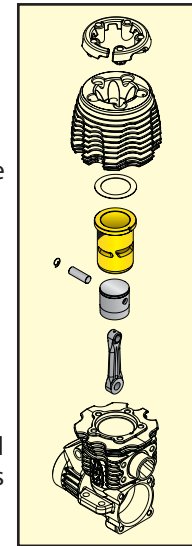

- ▶ **Connecting rod:** The connecting rod should be replaced when the piston and sleeve are replaced or after three gallons of fuel, whichever comes first. Also replace the piston wrist pin and G-clip whenever the connecting rod is replaced. As with other internal engine components, connecting rod life depends on engine's usage and the quality and frequency of the engine maintenance.
- ▶ **EZ-Start:** The cush drive elements in the EZ-Start drive unit should be inspected after 3-gallons of fuel. If the cush drive elements appear deformed or hardened they should be replaced. Inspect the EZ-Start gears for any signs of wear. Damaged gears should be replaced. Coat the gears with a thin layer of white lithium grease.

 If the engine is worn or damaged enough to require replacing the piston, sleeve, or connecting rod, consider exchanging your old engine for a brand new engine under the terms of the Traxxas Lifetime Engine Replacement Plan (ERP). It could save you time and effort. Details are in your model's documentation package.

 The TRX 2.5 is designed to be easy to rebuild. Critical engine components such as the crankcase, crankshaft, and engine bearings are made to extremely high quality standards and should under normal circumstances outlast multiple sets of pistons, sleeves, connecting rods, and wrist pins (reciprocating assemblies). It could be more economical for you to continue to use your good bearings and crankshafts, and simply replace the reciprocating assembly as needed. Engine assembly is not difficult and replacing the reciprocating assembly does not require any special tools or skills.



Denatured alcohol (available from home centers and paint supply stores) in a spray bottle is an extremely effective cleaner. Be sure to wear safety glasses and gloves when working with denatured alcohol.



Fun fact: WD-40™ stands for “water displacement attempt #40.” The WD-40™ product used today was the successful 40th attempt at creating a water-displacing lubricant. WD-40™ was the lab test label.



Be sure to follow proper maintenance and storage procedures to avoid damage to your engine and other components of your SportMaxx.



Don't put the fuel from your tank back into your fuel jug. Dispose of it properly, following city or county regulations.



Always wear eye protection when using compressed air or spray cleaners and lubricants.

After-run Procedure

You must perform after-run maintenance on your Traxxas engine whenever the model will be stored for longer than a few hours. Taking the time to prepare your engine for storage will reward you with longer engine life, easier starting, and better performance.

When a nitro engine is shut off, some excess unburned fuel remains in the engine. The methanol in model engine fuel is hygroscopic, which means it easily attracts and absorbs moisture. This moisture can cause rust and corrosion on the steel engine parts (crankshaft, bearings, wrist pin and starter shaft) if the fuel is not removed from the engine. There are after run oil products available from your hobby dealer or you can use WD-40™, a common household lubricant. To ensure your TRX 2.5 racing engine is protected from internal corrosion, use the following procedure:

1. Whenever possible, shut off the engine by pinching the fuel line closed. This allows most of the excess fuel to be consumed by the engine. Be sure the throttle is in the idle position. You may have to pinch the fuel line closed for several seconds before the engine stops.
2. Completely empty the fuel tank. Use your fuel-dispensing bottle to suck out the old fuel. Do not mix the old fuel with your fresh fuel supply. If you leave fuel in the tank, transporting or handling your SportMaxx may cause fuel to run into the engine.
3. With the fuel tank empty and the throttle at the idle position, try to start the engine. The engine will most likely start and run for a few seconds as it uses up any fuel remaining in the engine and fuel lines.
4. Once the engine stops, clean the outside of the engine with compressed air or spray motor cleaner. Once the engine is clean and dry, remove the glow plug power wire, glow plug, and air filter.
5. Open the throttle fully and spray a one-second burst of WD-40 into the carburetor and into the glow plug hole (Caution! Wear safety glasses to prevent spray from getting into your eyes).
6. Place a rag or paper towel over the engine to catch any WD-40 that may come out the carburetor or glow plug hole.
7. Connect the EZ-Start controller to the model and spin the engine for 10 seconds.
8. Remove the rag or paper towel and repeat steps 5–7 two more times.
9. Clean and re-oil the air filter so it will be ready for use next time. See page 27 for air filter maintenance instructions.
10. Replace the glow plug, reconnect the glow plug power wire, and reinstall the air filter.

- ABC 23
- After-run maintenance 21, 43, 44
- After-run procedure 44
- Air density 28, 35
- Air Filter 7, 22, 23, 27, 35, 43, 44
 - Cleaning 21, 27
 - foam 23
 - maintenance 42
 - oil 6
- Air Intake 22
- Air temperature 36, 42
- Air/fuel mixture 28
- Air/fuel ratio 28, 29, 32
- Airflow 36
- Ambient temperature 36
- Antenna (receiver) 11, 15, 41
 - tip 15
 - tube 15
 - wire 15
- Antenna (transmitter) 11, 15, 41
- Antenna Mount 7
- Atmospheric conditions 28, 36, 42
- Axle pins 9
- Barometric pressure 35, 42
- Baseline setting 35
- Batteries 6, 12, 13, 14, 41
 - charging 30
 - receiver 13, 14
 - rechargeable 13, 14
 - transmitter 13
- Batteries, Ni-MH (nickel-metal hydride) 13
- Batteries, NiCad (nickel-cadmium) 6, 12, 13, 30
- Battery box 7
- Battery compartment (Transmitter) 11, 13
- Battery holder 11, 14
- Bearings 44
- Big Block .15 23
- Binding 42
- Body mount 7
- Brake 19
- Bulkhead 7
- Bumper 7
- Bumper mount 7
- CA glue 9
- Camber 38
- Carb, see also Carburetor 23
- Carburetor 22, 23, 28, 42
 - adjustments 28
 - barrel 23
 - fine-tuning 35
 - slide 25
 - venturi 28
- Caster 39
- Channel 11, 12, 17, 18
- Channel number 12
- Charger 6, 30
 - peak-detecting 30
 - timed 30
- Chassis 7
- Clean-out 23
- Cleaning 43
- Clearing your frequency 12
- Clutch bell 22
- Combustion 28
- Combustion chamber 23
- Compression 24, 42, 43
- Connecting rod 23, 43
- Cooling fins 23
- Crankcase 22, 23
- Crankshaft 22, 23, 44
- Cross-brace 7
- Crystal 12, 18
 - Access Plug 7
- Curbs 37
- Customer service 4, 41
- Cylinder sealing 32
- Decals 10
- Differential 7
- Drivetrain friction 37
- Driving Tips 37
- Dyno 23
- E-mail 4
- Engagement pawls 41
- Engine, TRX 2.5 7, 22, 26
 - "cutting out" 34
 - break-in 21, 23, 32
 - driving procedure 33
 - cooling 36, 43
 - damage 27
 - detonation 34
 - failure 27, 43
 - flooding 31, 41, 42
 - hesitation 34
 - life 42, 43
 - maintenance 43
 - mount 22
 - overheating 34
 - performance 29
 - priming 25, 32, 42
 - revving 37
 - shut off 44
 - sluggish acceleration 34
 - stalling 25, 32, 34, 42, 43
 - temperature 34, 36
 - terms 23
 - tuning 28, 34
 - by temperature 36
- Exhaust 5, 22
- Exhaust fumes 32
- EZ-Start 6, 23, 24, 30, 41
 - "glow plug" LED 30, 31, 41
 - "motor" LED 30, 31, 41
 - battery 30, 41
 - controller 22, 31, 41, 42, 44
 - cush drive 30
 - drive unit 22
 - motor 7, 22, 31, 41
 - plug 7, 22
 - Protection Mode 31, 41
 - Smart Start™ 30, 31
- Fit 23
- Flag color 12
- Flame-out 24
- Flooding, see Engine; flooding
- Flywheel 22, 41
- Frequency band 12, 15
- Fuel 5, 6, 24, 26, 42, 44
 - break-in fuel 32
 - fuel dispensing bottle 6, 26
 - Traxxas Top Fueler 26
 - Traxxas Top Fuel 24, 26, 42
 - unburned 44
- Fuel flow 28
- Fuel intake 22
- Fuel line (fuel tubing) 7, 22, 24, 42
- Fuel mixture adjustment 35
 - high-speed fuel mixture 34
 - low-speed mixture 35
- Fuel mixture, see also air/fuel mixture 24, 34, 35, 42
- Fuel tank 7, 22, 26, 44
 - emptying 44
 - filling 26
 - fuel level 32
 - tank lid 7, 26
 - tank seal 26
- Glow plug 24, 30, 31, 32, 34, 41-42
 - driver 24
 - fouled 32
 - igniter 30
 - power wire 22, 42, 44
- Ground wire 22
- Half shaft 7
- Head (cylinder head) 22, 23
- Head Protector 22
- Header 7, 24
- Hex hubs 9
- Humidity 35
- Idle adjustment screw 35
- Idle speed 17, 24, 29, 32, 33, 34, 35
- Idle Speed Adjustment 29, 33, 35
- Idle Speed Screw 22, 24, 29
- Jumping 37
- Lean 24, 29
 - leaning the mixture 24
 - maximum safe lean setting 34-35, 36
- Lubrication 29
- Maintenance 43

- Maintenance schedule 21
- Methanol 44
- Mixture needles 34
 - high-speed needle* 22, 24, 28, 35, 42
 - low-speed needle* 22, 24, 28, 35
- Moisture 43, 44
- Needle seat 28
- Needle settings 42
- Needle valve 24
- Negative wire 22
- Neutral (center) point 16-17
- Neutral position 12
- Nitro 24
 - content* 24, 26
 - percentage* 26
 - compensating for* 35
- Nitromethane, *see also* Nitro 24
- O-ring 24
- Oil 6
 - after-run* 6, 44
 - filter* 6
 - WD-40™* 6, 44
- Oil Dampers, *see* Shocks
- On/Off switch 7, 11, 14, 18, 41
- Over revving 37
- Peak detection, *see* Charger
- Pinch test 35
- Pipe (tuned) 7, 22, 24, 25
- Pipe hanger 7
- Piston 24, 32
 - wrist pin* 43, 44
- Piston and Sleeve 42, 43
- Pivot balls 38
- Port 24
- Positive Wire 22
- Power Switch 11
- Pressure Line 7, 22
- Priming, *see* Engine; *priming*
- ProGraphix 10
- Punch 25
- Quick Start 8, 9, 10, 13, 14, 15, 18, 19, 20, 26, 30, 31, 32, 34, 37, 43
- Radio interference 5, 20
- Radio System 11, 12, 19, 41
 - adjustments* 16
 - controls* 16
 - range-testing* 20
 - rules* 18
 - terminology* 12
 - terms* 12
- Range 14, 15, 18, 20, 41
 - short* 41
- Receiver 11, 12, 41
 - cover (box)* 7, 15, 41
- Required equipment 6
- Rich 25, 29
- Ride height 39, 40
- Rollovers 37
- RPM 25
 - limits* 37
- Safety 5
- Servo reversing switches 11, 16
- Servos 7, 11, 12
 - reversing* 11, 17
 - steering* 7, 11, 17, 19
 - throttle/brake* 7, 11, 16-17, 19
- Shipping 4
- Shock Mounting Positions 39, 40
 - Lower* 39
 - Upper* 40
- Shock progression 39
- Shock Tower 7
- Shocks 7, 38
 - Fine Tuning* 38
- Shuddering 41
- Skid Plate 7
- Sleeve 25, 32
- Slipper Clutch 7, 38, 43
 - adjusting* 38
 - pegs* 43
- Smoke 34
- Spring rate 40
- Spur Gear 7
- Stalling, *see* Engine; *stalling*
- Starter shaft 44
- Starting, *see* Engine; *starting*
- Steering mechanism 19
- Steering Trim, Electronic 11, 12, 17, 19
- Steering Wheel 11, 19
- Storage 44
- Supplies 6
- Support 4, 41
- Suspension
 - adjusting* 39, 40
- Suspension Arms 7
 - Tank 1 33
 - Tank 2 33
 - Tank 3 33
 - Tank 4 33
 - Tank 5 33
 - Tank 6 33
- Temperature, *see* Engine; *temperature*
- Temperature gauge 36
 - digital temperature gauge* 36
 - infrared temperature probe* 36
- Throttle Arm 22
- Throttle Neutral Adjustment 11, 16
- Throttle response 35
- Throttle slide 35
- Throttle Trigger 11, 16, 19
- Throttle Trim, Electronic 11, 12, 16, 19, 35
- Toe-in 38
- Tools 6
- TQ-3, *see also* Radio System 11
- Transmission 7
- Transmitter 12, 18, 41
 - indicator light* 19
 - power indicator* 11, 13
- Traxxas Lifetime Engine Replacement Plan 43
- Trim, *see also* Throttle Trim and Steering Trim 12
- Troubleshooting 41
- Turnbuckle 7
- Turns 37, 39
- Understeer 39
- Water 42
- Wear-in 25
- Weather conditions 35
- Wheelies 34
- Wheels 9
- Wiring diagram 11
- WOT 25, 28
- X-tal *see also* Crystal 12
- Zero-scrub-radius 19

SPORT MAXX

Traxxas Corporation, 1100 Klein Road, Plano, Texas 75074, Phone: 972.613.3300, Toll-free 1-888-TRAXXAS
Traxxas U.K., P.O. Box 1128, Winterbourne, Bristol BS17-2SH, England, Phone: 44.117.956.1002
Internet: www.Traxxas.com, www.T-Maxx.com